



2753 Michigan Road · Madison, Indiana 47250
855-743-3427

INSTALLATION INSTRUCTIONS

Fang Light: LFL-CA-DEF

- Please look through and read these instructions BEFORE starting so you understand what processes you'll be doing, and possible extra tools you may need.
- Do Not discard product packaging until installation is complete and functioning properly.



1. The first thing you need to do is raise the **Hood** and remove the **Front Fenders** from both Left and Right sides. To do this, you will remove the **Plastic Push-Pins** and **Two (2) Torx Screws** from each fender. **Fig.1a** shows the fender section to remove, **Fig.1b** shows the **Two (2) Torx Screws** to remove from up underneath each side, and **Fig.1c** shows the **Fender Removed** and also one of the **Torx Screw Holes** viewed from the outside after removal to give you an indication where those are located at from up underneath. Repeat for opposite side and **Remove the Fenders**.

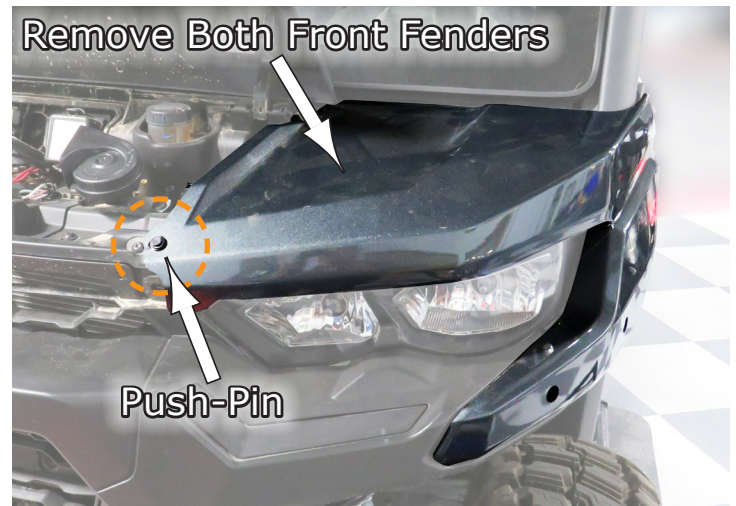


Fig.1a



Fig.1b



Fig.1c

2. Next, you need to remove the **Power Terminal Cover** up front on top as shown in **Fig.2a-b**, as you will be removing the Panel Underneath it next. See **Fig.2a-b**.

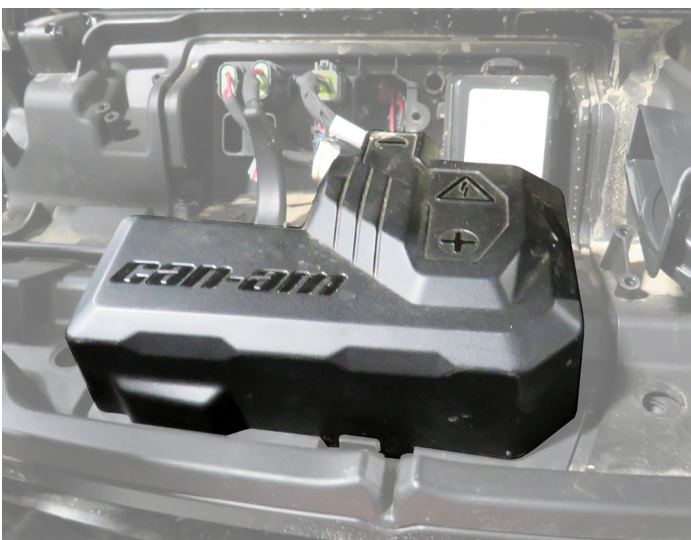


Fig.2a

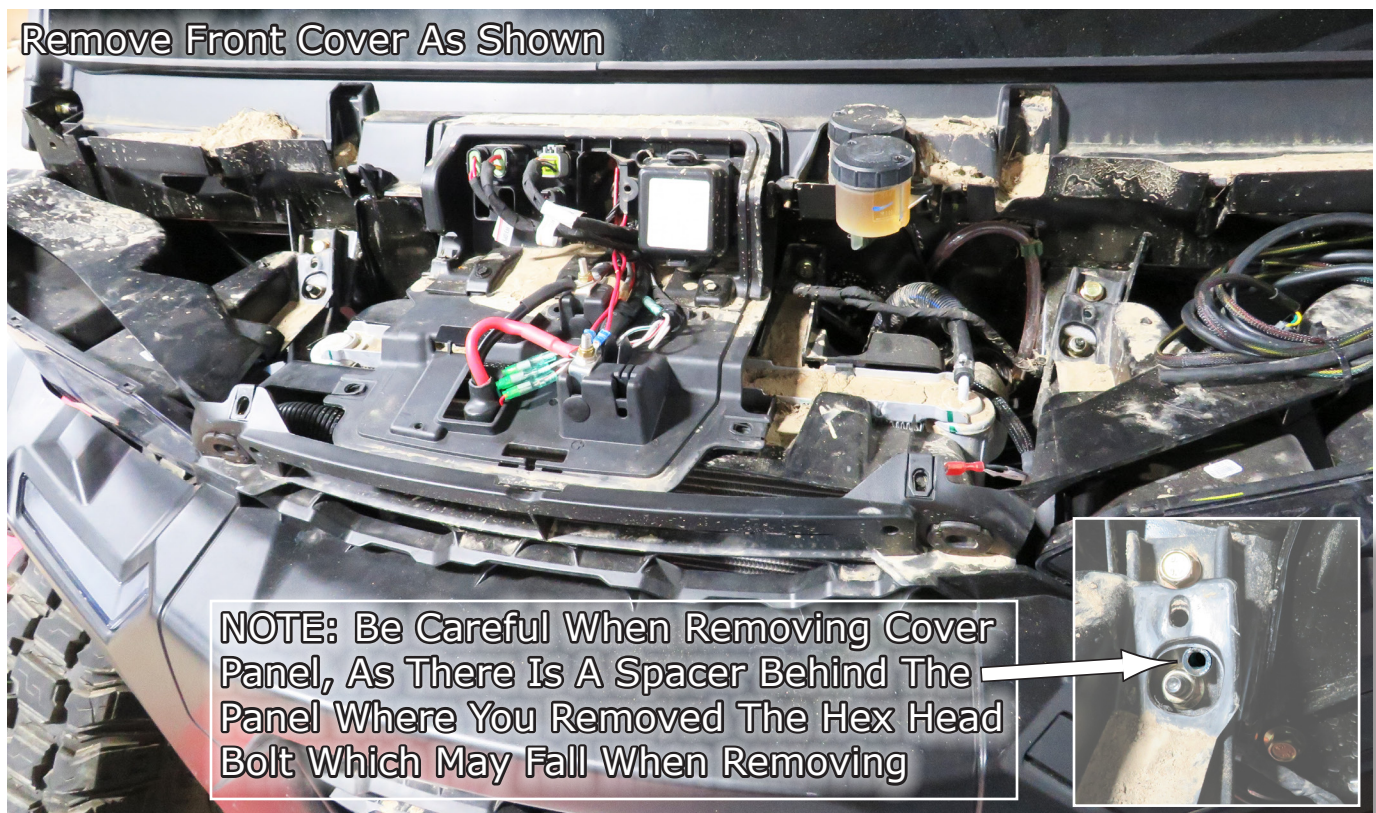


Fig.2b

3. Now you can remove the **Front Cover Panel** next. To do this you will remove some **Torx Screws** and **Hex Head Bolts** first. Towards the back down in a well area, you will remove the **Hex Head Bolt** as shown in **Fig.3a**, one (1) each side. Then up front, you will remove the Two (2) **Torx Screws** as shown in **Fig.3b**, Two (2) each side.



4. Then **Remove the Cover** from the vehicle as shown in **Fig.4**.



5. Next, you need to **Remove the Head Light Assembly** from the vehicle. To remove it, look up underneath behind the headlight as shown in **Fig.5a** and notice the **Thumb Screw** also shown in **Fig.5a**. Remove the **Thumb Screw** and **Spring** that will come out with it, shown in **Fig.5b-c**.



Fig.5a



Fig.5b



6. The next thing is to remove the **Headlight Screw & Washer** located behind the light as shown in **Fig.6a**. Then remove the **Cover Screw** from the location shown in **Fig.6b**. Repeat for opposite side. There is also a screw sort of hidden behind the light assembly that is a little hard to see that also needs to be removed.



Fig.5c



Fig.6a



Fig.6b

7. After all the screws are removed from the light assembly, now **Remove** the **Light** as shown in **Fig.7a-b**.



Fig.7a



Fig.7b

NOTE: When removing the light assembly, there are two (2) Bushings that may loosen and fall out if not careful, as you will need these for re-installation of you headlight. See **Fig.7c-d**.



Fig.7c

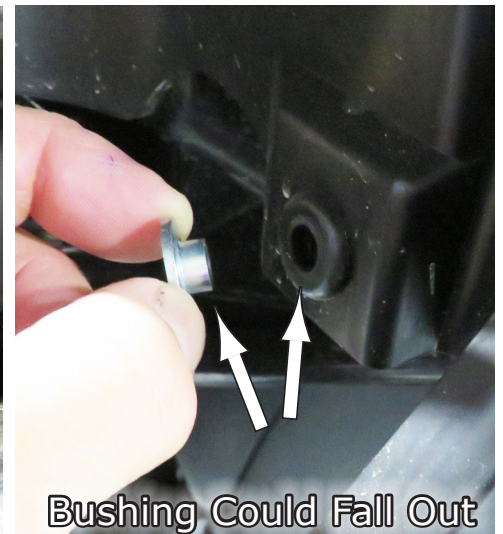


Fig.7c



Next, you can **Remove** the **Dummy Cover** where you will be installing your **New Fang Light** at. You will need to remove a few things to take it out in the next steps. See **Fig.7d**.

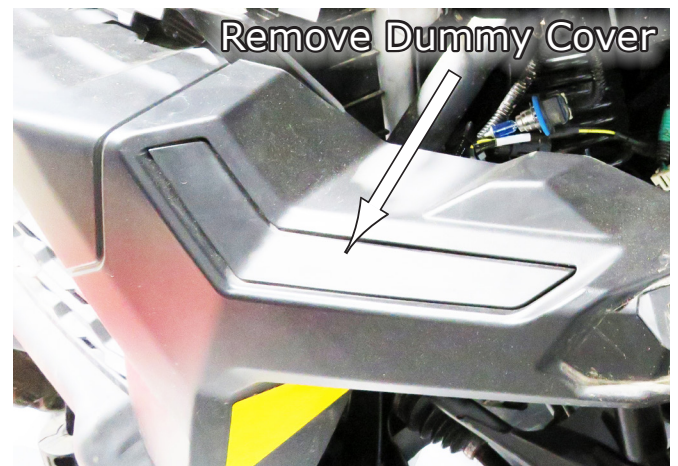


Fig.7d

8. To remove the **Dummy Cover**, you will need to **Remove** the **Screw** holding the tab onto the vehicle in the location shown in **Fig.8a**. It is on the inside or back side of the bumper and cover. Then **Unclip** the **Connector** from the edge of the cover as shown in **Fig.8b**, and set aside out of the way.



Fig.8a



Fig.8b



9. Once the **Screw** and **Connector** are removed, now just **Unclip** the **Retaining Clips**, also from the back side as shown in **Fig.9a**, and then **Remove** the **Cover** from the vehicle as shown in **Fig.9b**.



Fig.9a



Fig.9b

10. Now locate your **New Fang Light**. Notice there are two (2) sets of wires. The **Black/White Wire Connector** you will connect to the connector you previously unclipped from the side of the Dummy Cover in **Fig.8b** in the next steps. The **Red Wire** is for future turn signals if you decide to use them, *but is not required for this installation*. You can let it hang out of the way in the meantime. See **Fig.10a**. Then **install the New Fang Light** in place as shown in **Fig.10b**.



Fig.10a



Fig.10b



11. Next, reinstall the screws holding the light in from the back side and re-clip the clip tabs in place. Then connect the **Black/White wire Connector** from your **New Fang Light** to the small connector you unclipped previously in **Fig.8b** as shown in **Fig.11a**. The **Red/Blk Connector** is for turn signals if a signal kit has already been installed, as we show here, but is NOT necessary for this installation. Also see **Fig.11a**. Then try your new light and make sure it's working properly as shown in **Fig.11b**.

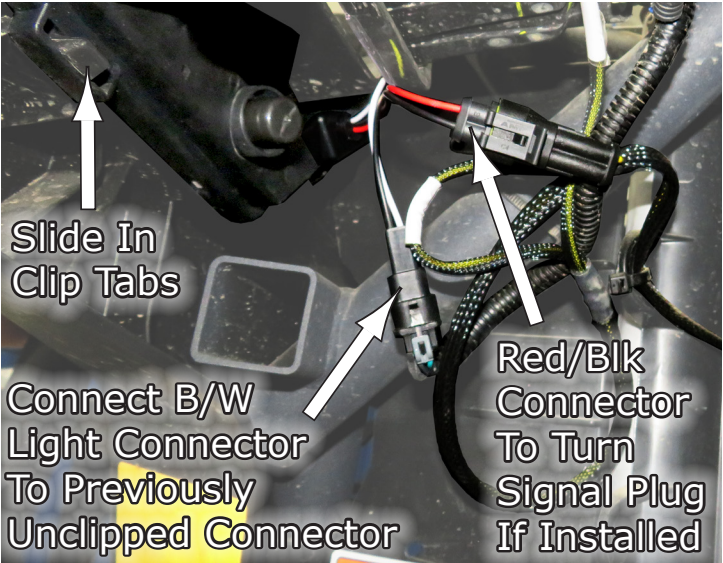


Fig.11a



Fig.11b

12:When reinstalling your factory headlight assembly, your kit comes with a longer screw and Spring for you to use when reinstalling it back into your vehicle. **Fig.12** shows the location of where the Screw and Spring go in the headlight assembly, and how they're used.



Fig.12

From this point forward, you just need to simply reverse the procedure of the instructions to reassemble the vehicle panels and components back to their original state.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

If you have any problems/questions on this kit, contact us by email at Superatv.com.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



Like SuperATV on Facebook to keep up to date on new products!