


INSTALLATION INSTRUCTIONS
7" - 10" Adjustable Lift Kit:
for Polaris RZR[®] XP 1000

A Press or Ball Joint tool is required to remove and install Ball Joints.

Item	Description	Qty
A	Upper A-Arm, Passenger	1
B	Upper A-Arm, Driver	1
C	Lower A-Arm, Passenger	1
D	Lower A-Arm, Driver	1
E	Brake Line Clamp	6
F	Brake Line Clip	16
H	Rear Spring Spacer	2

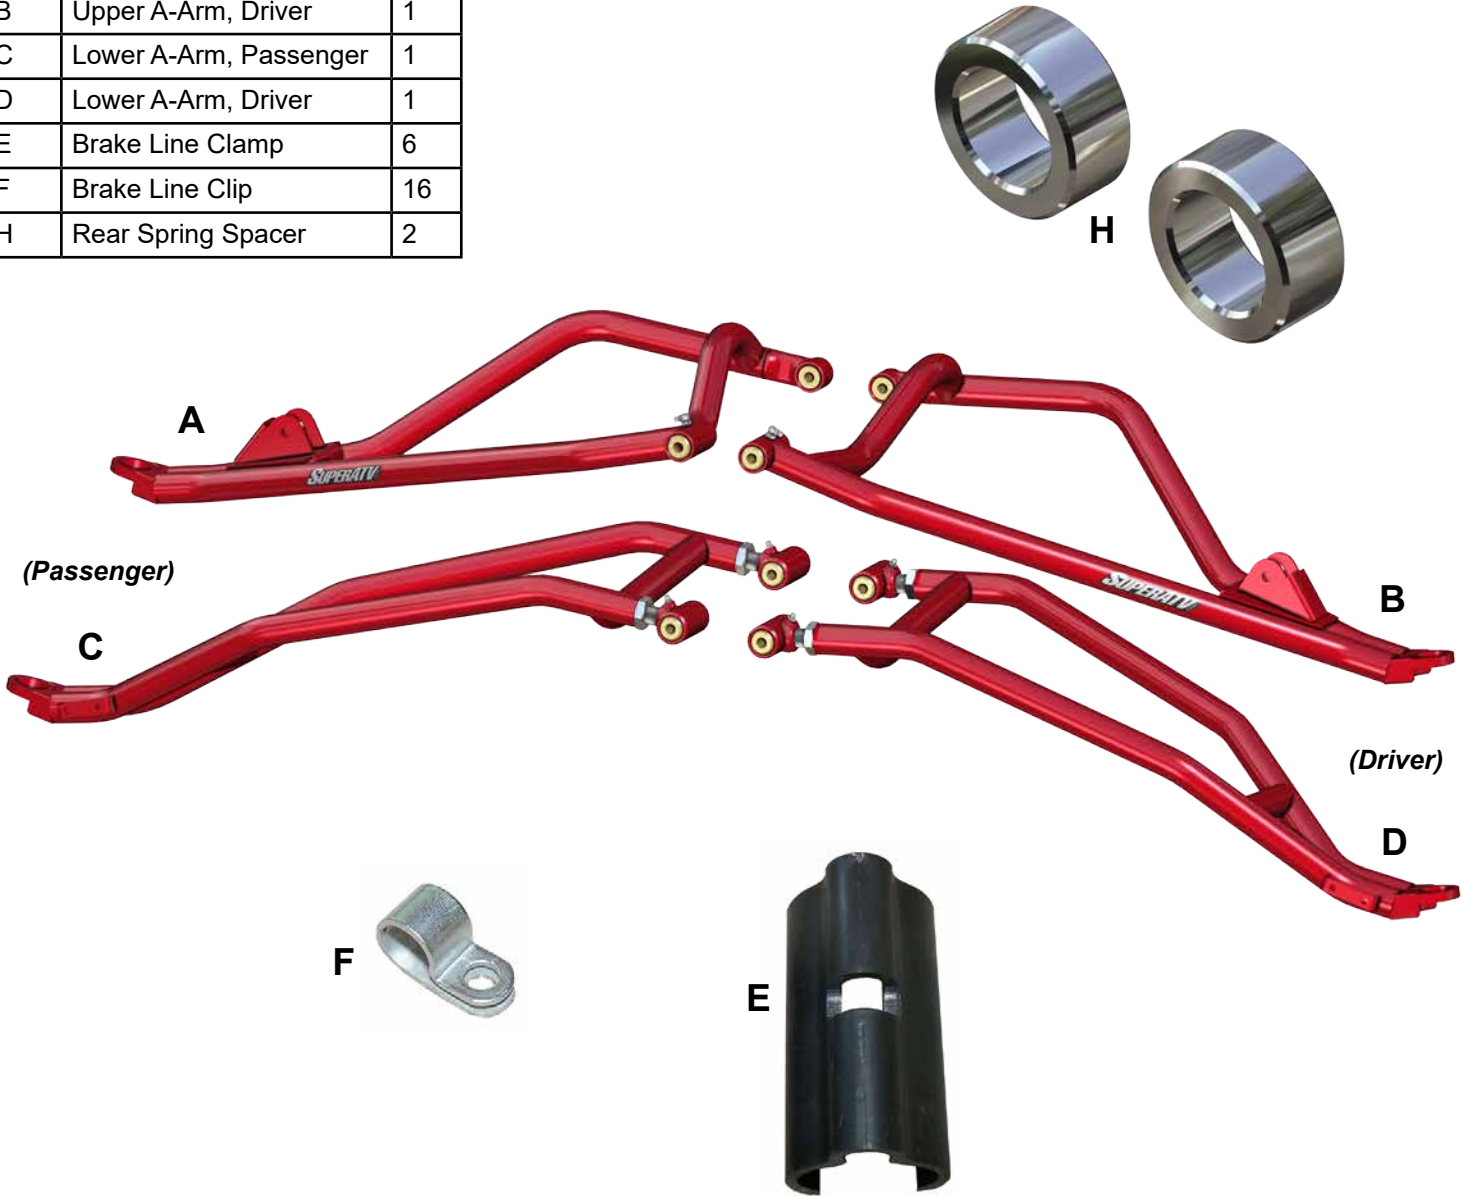

(Kit contents continue on following pages)

Need help with your installation?

 sales@superatv.com
  www.superatv.com


 1-855-743-3427
 
 8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You
For Choosing
SUPERATV.COM[®]

(Kit contents continued)

Item	Description
J	Front Lift Bracket
L*	Tie Rod Kit (See below)

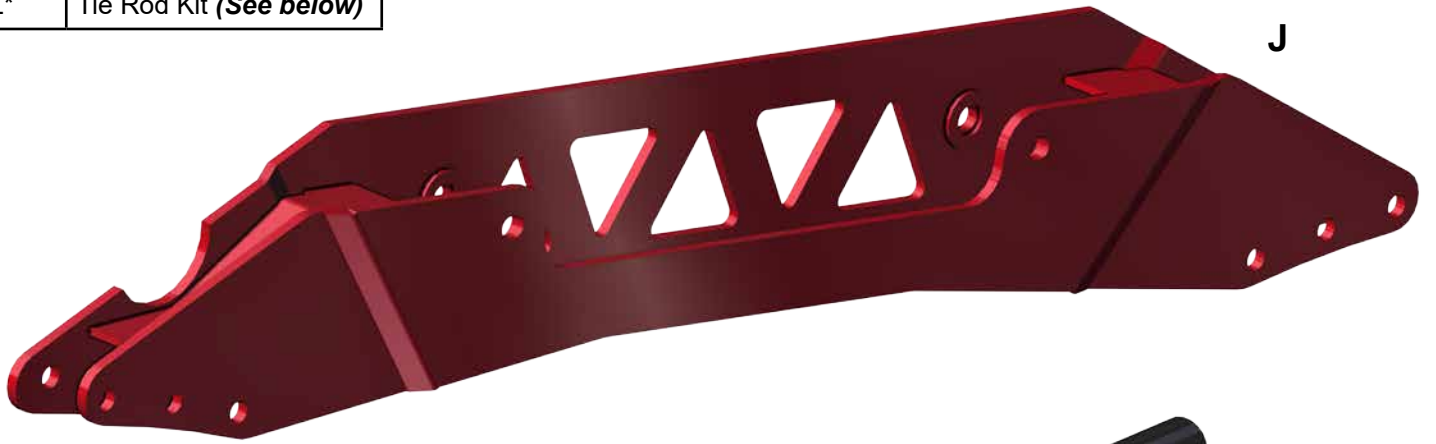

(Kit contents continued)

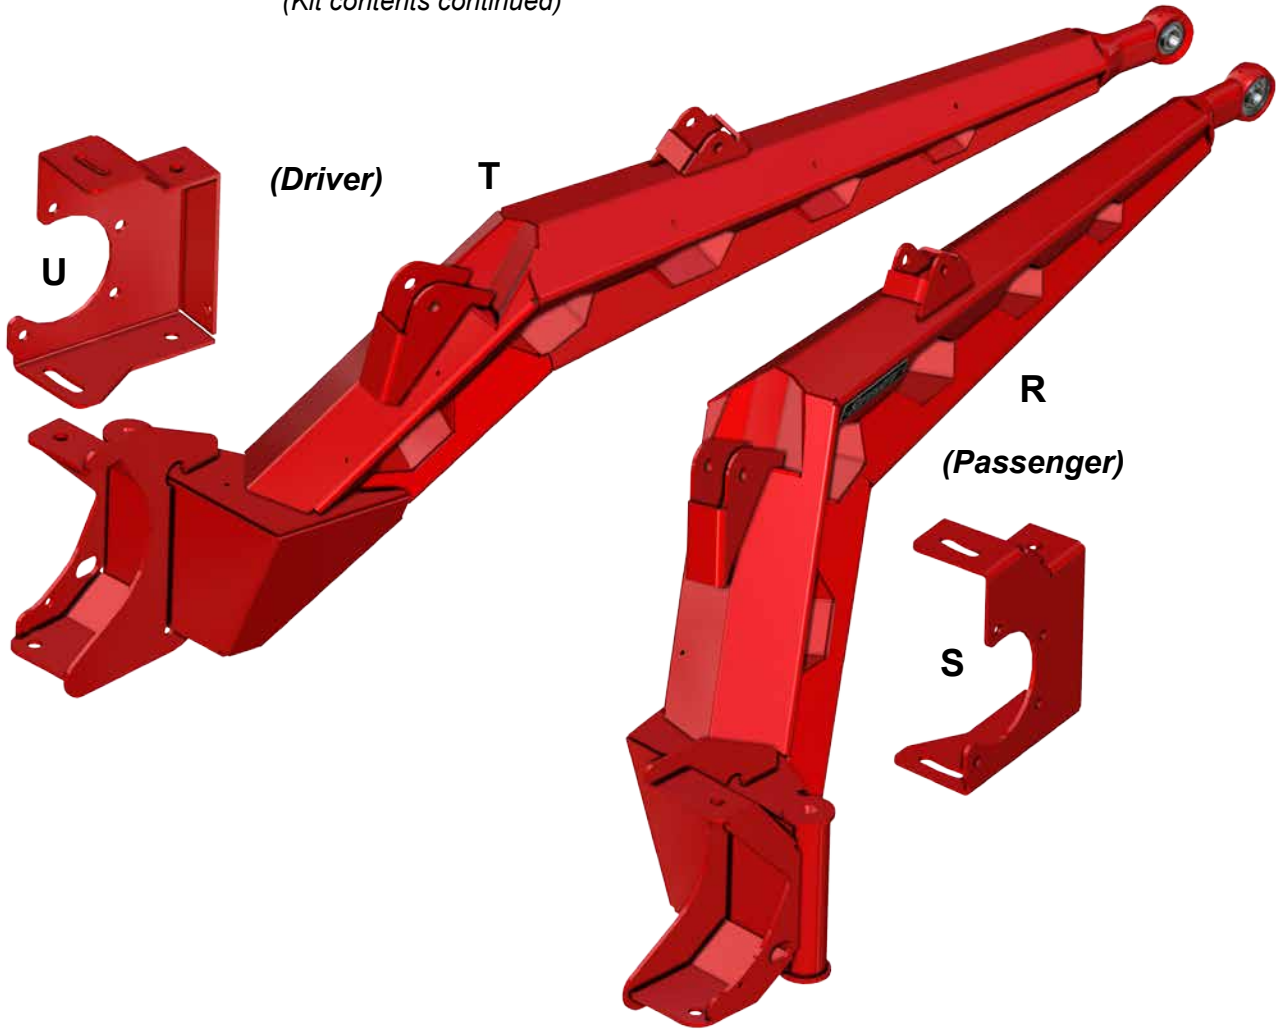

Item	Description	Qty
R	Trailing Arm, Passenger	1
S	Hub Mount, Passenger	1
T	Trailing Arm, Driver	1
U	Hub Mount, Driver	1
M	Brake Lines (<i>See Chart</i>)	1







Brake Lines (M)

Location	Length (Approx)
Right Front	50"
Left Front	42"
Right Rear	90-1/2"
Left Rear	58"






Front Brake Lines have same style fittings at each end.

  (Kit contents continued)

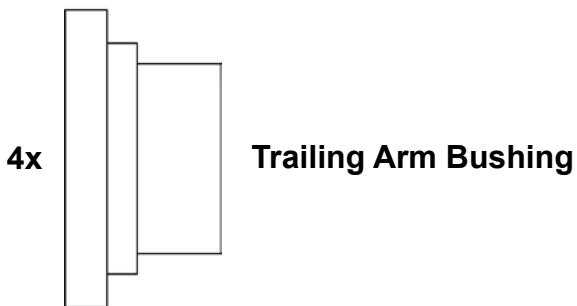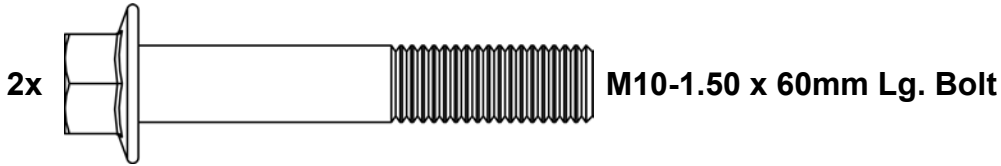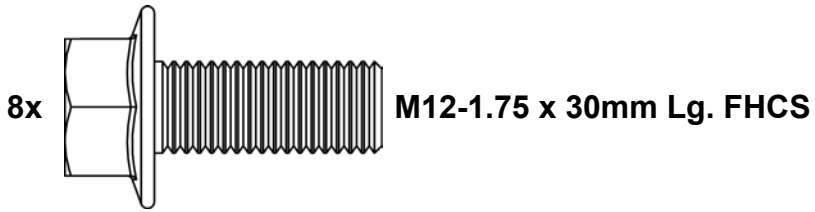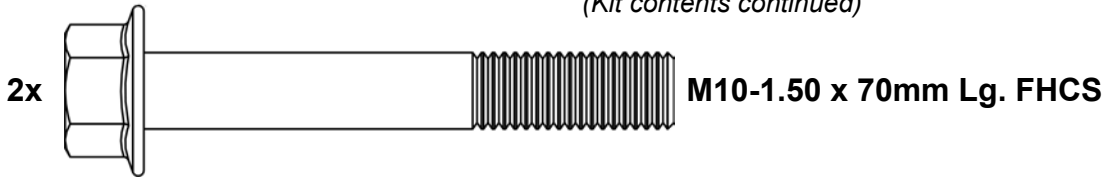

Front components shown must be removed; *Keep all components removed from machine.*

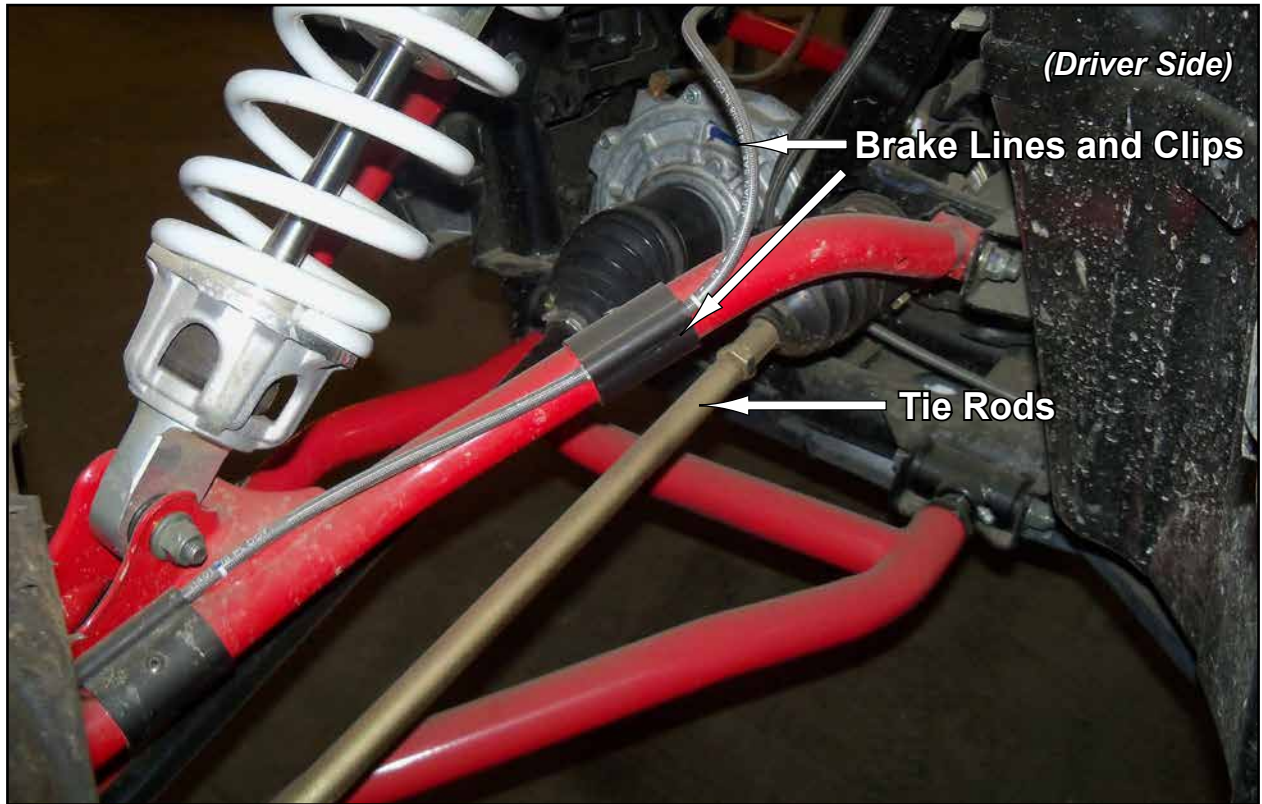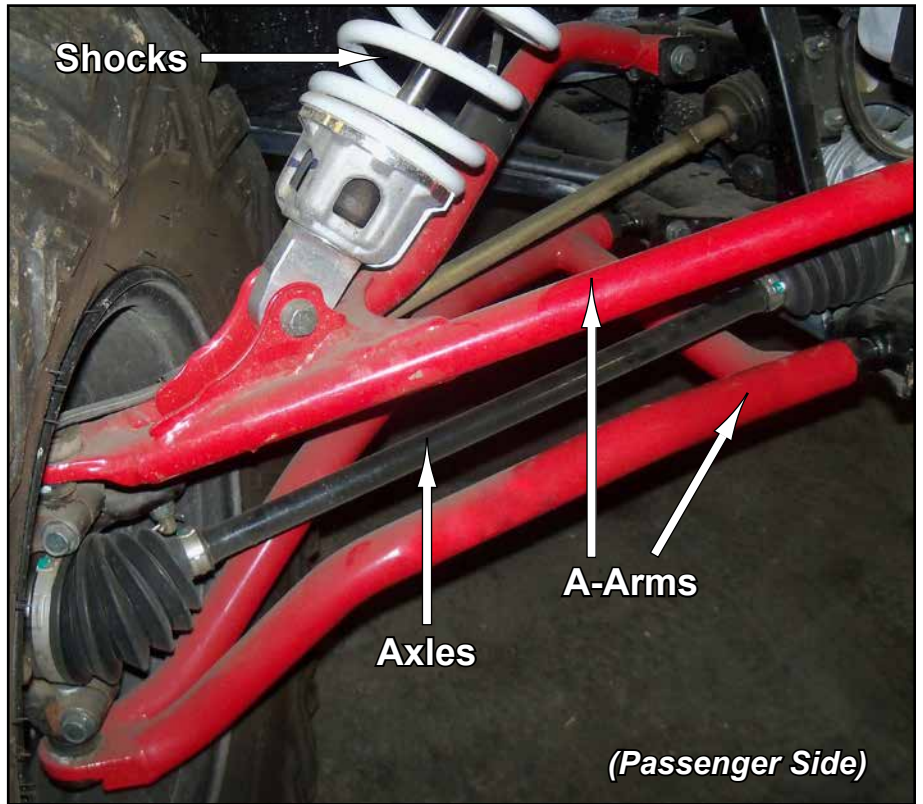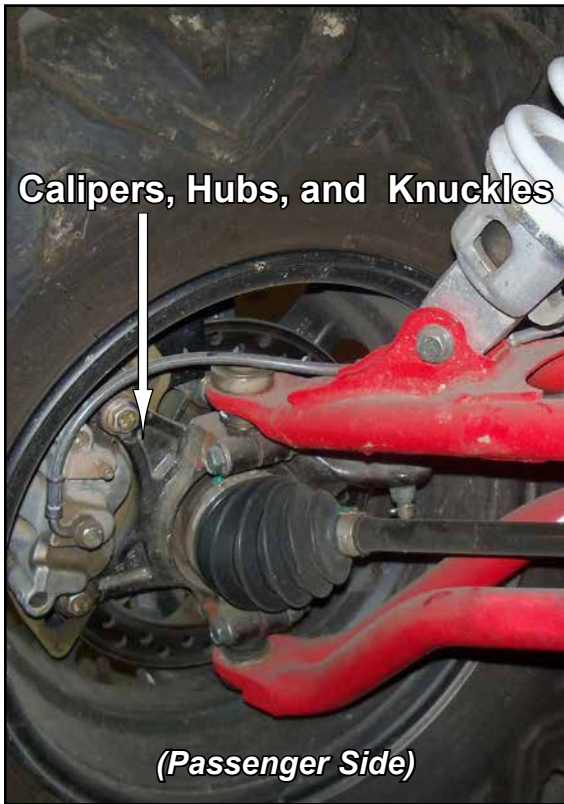

Vent Tube Rerouting:



- Unclip Wire Harness' from Shock Mount.
- Reroute Vent Tube away from Shock Mount.
- **After** Front Bracket (J) has been installed, reinstall above components in a suitable location.



Steering Stop Installation: Rack and Pinion shown off machine for clarity

Note: Driver Side installation is shown.

- Install Bushing onto Rack and Pinion shaft; repeat for opposite side. See Fig. 1.

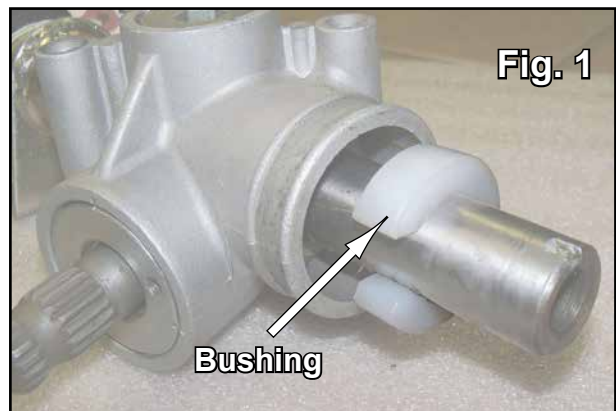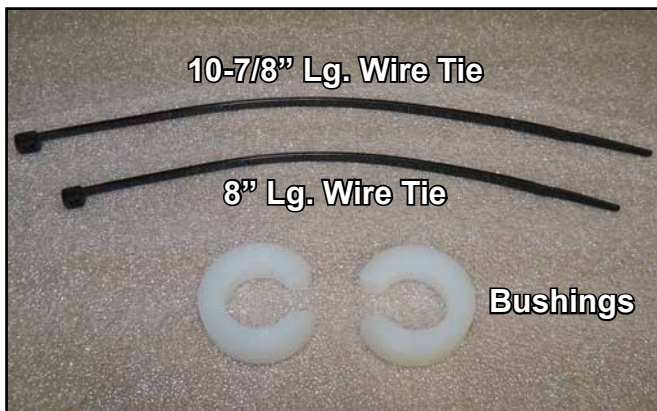




install stock Ball Joints

PIVOT BLOCK SETTINGS



- Place new A-Arms onto a flat surface and verify dimension shown.
- *Negative 1° camber setting is achieved when Pivot Blocks are set to this dimension.*
- See last page for additional camber information.

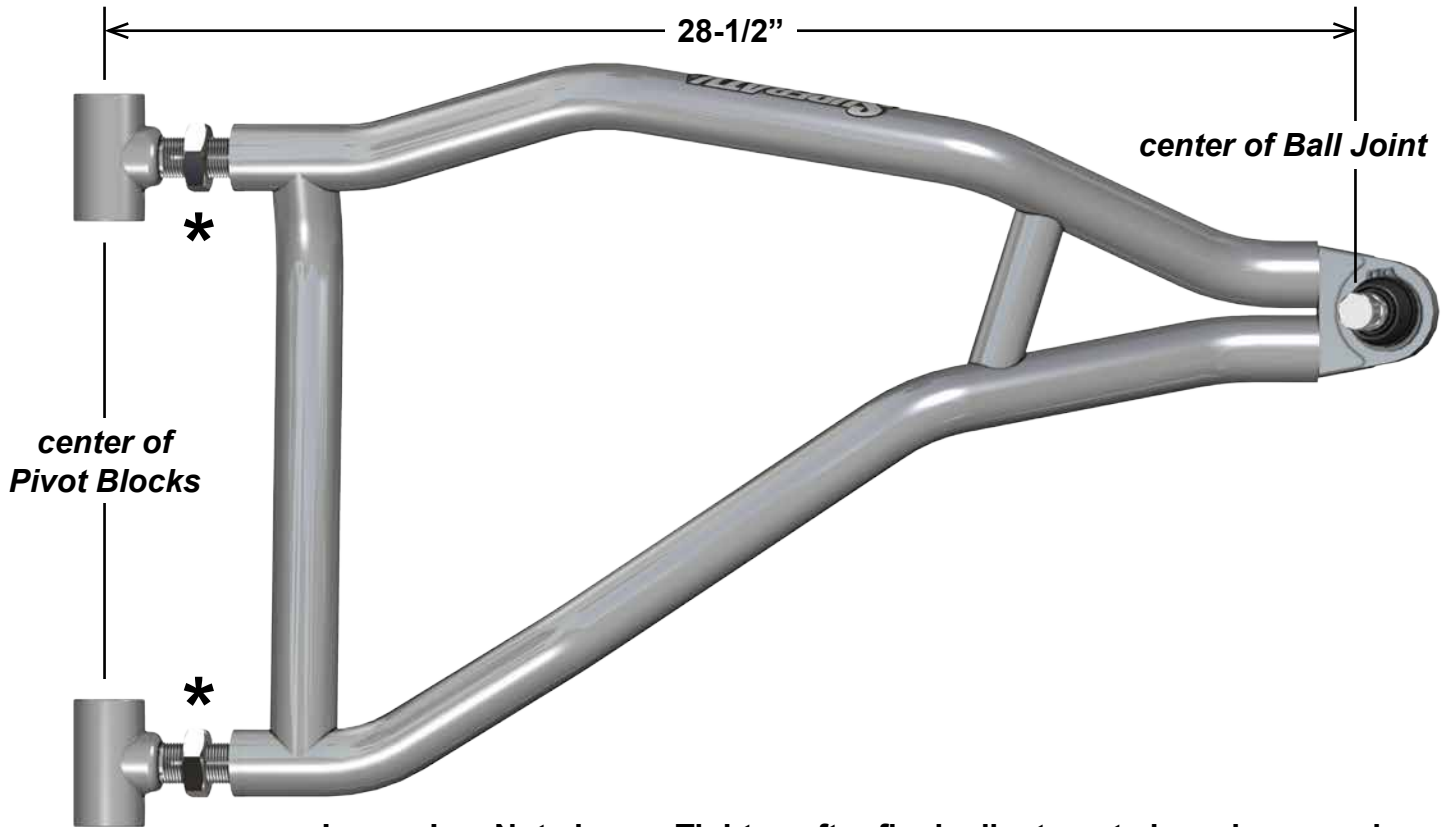



*** Leave Jam Nuts loose. Tighten after final adjustments have been made.**

Front Bracket installation: *Do not tighten hardware completely unless noted.*

- Install Front Lift Bracket (J) to Frame with hardware shown.
- Determine lift setting and use hardware shown when reinstalling Shocks.

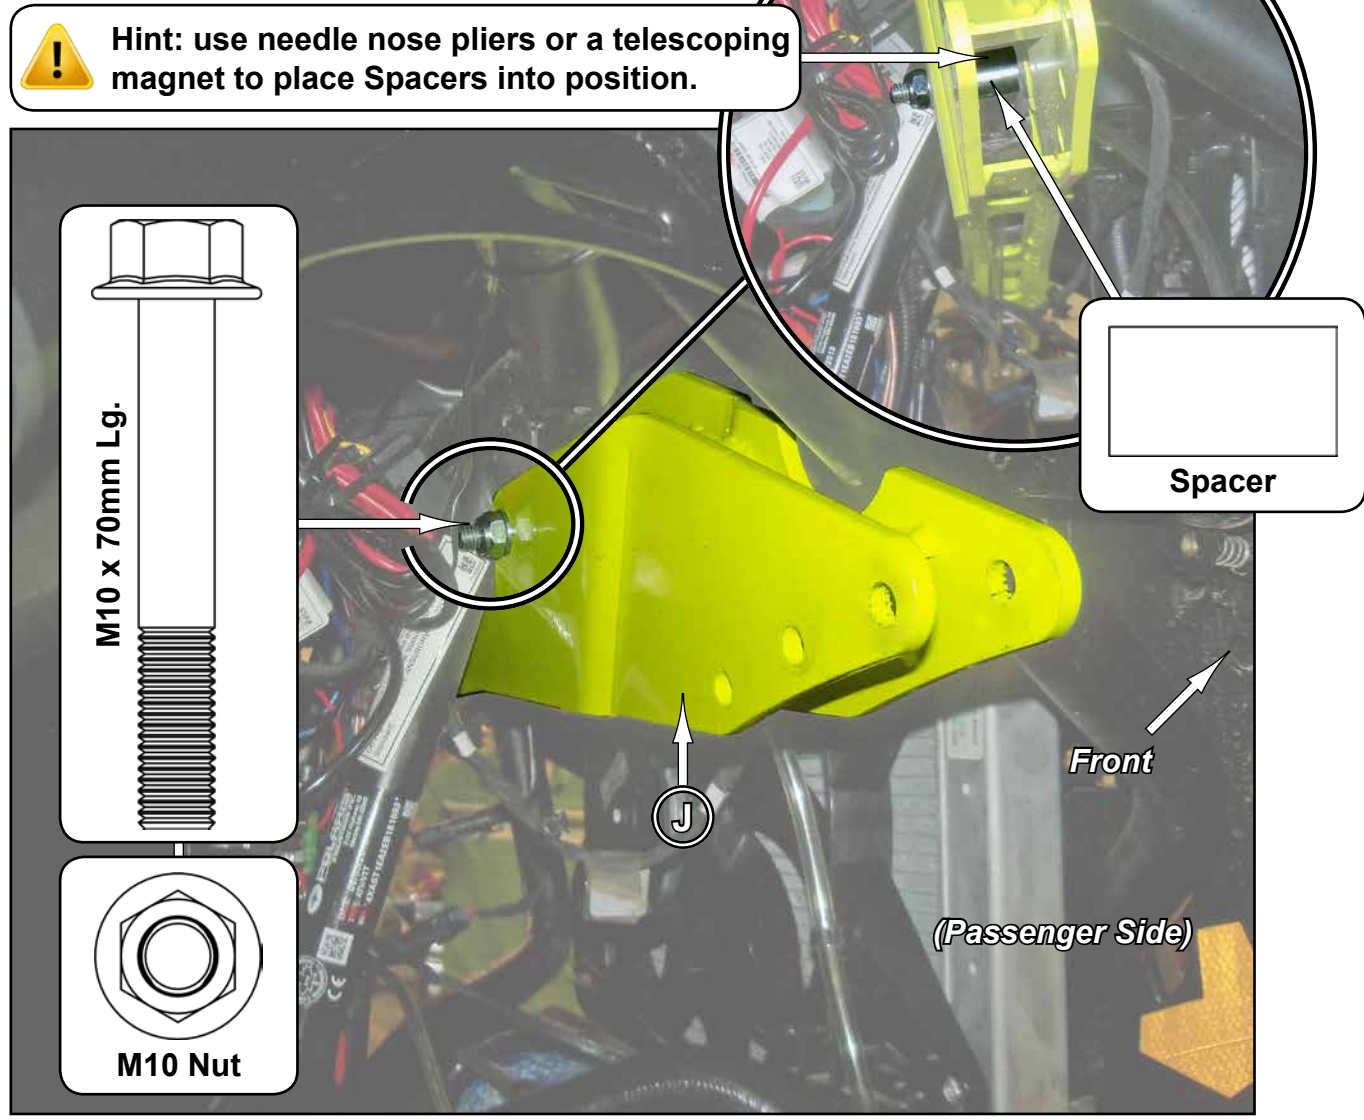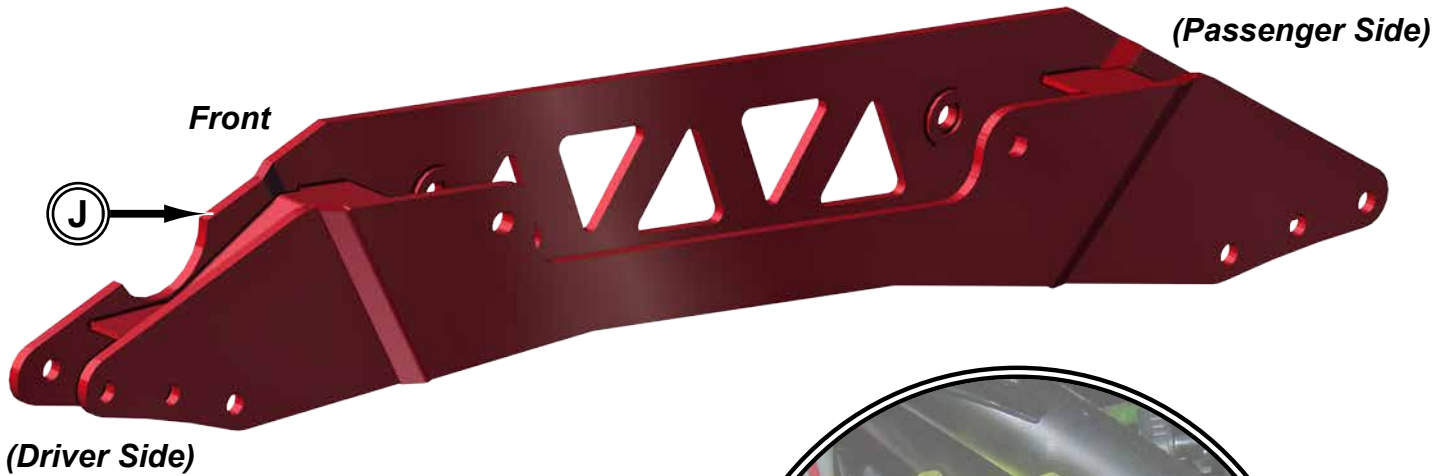

(Front Bracket installation illustrations continue on following page)

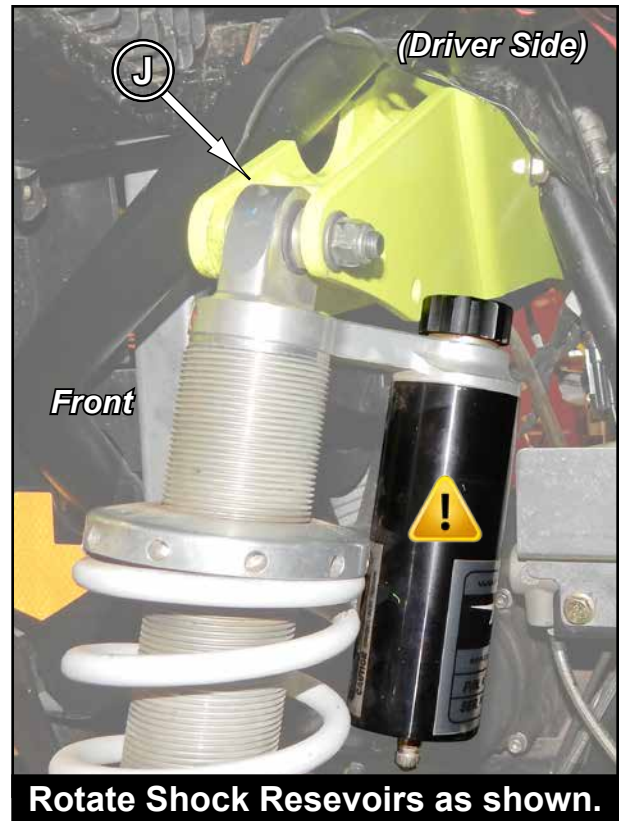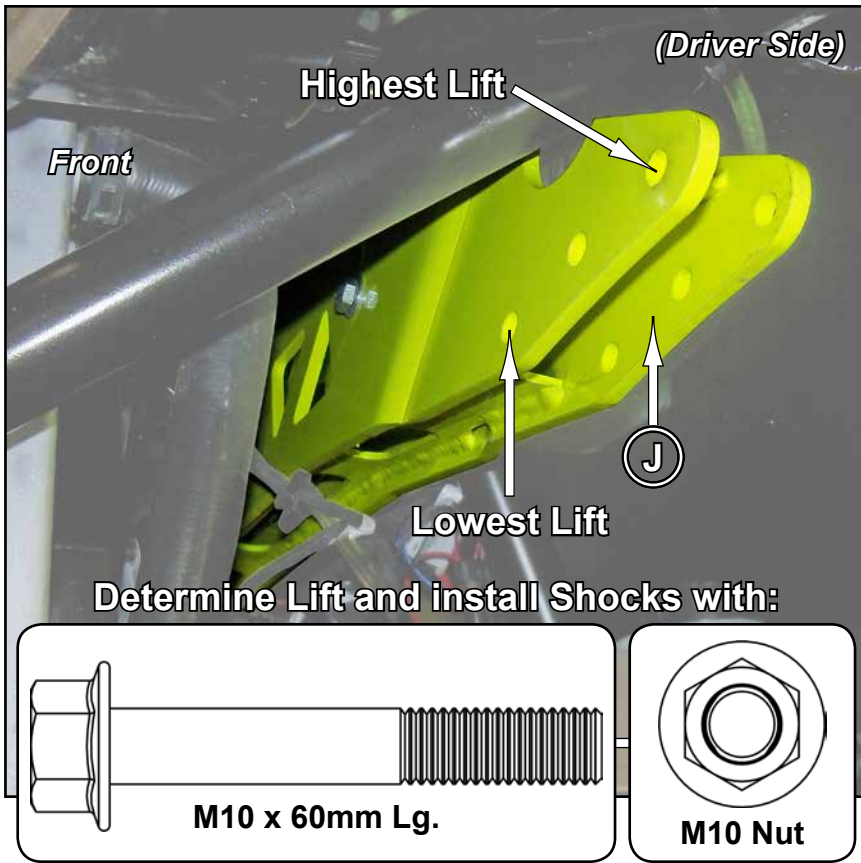


Front installation: *Do not tighten hardware completely unless noted.*

- Install A-Arms (A-D) to Frame with stock hardware. **Do not install any Nuts to Lower Arms until all final adjustments have been completed.**
- Install new Axles.
- Install Brake Lines (M), **page 11.**
- Install Tie Rods (L), **pages 11 - 12.**




Front Brake Line (M) installation:

- Install Front Brake Lines (M); *Right is 50" long and Left is 42" long approximately.* Secure to A-Arms (A)(B) with Brake Line Clips (F), Brake Line Clamps (E), and hardware shown. Ensure no binding or interference can occur when in use.

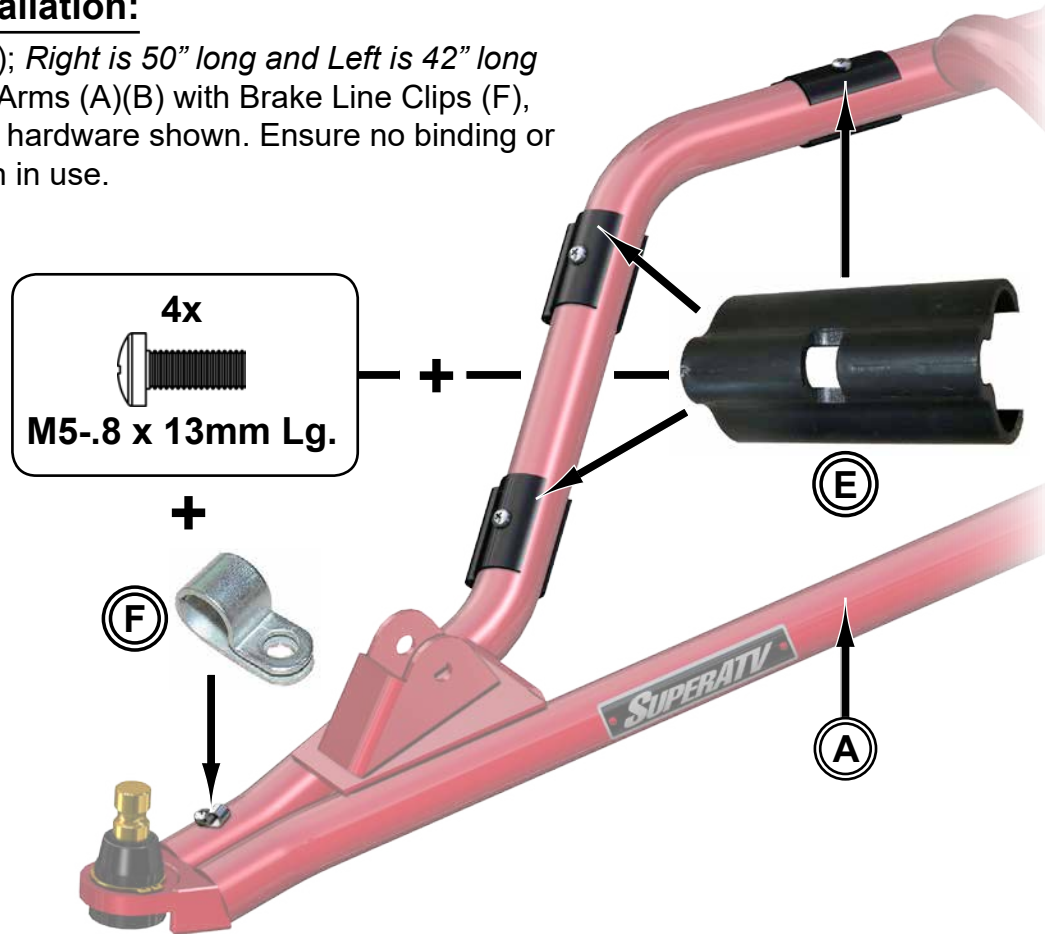


Tie Rod (L) installation:

To Spindle



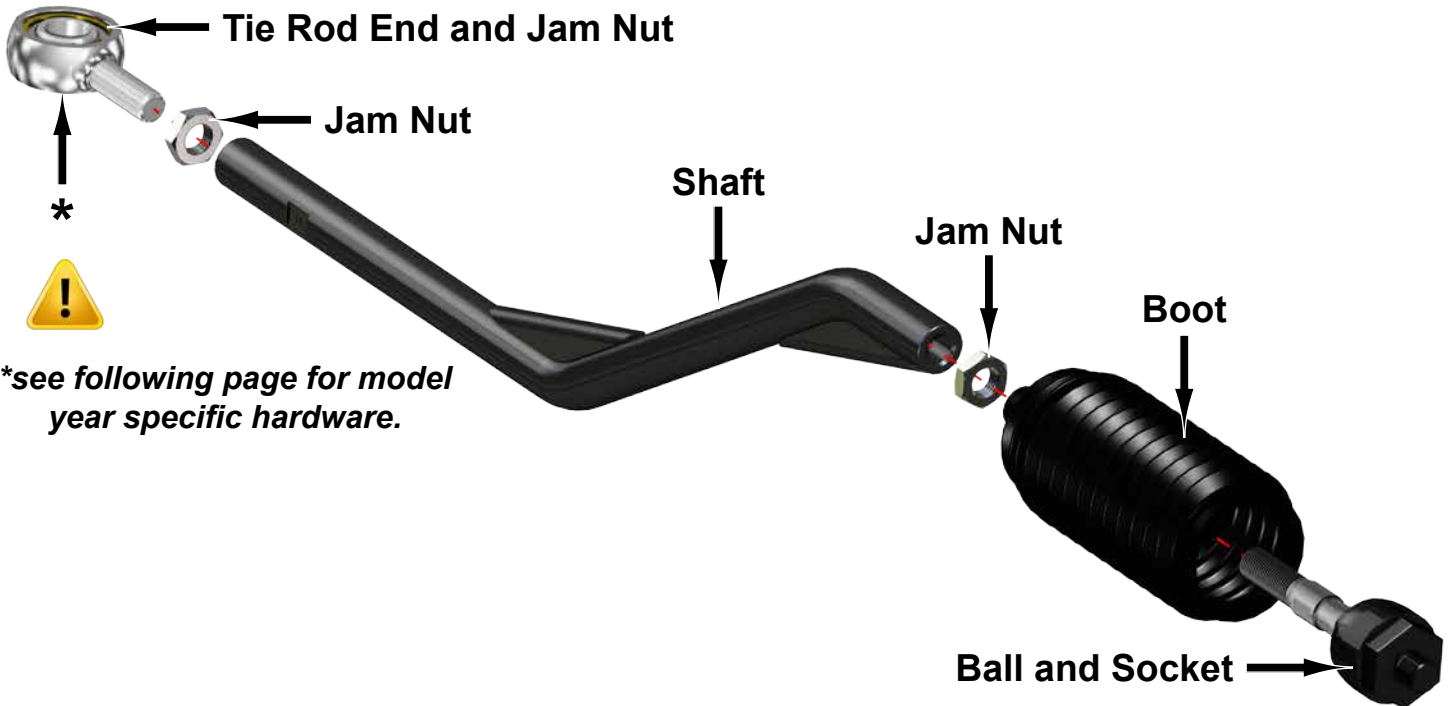


To Rack and Pinion

Tie Rod (L) installation continued: *(Rack and Pinion shown off machine for clarity).*


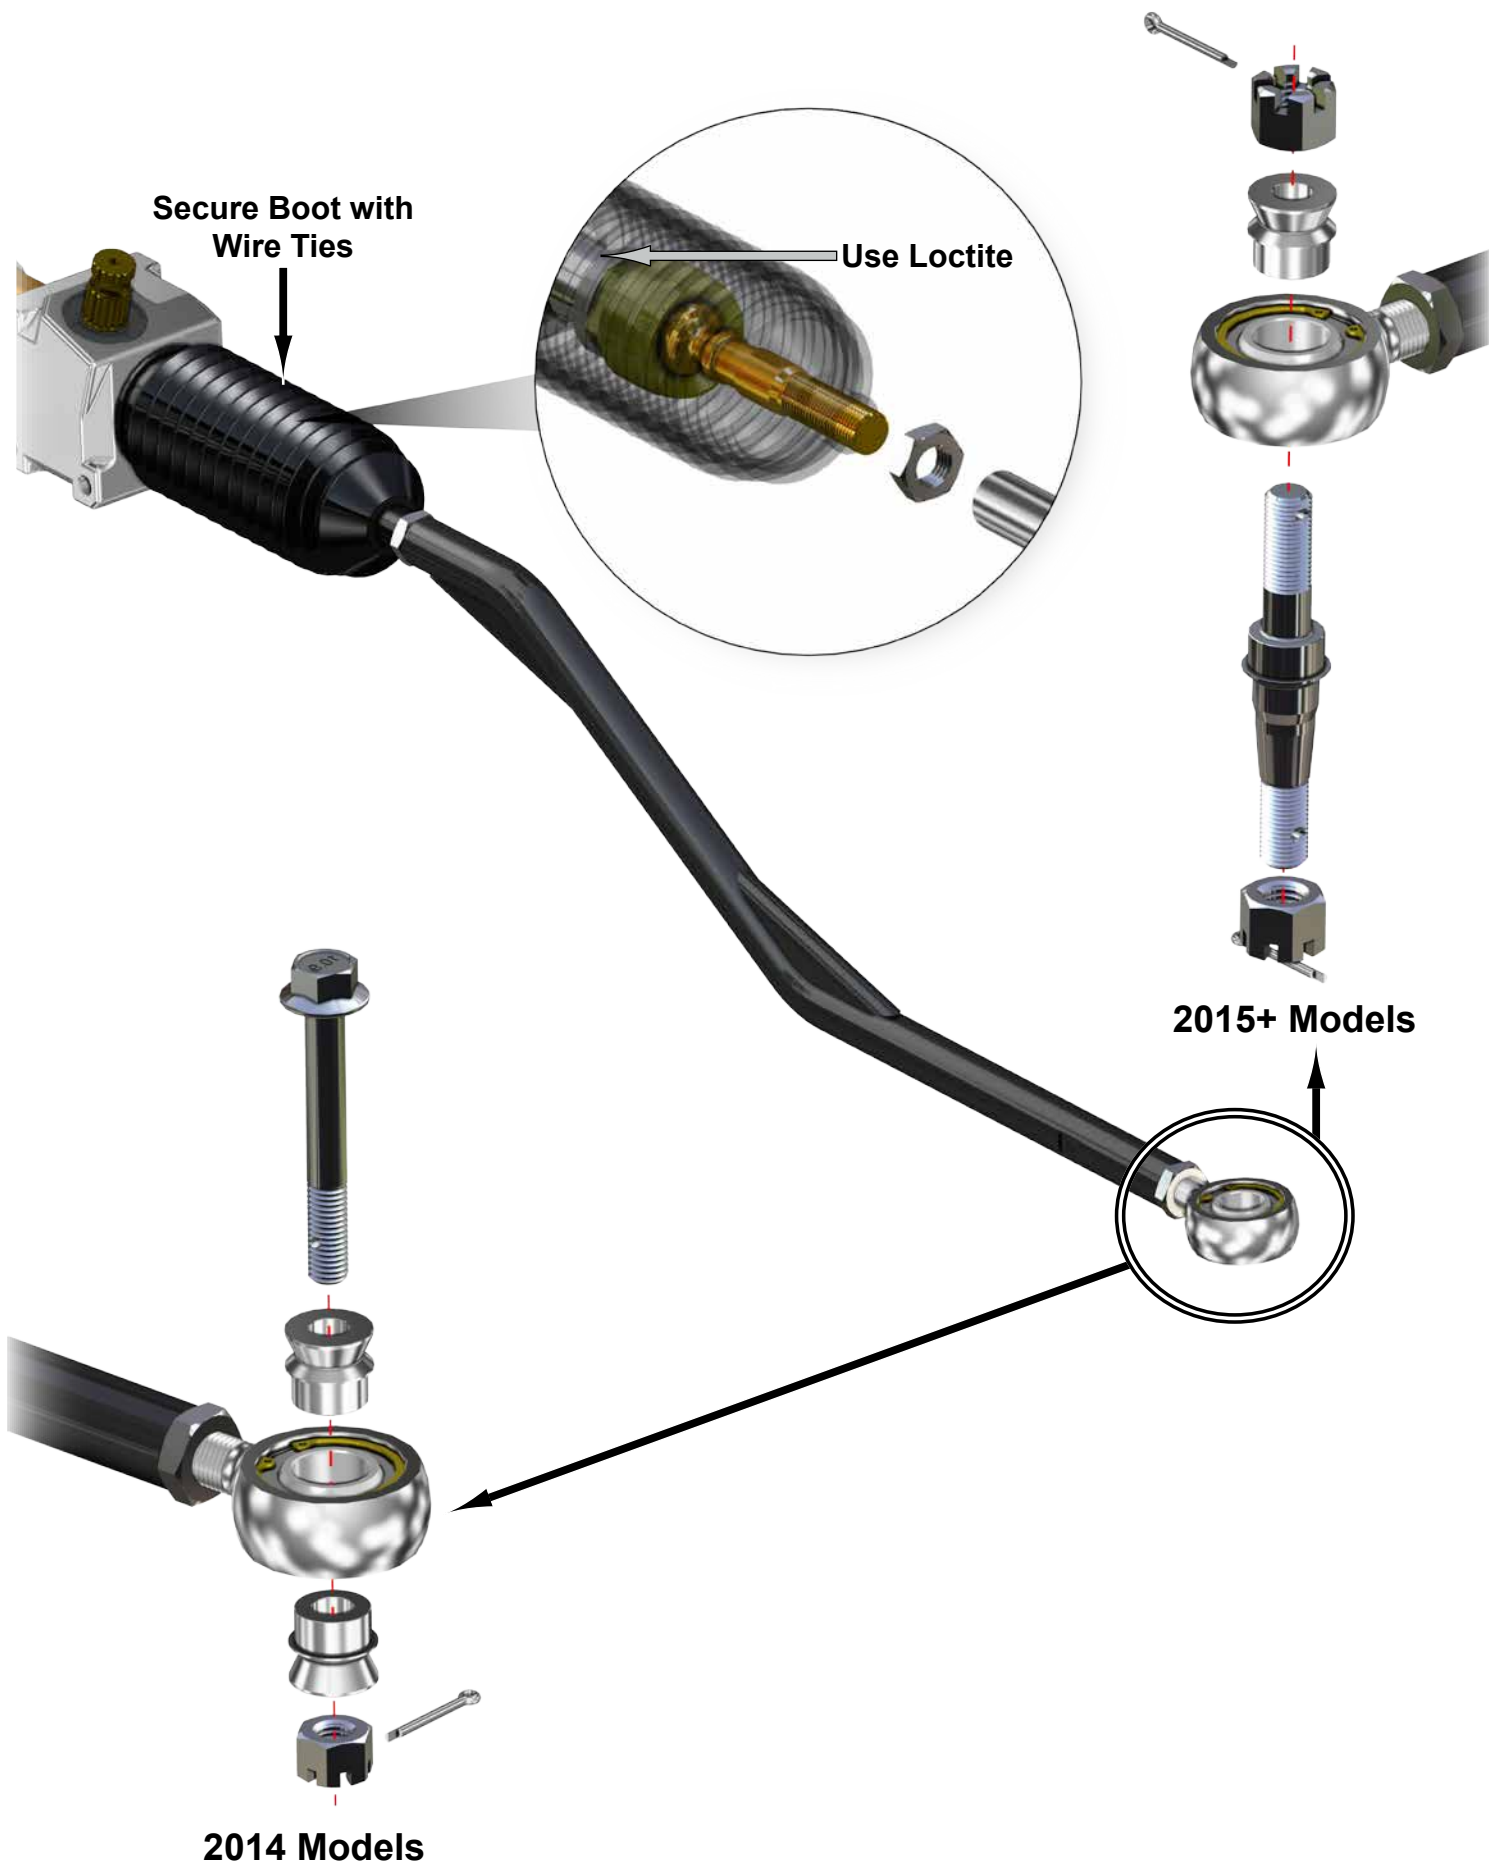


Rear components shown must be removed; Keep all components removed from machine.

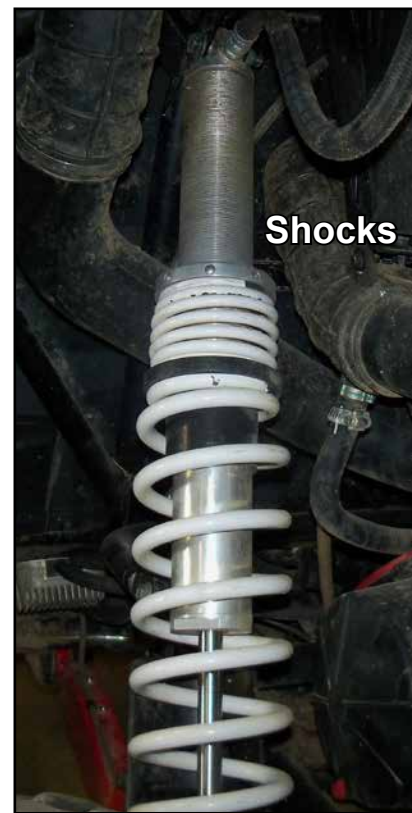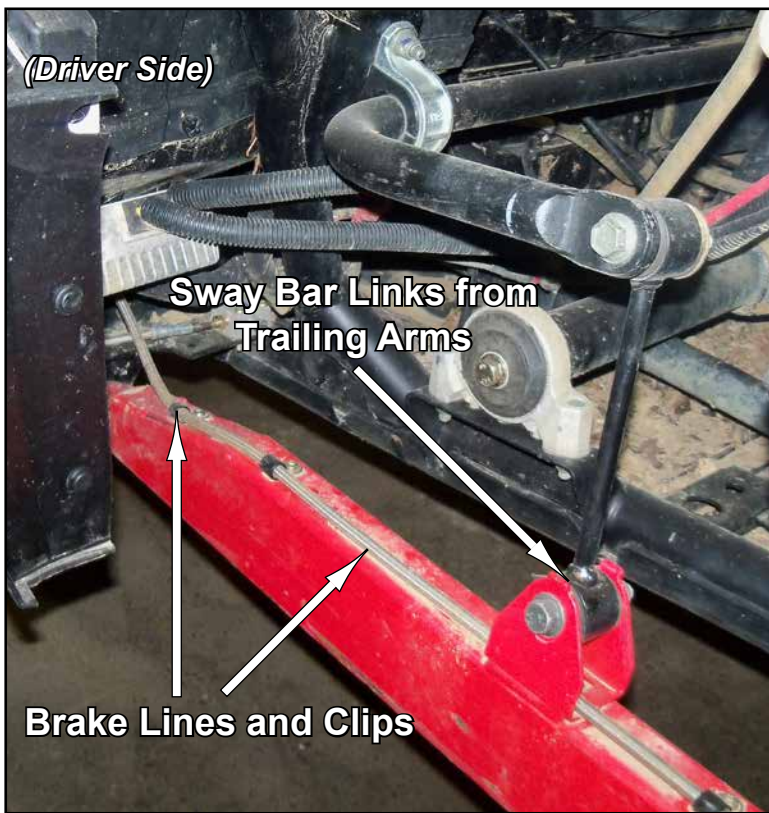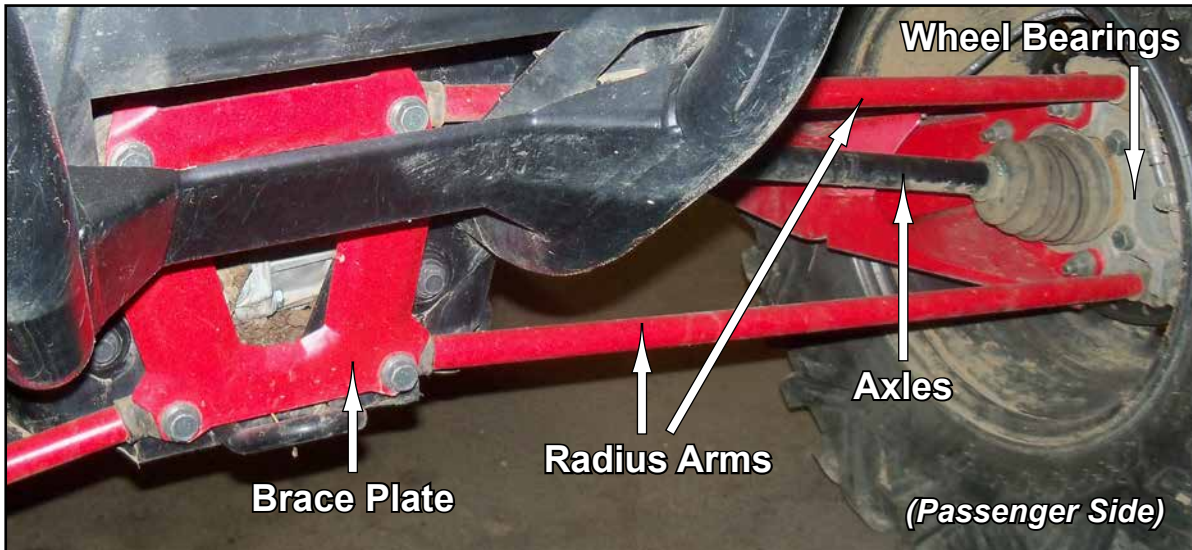


Rear installation: *Do not tighten hardware completely unless noted.*

- Install Trailing Arms (R)(T) to Frame with stock hardware and provided trailing arm bushings.
- Install Sway Bar Link to Trailing Arm (R)(T) with stock hardware.
- Install new Axles.
- Install Rear Spring Spacers (H) to Shocks, **page 15**; reinstall Shocks with stock hardware.
- Install Radius Arms and Brace Plate, **see included Radius Arms instructions.**
- Install Hub Mounts (S)(V) to Trailing Arms (R)(T), **pages 1 - 17.**
- Install Brake Lines (M), **page 18.**

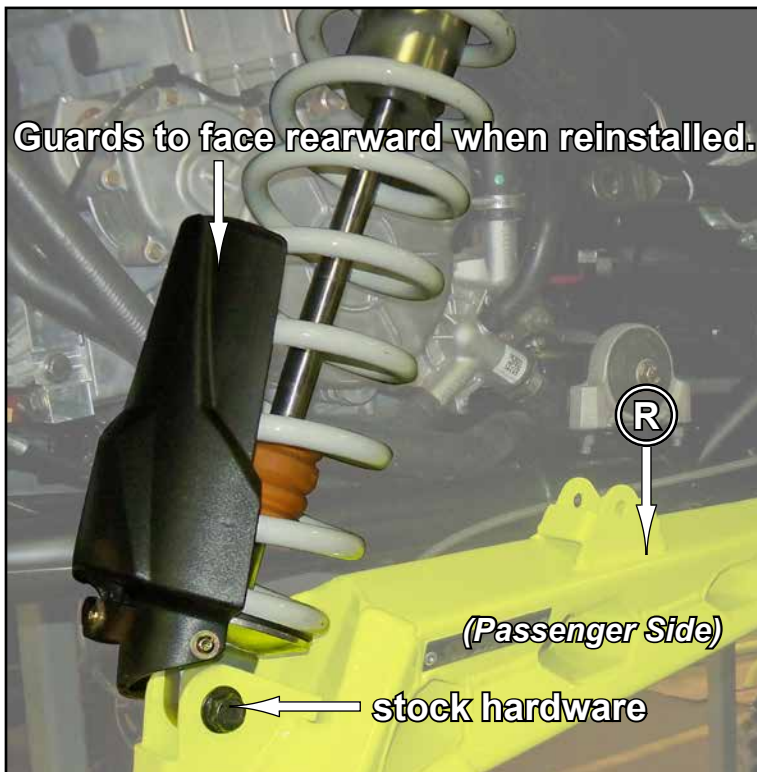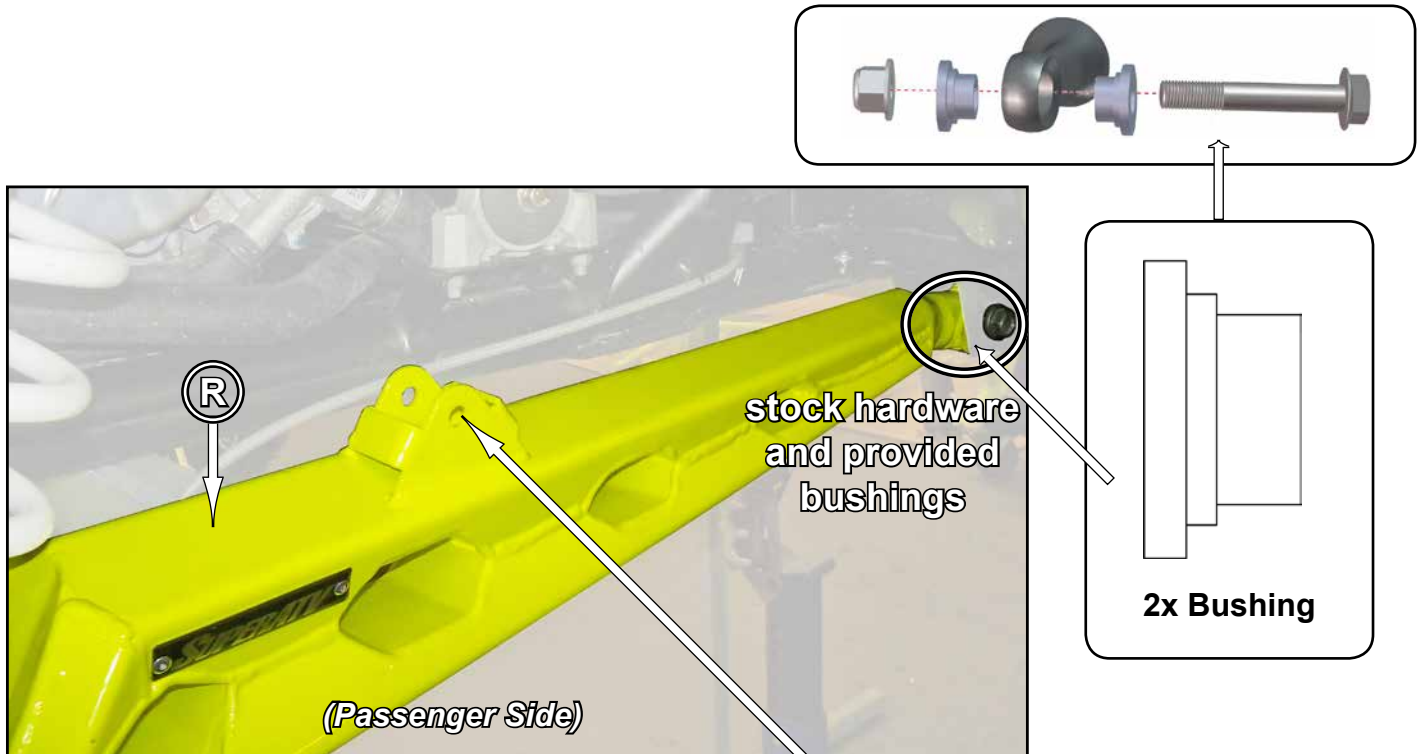


Rear Spring Spacers (H); SuperATV recommends using a lubricant on threads of Shock when adjusting Nut.


Step 1:

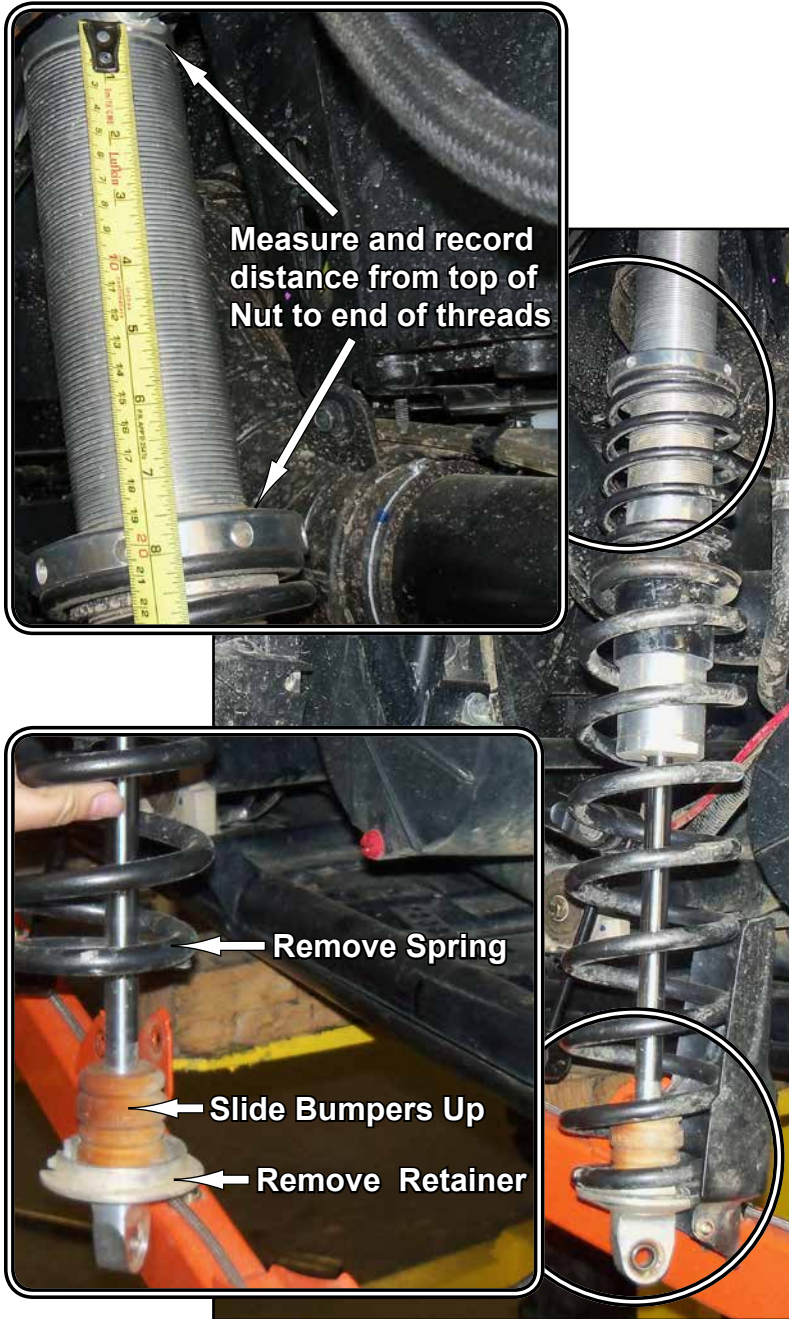

Step 2:

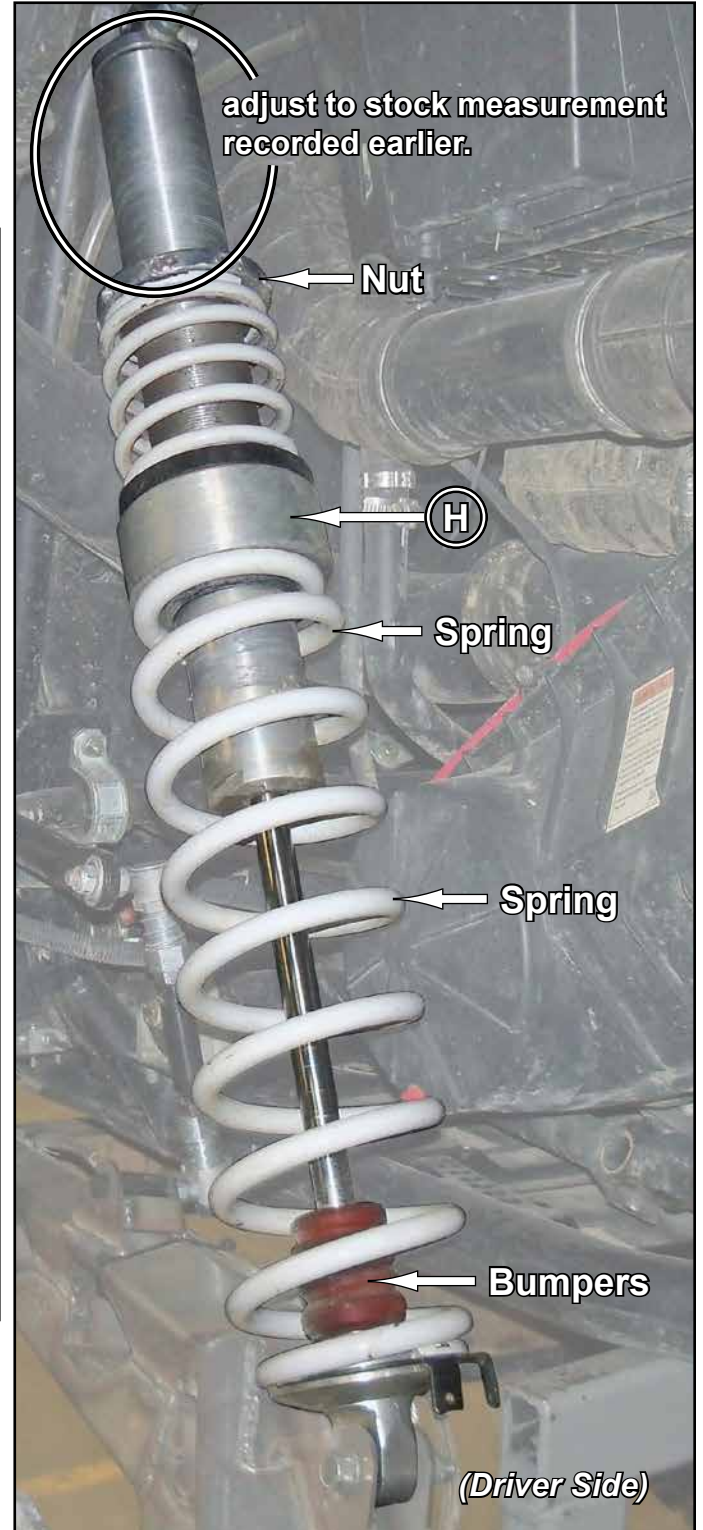


Hub Mount installation and adjustments: *Do not tighten hardware completely unless noted.*

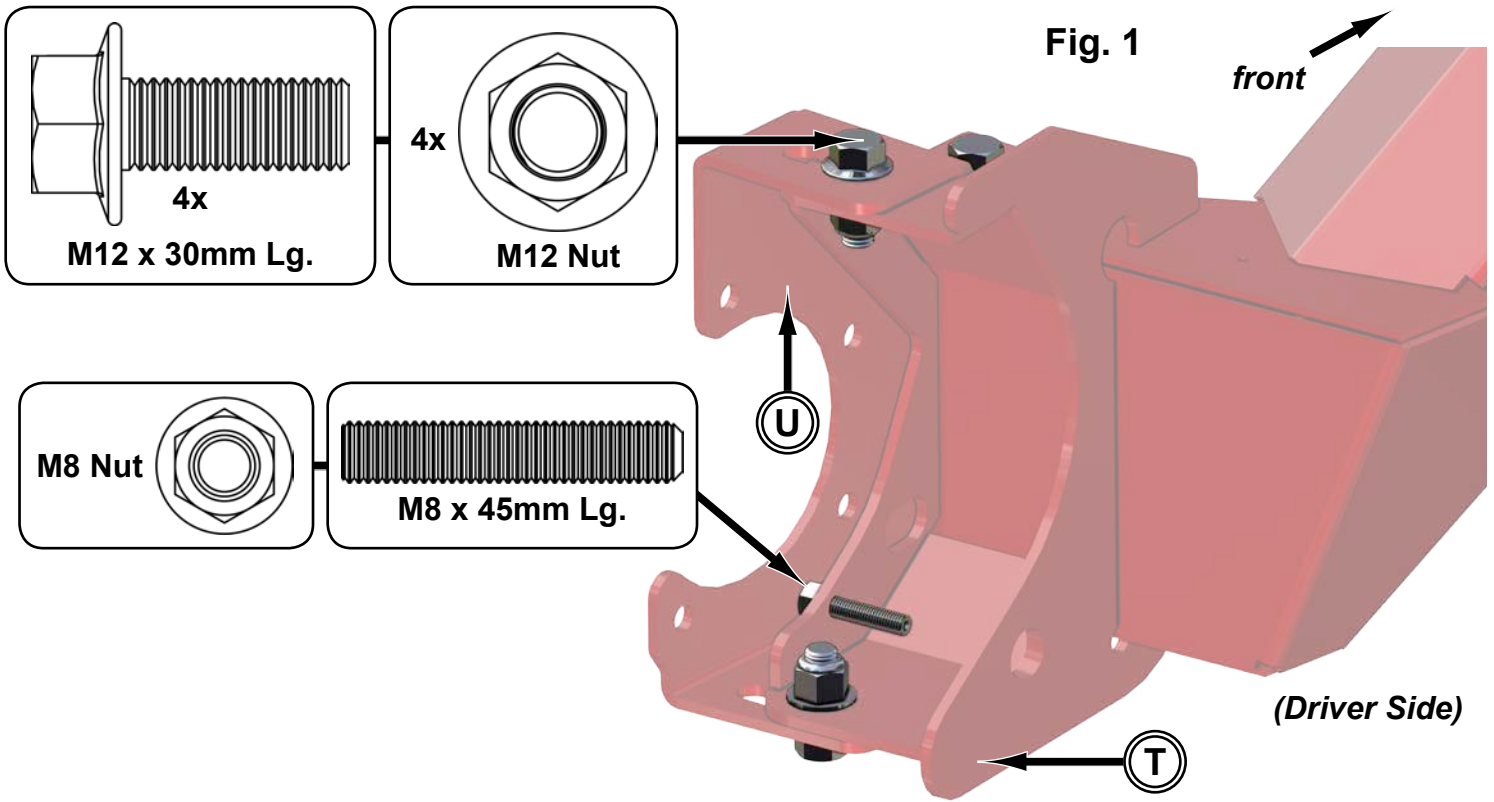

See Figs. 1 - 1c.

Fig. 1a

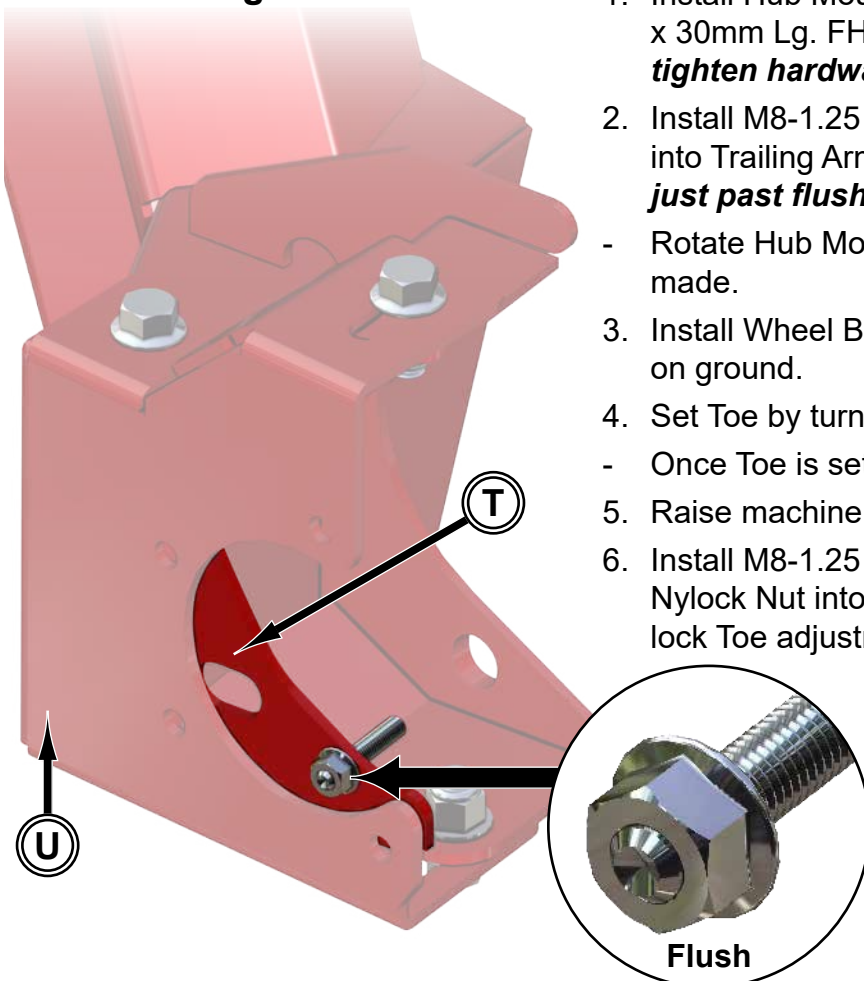

1. Install Hub Mount (U) to Trailing Arm (T) with M12-1.75 x 30mm Lg. FHCS and M12-1.75 Nylock Nuts. **Do not tighten hardware.**
2. Install M8-1.25 x 45mm Lg. Set Screw and M8-1.25 Nut into Trailing Arm (T). **Leave Set Screw flush with Nut or just past flush for now.**
 - Rotate Hub Mount (U) until contact with Set Screw is made.
3. Install Wheel Bearings, Calipers, and Tires; set machine on ground.
4. Set Toe by turning Set Screw installed in Step 2.
 - Once Toe is set, tighten M12 hardware installed in Step 1.
5. Raise machine and remove tires.
6. Install M8-1.25 x 25mm Lg. Set Screw and M8-1.25 Nylock Nut into Trailing Arm (T) and tighten completely to lock Toe adjustments in place.

Fig. 1b


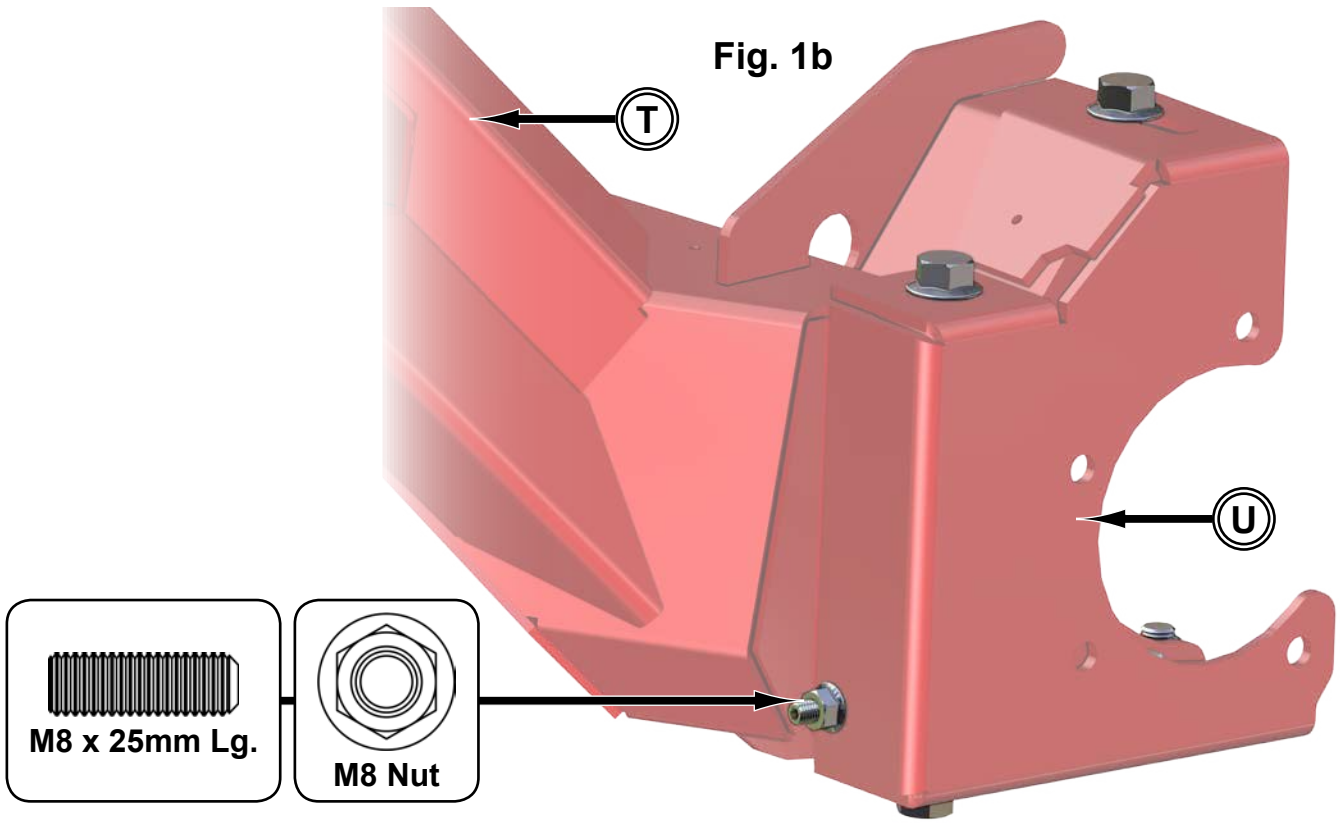



Fig. 1c

Install Wheel Bearings with stock hardware

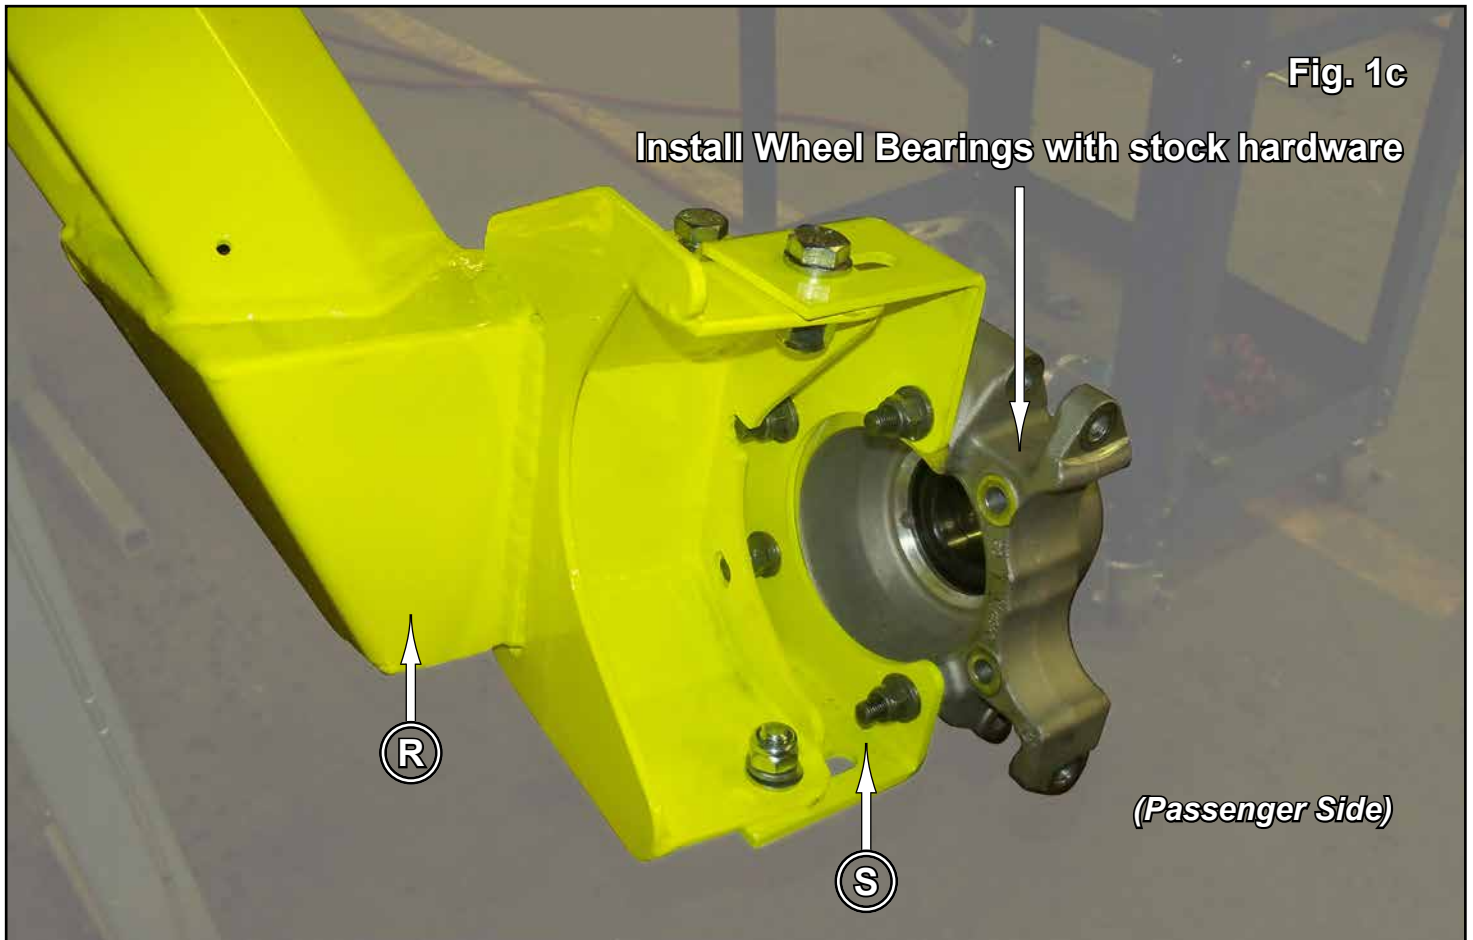


Rear Brake Line (M) installation:

- Install Rear Brake Lines (N); *Right is 90-1/2" long and Left is 58" long approximately.* Secure to Trailing Arms (T)(R) with Brake Line Clips (F), and hardware shown. Ensure no binding or interference can occur when in use.

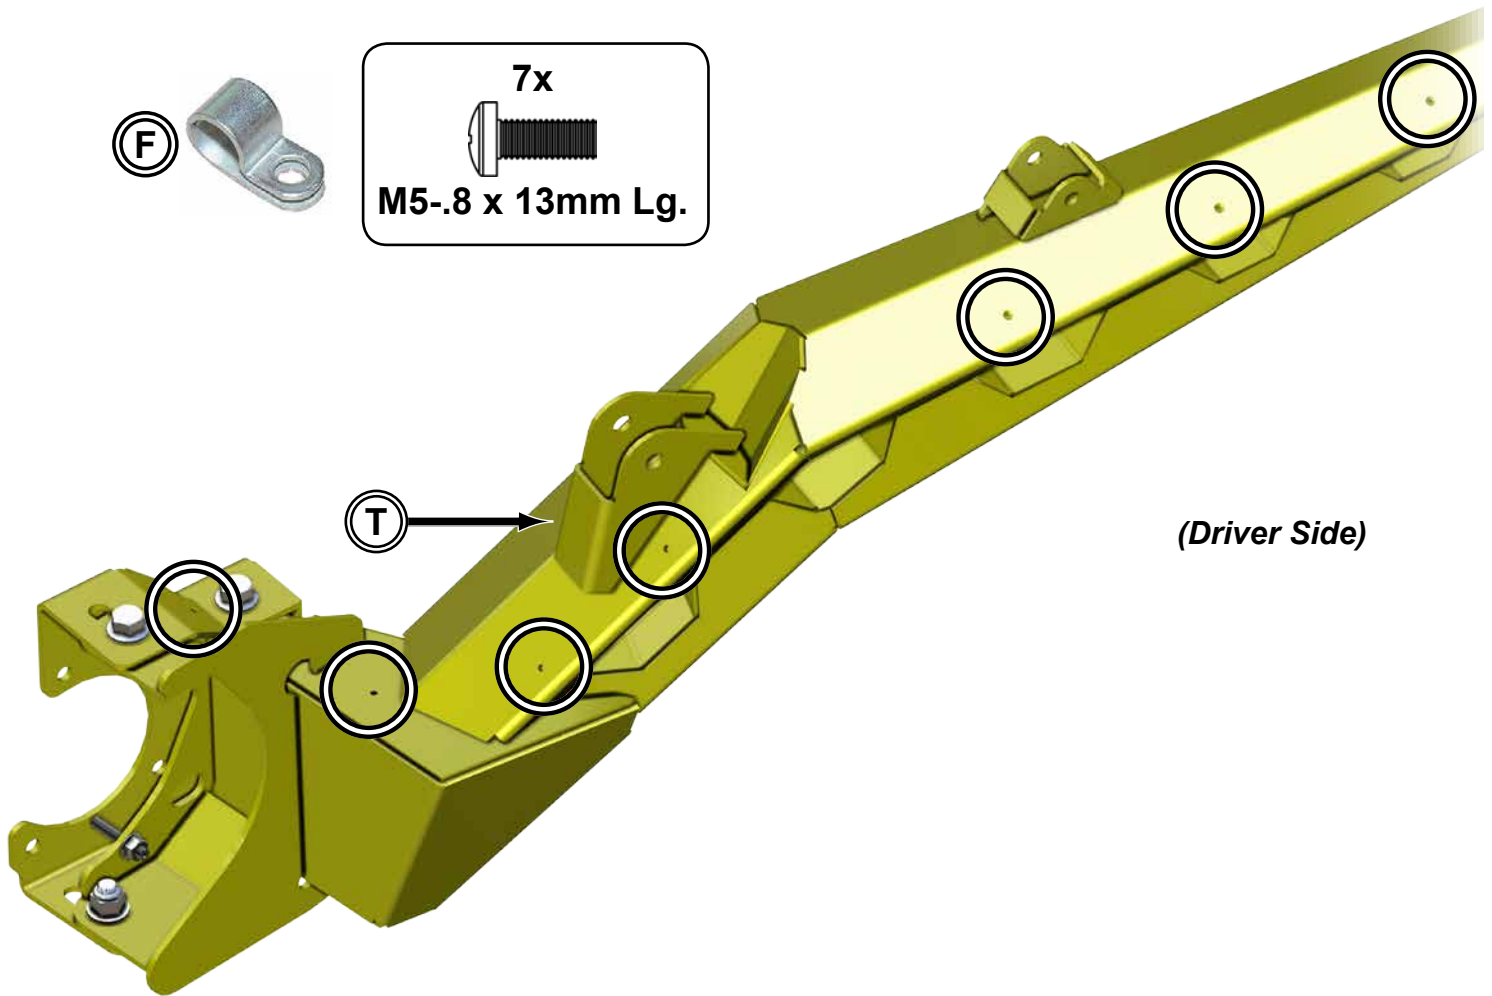

- Reinstall Tires and check Camber settings; see last page.
- Add Nuts to previously installed hardware and tighten completely. SuperATV recommends using Loc-Tite on Nuts.

INSTALLATION INSTRUCTIONS
Radius Arms: for Polaris RZR[®] XP 1000
(with SuperATV Lift Kit)

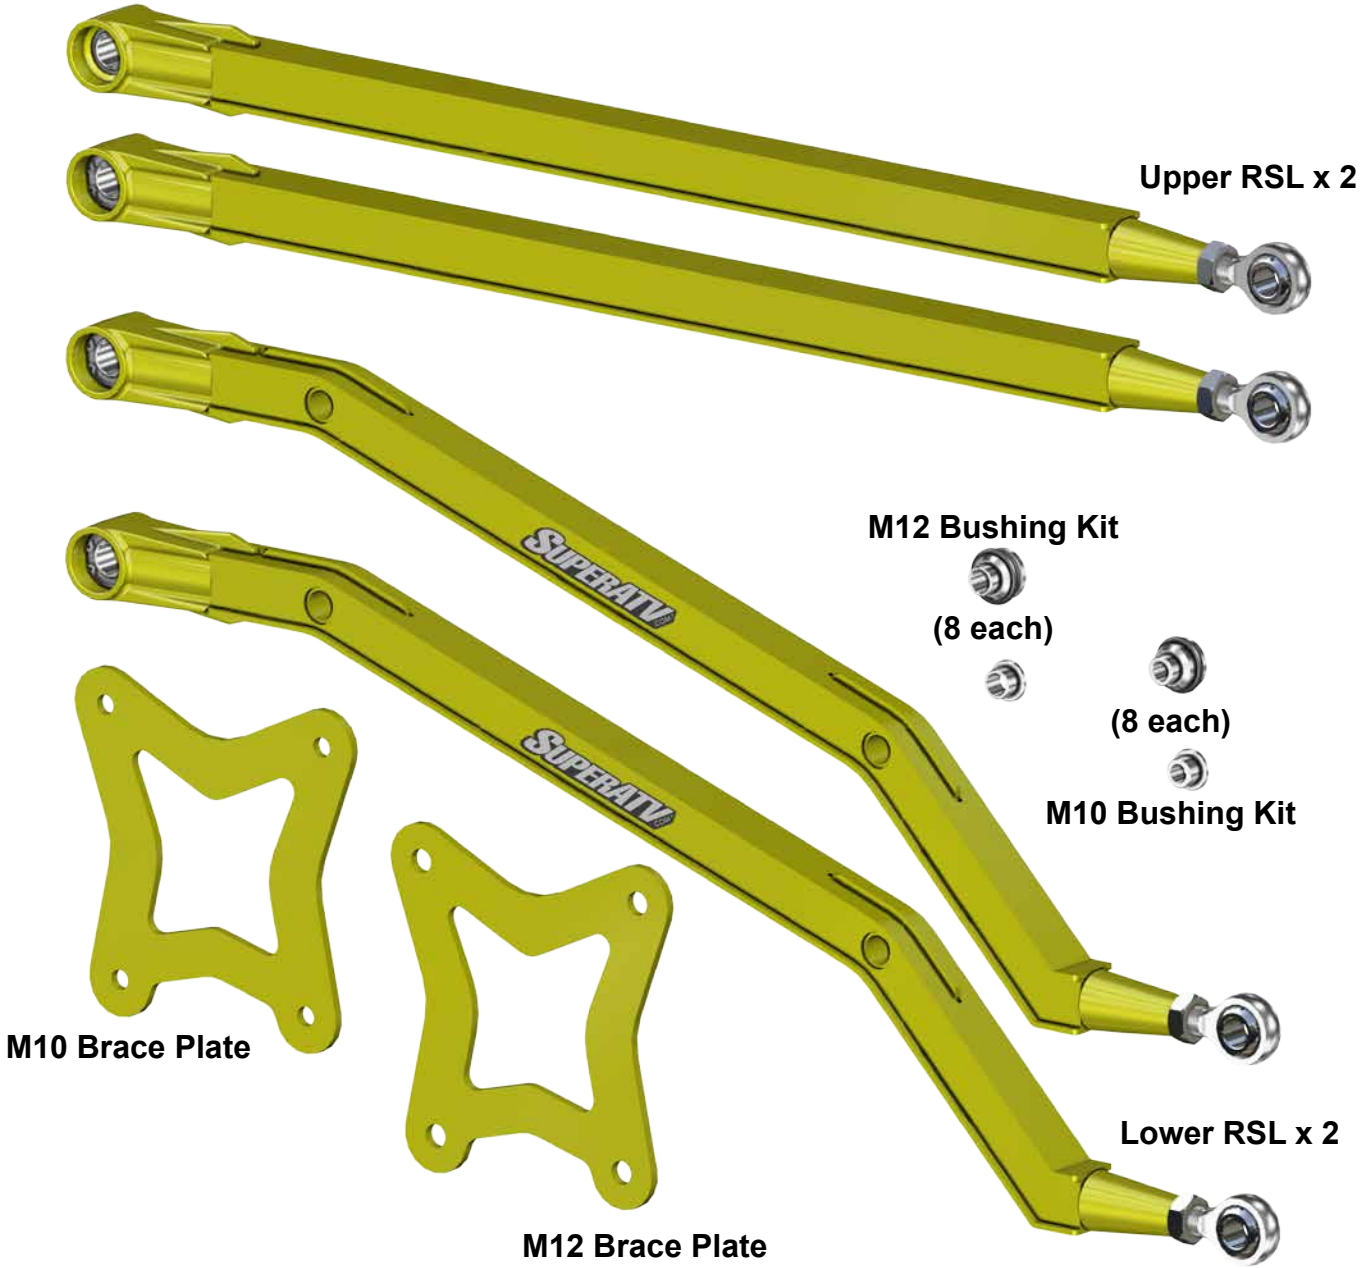

Depending on model year, M12 or M10 components and hardware will be used. Compare stock hardware to provided to verify.

Need help with your installation?




✉ sales@superatv.com 🌐 www.superatv.com

☎ 1-855-743-3427 🕒 8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday



Read instructions and view illustrations before beginning.

Thank You
For Choosing
SUPERATV.COM[®]

M10 hardware

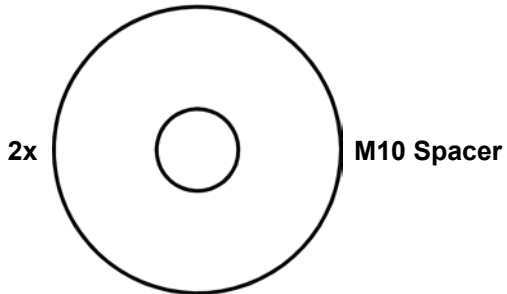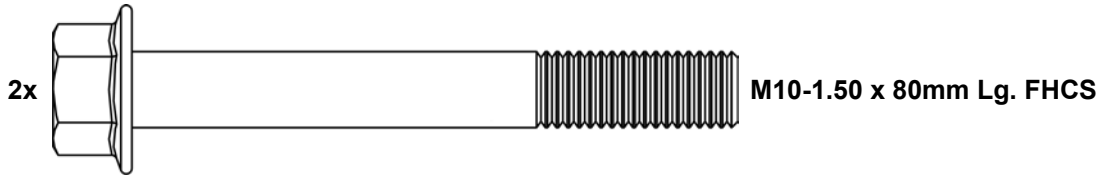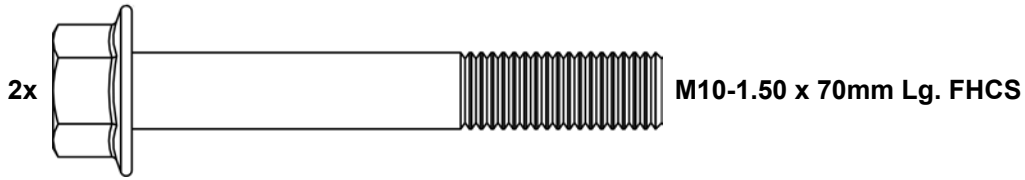

M12 hardware

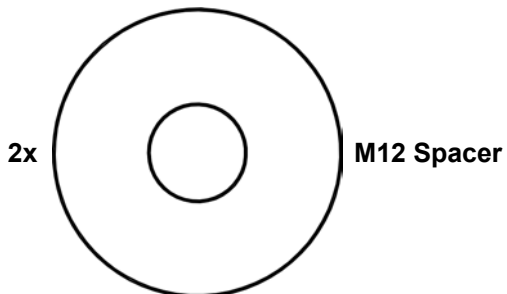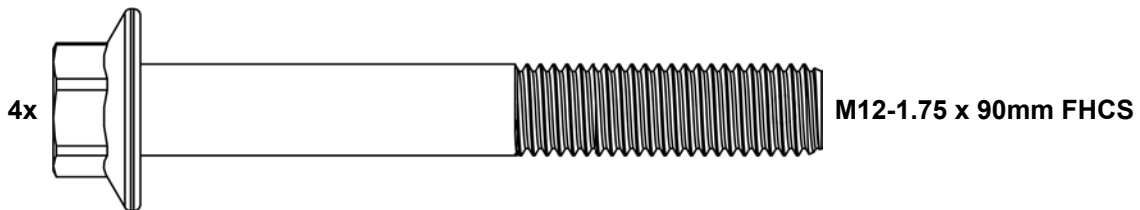

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

- Install Bushings into Radius Arms.

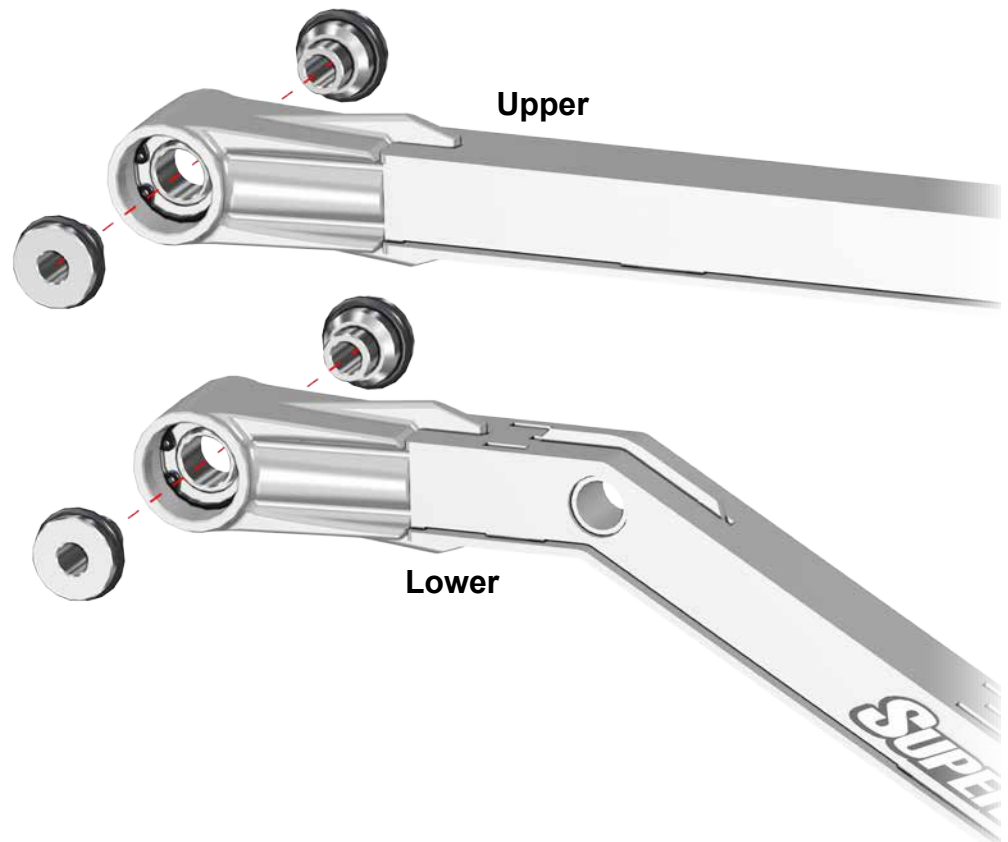

Keep all stock hardware removed from machine.




Installation:

- If machine **does not have** SuperATV RB-P-RZR1K or RBG-P-RZR1K-001 Rear Bumper, install Arms as shown.



- If machine has SuperATV RB-P-RZR1K or RBG-P-RZR1K-001 Rear Bumper, **DO NOT INSTALL PROVIDED SPACERS.**

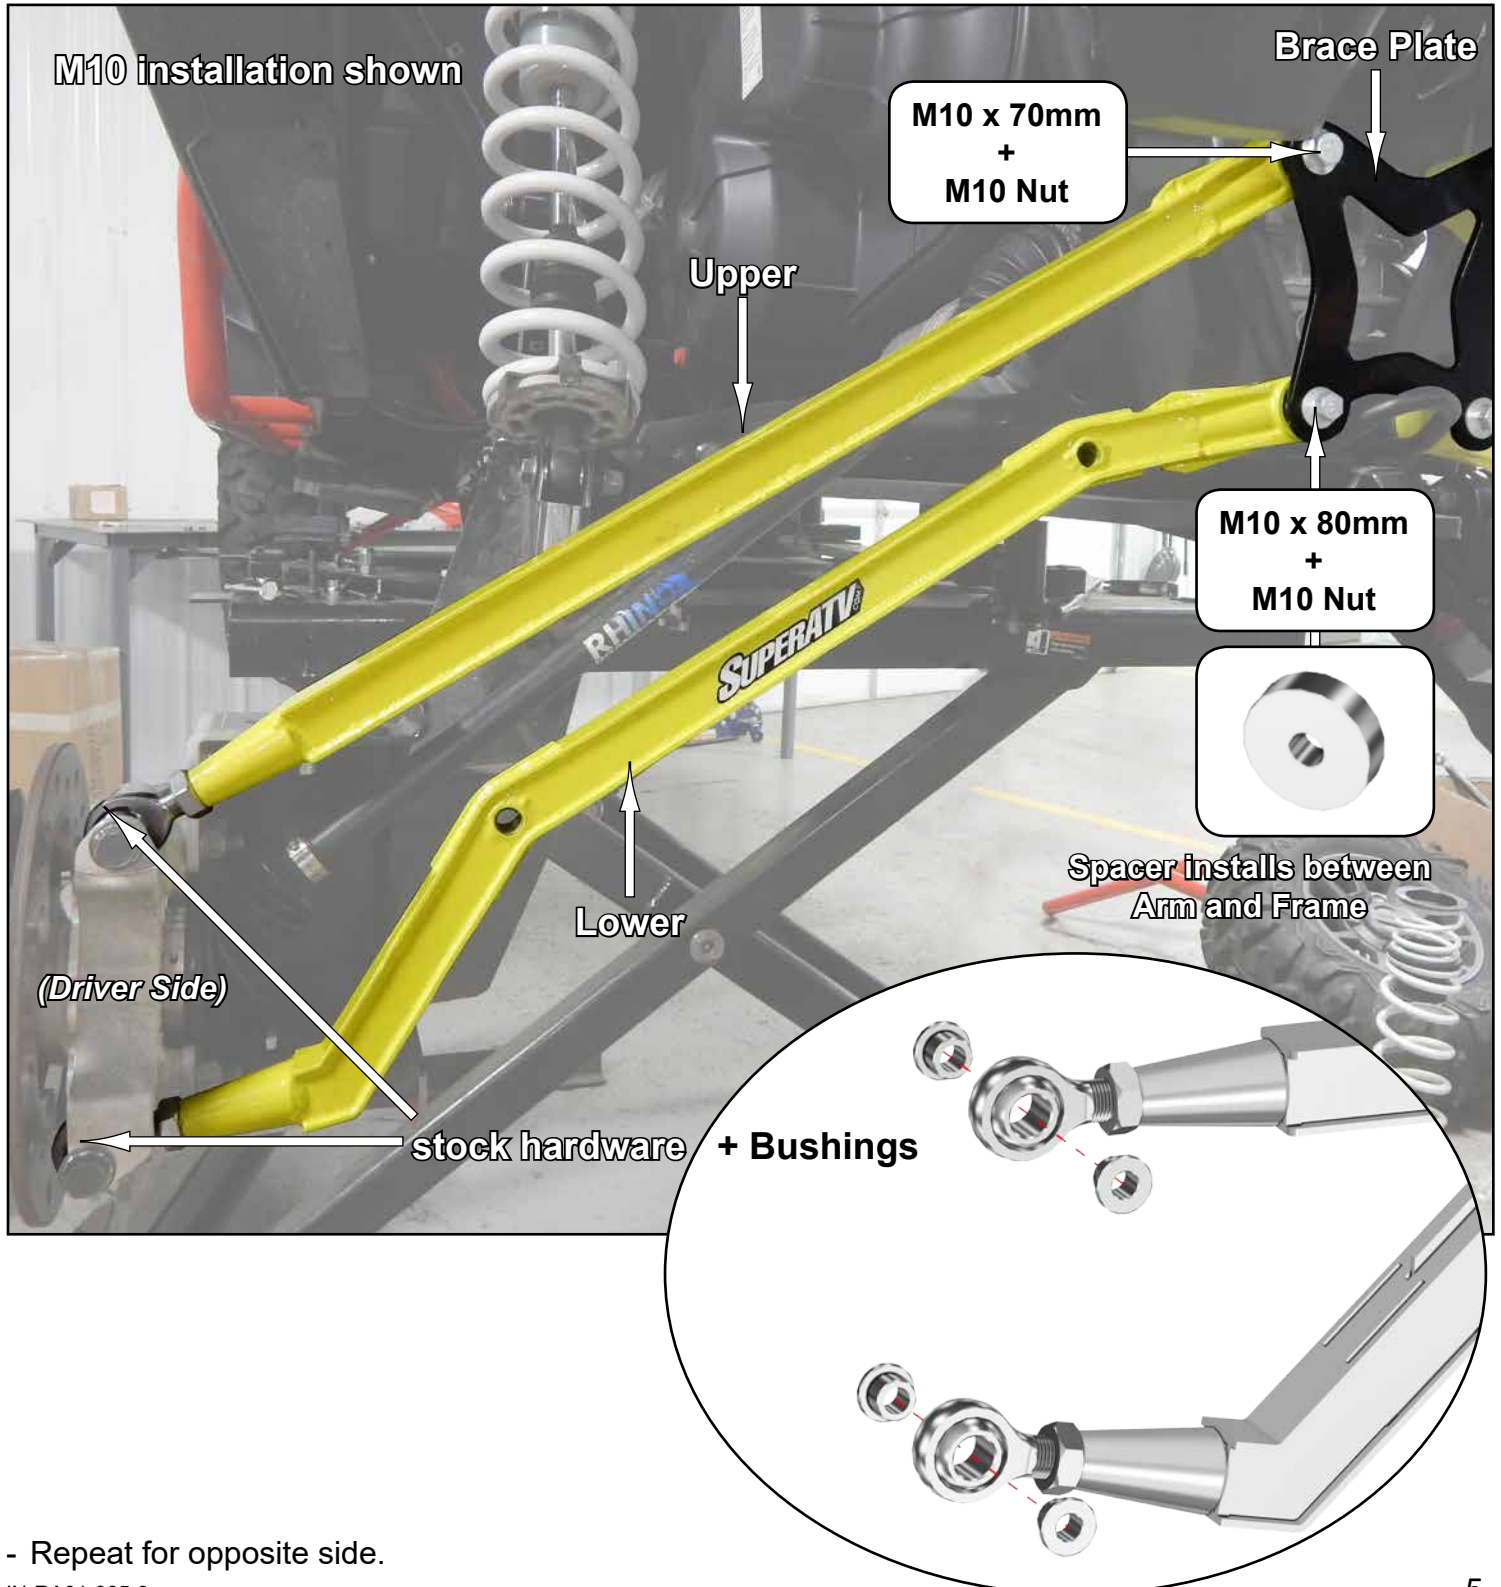

- Repeat for opposite side.


Radius Arms Adjustment:

- If Wheels and Axles do not rotate freely, equally adjust Radius Arms "out" in small increments.
- Tighten hardware completely.



CAMBER

- Tires must have equal air pressure before making adjustments.
- Adjustments to be made after all suspension components have been completely assembled.
- Tires must not be in contact with ground when making adjustments.
- Perform adjustments in small increments.

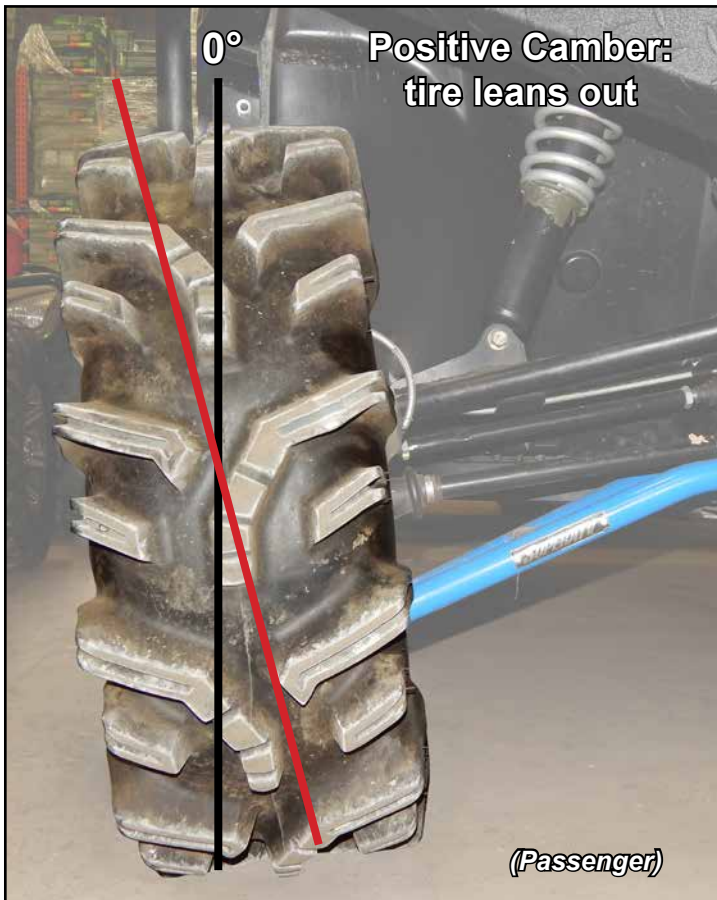

Adjusting Camber:

- Remove A-Arms from Frame and turn Pivot Blocks to adjust camber. Reinstall Arms.
- Lower machine and settle suspension components by rolling machine back and forth several feet at a time.
- Check settings and make small adjustments as needed.
- Each time an adjustment is made, machine must be rolled back and forth to settle suspension components.
- Once desired setting is achieved, tighten hardware completely. Loc-tite on Nuts is recommended.

A NEGATIVE CAMBER SETTING OF 1° to 2° IS RECOMMENDED.

LOWER:

Too much positive camber: adjust Pivot Blocks **OUT**.

Too much negative camber: adjust Pivot Blocks **IN**.

note: 2 full turns is 1°

UPPER A-ARMS:

Too much positive camber: adjust Pivot Blocks **IN**.

Too much negative camber: adjust Pivot Blocks **OUT**.

note: 2 full turns is 1°

