


INSTALLATION INSTRUCTIONS
Rear Trailing Arms: for Polaris RZR[®] XP 1000

Item	Description
A	Trailing Arm, Passenger
B	Trailing Arm, Driver
C	Hub Mount, Passenger
D	Hub Mount, Driver

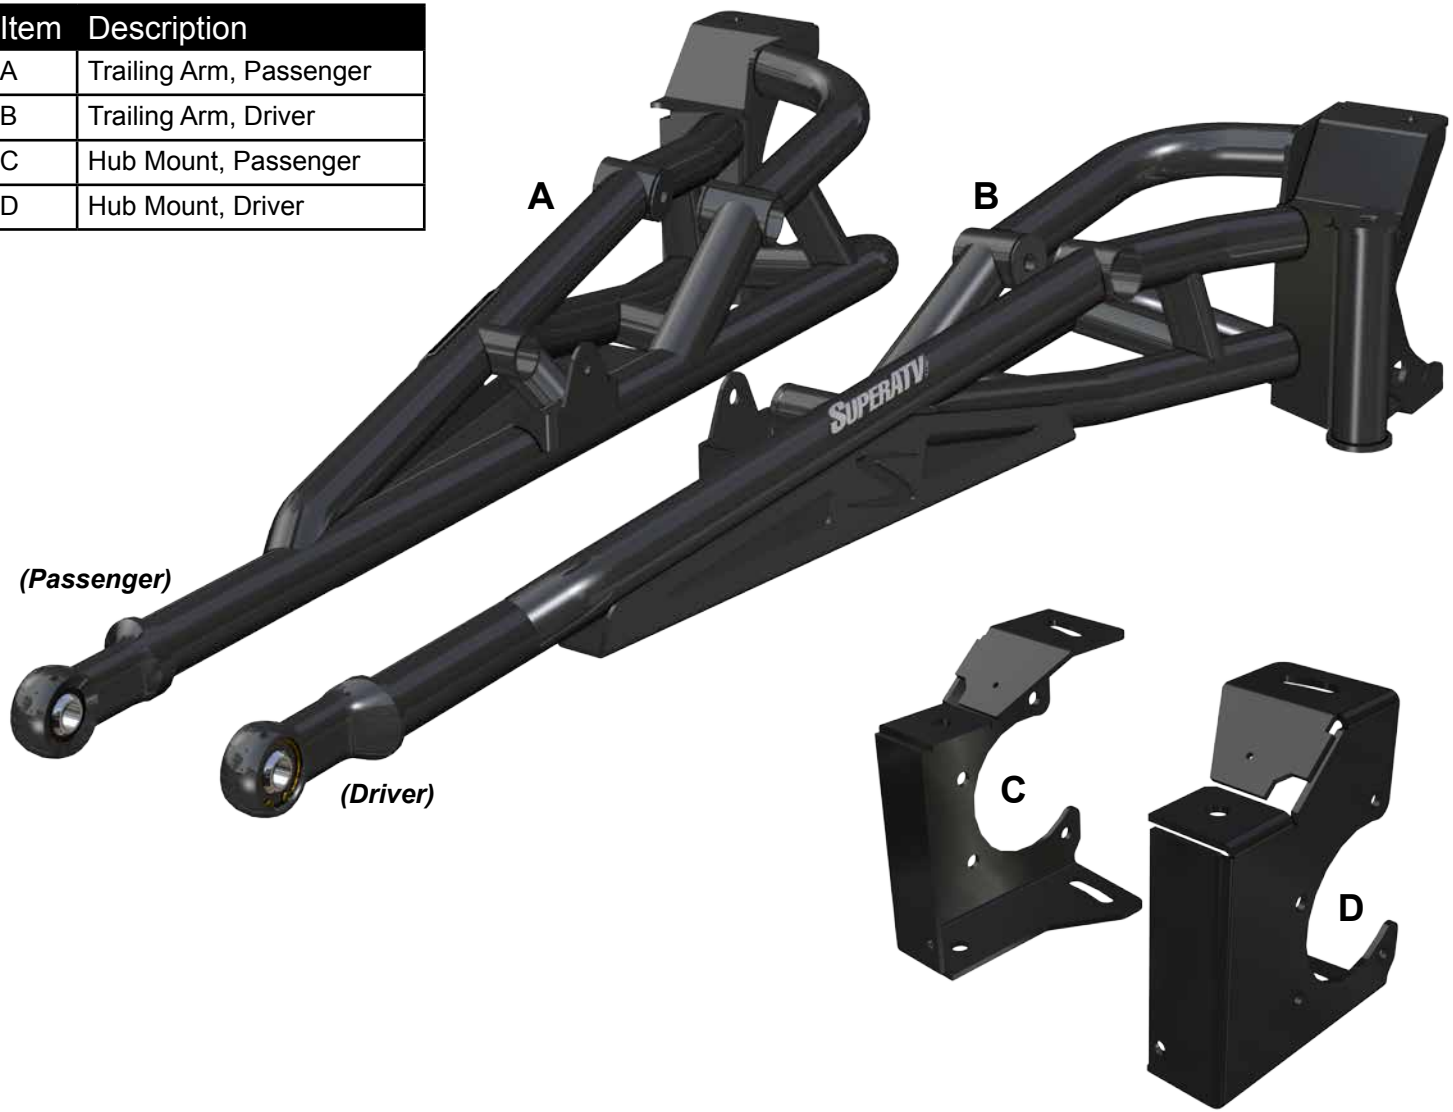

(Kit contents continue on following page)

Need help with your installation?


sales@superatv.com


www.superatv.com


 
 



 1-855-743-3427


 8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

*Thank You
 For Choosing*
SUPERATV.COM[®]

(Kit contents continued)

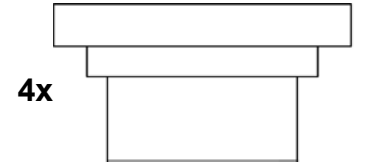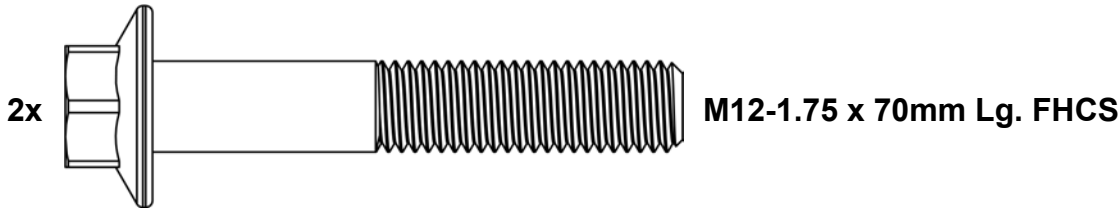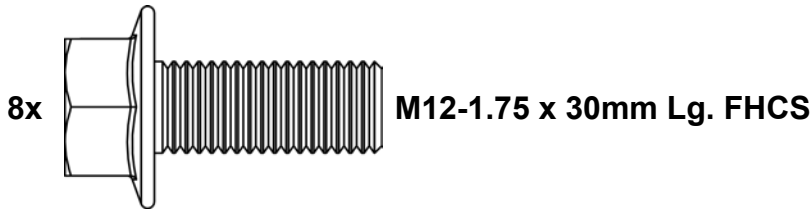

Trailing Arm Bushing



Brakeline Clip and hardware

(some hardware may remain after installation is complete)

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.



By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.


The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Rear components shown must be removed; Keep all components removed from machine.

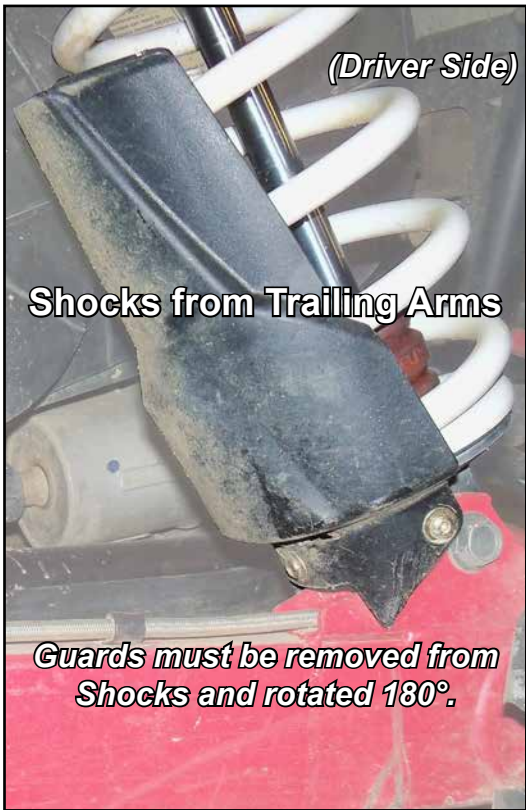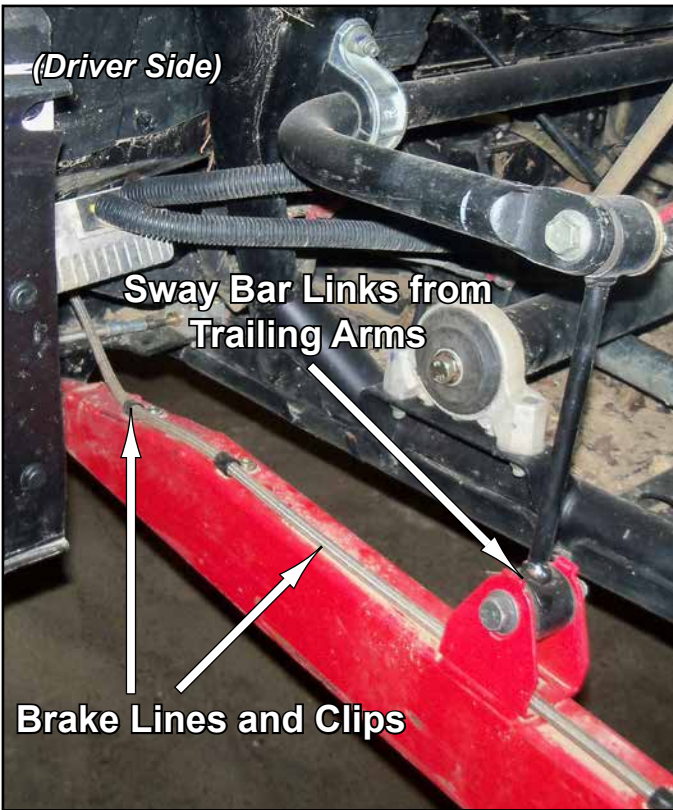


Rear Trailing Arms Installation: *Do not tighten hardware completely unless noted.*

- Install Trailing Arms (A)(B) to Frame with stock hardware and provided Trailing Arm Bushings.
- Install Sway Bar Links to Trailing Arms (A)(B) with stock components and hardware shown.

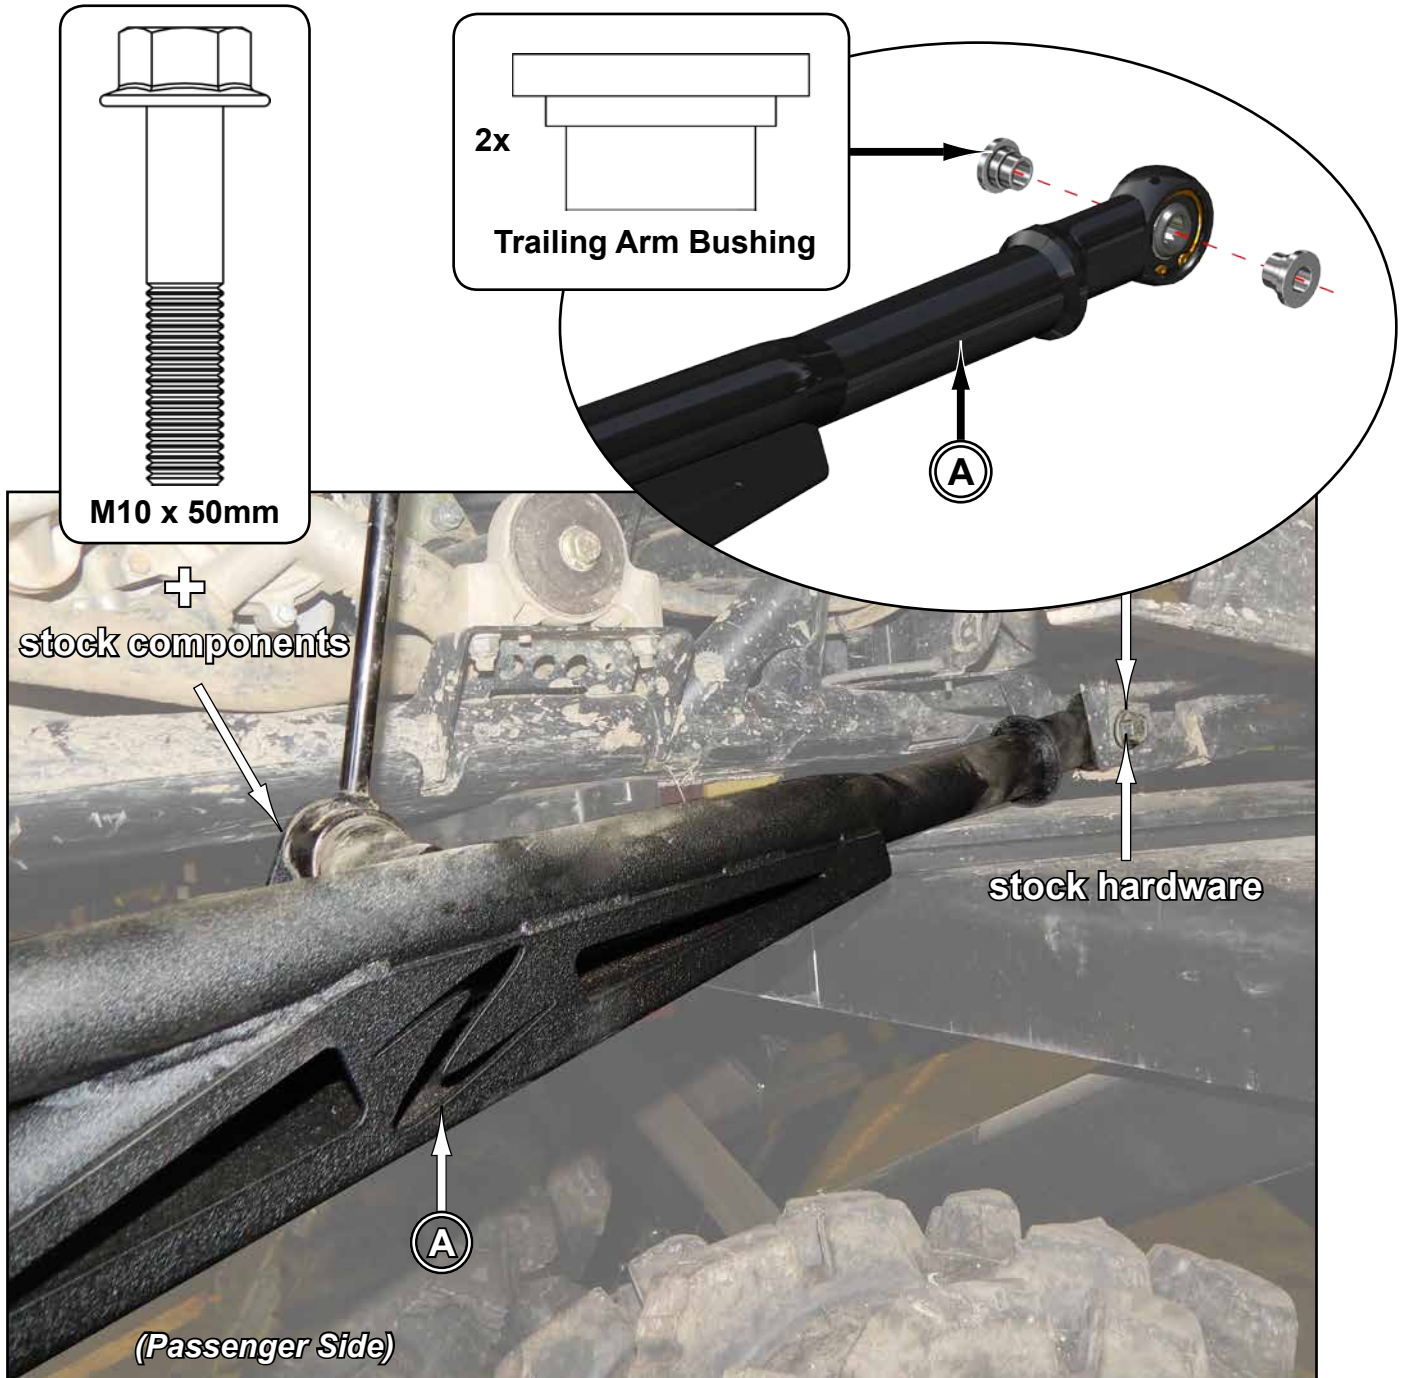

Hub Mounts Installation: *Do not tighten hardware completely unless noted.*



- Install Hub Mount (D) to Trailing Arm (B) with M12-1.75 x 30mm Lg. FHCS and M12-1.75 Nylock Nuts.
- Install M8-1.25 x 45mm Lg. Set Screw and M8-1.25 Nut into Trailing Arm (B).

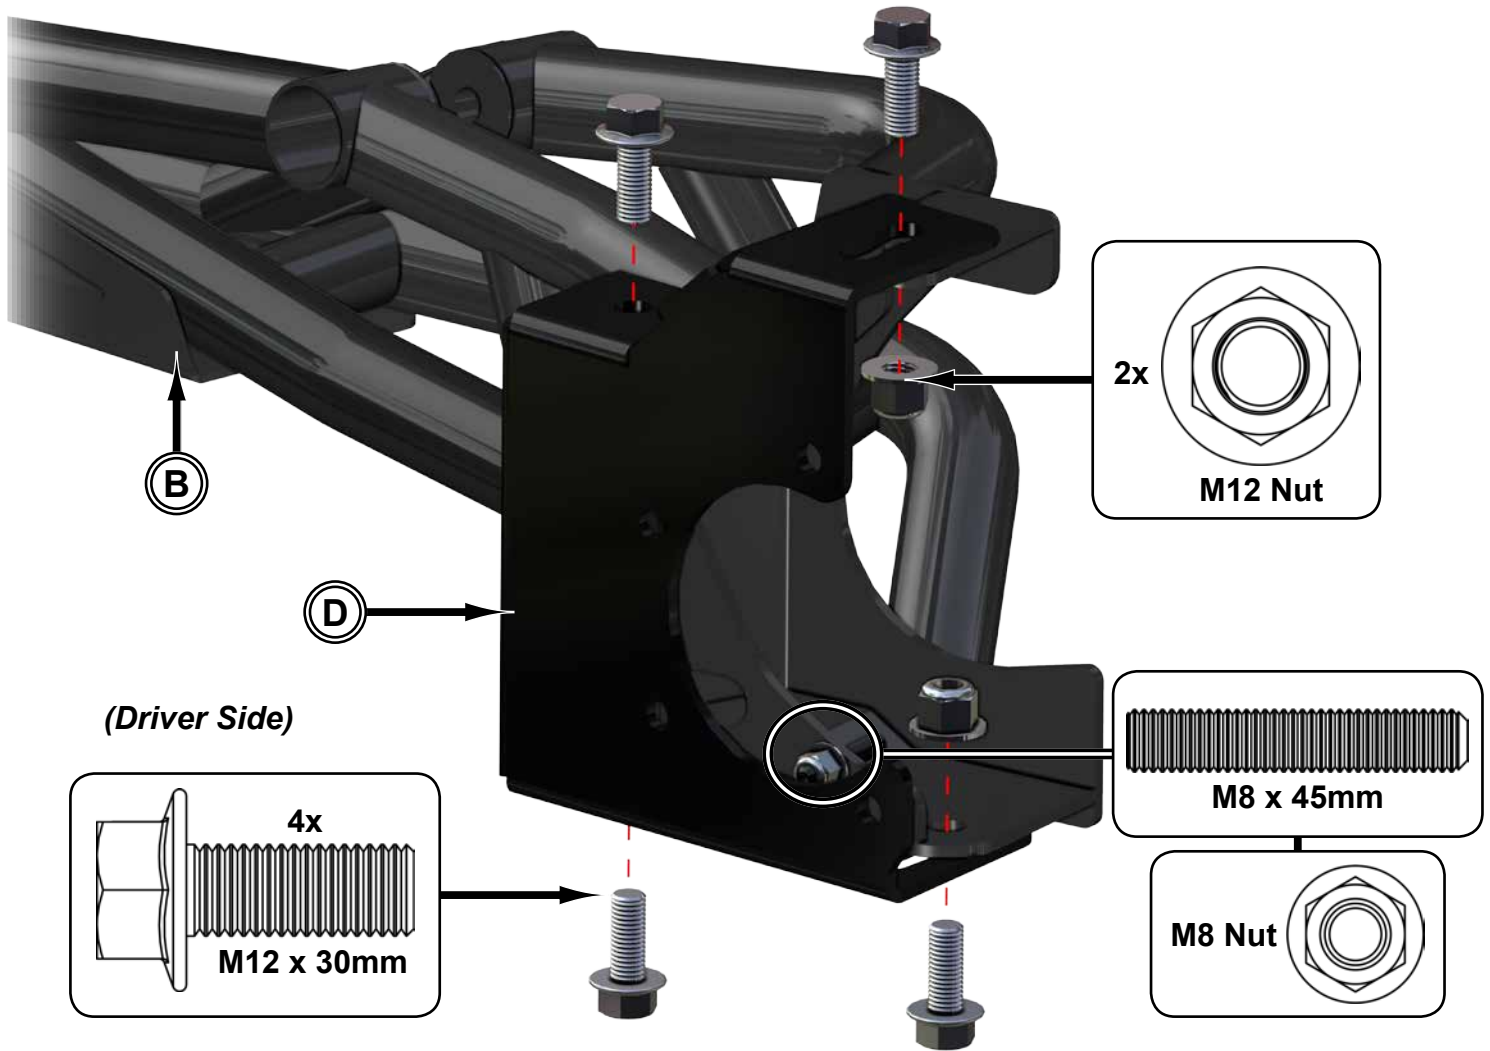

Use stock hardware and reinstall:

- Wheel Bearings
- Axles
- Calipers
- Radius Arms



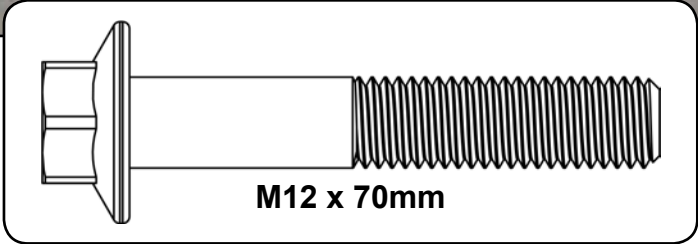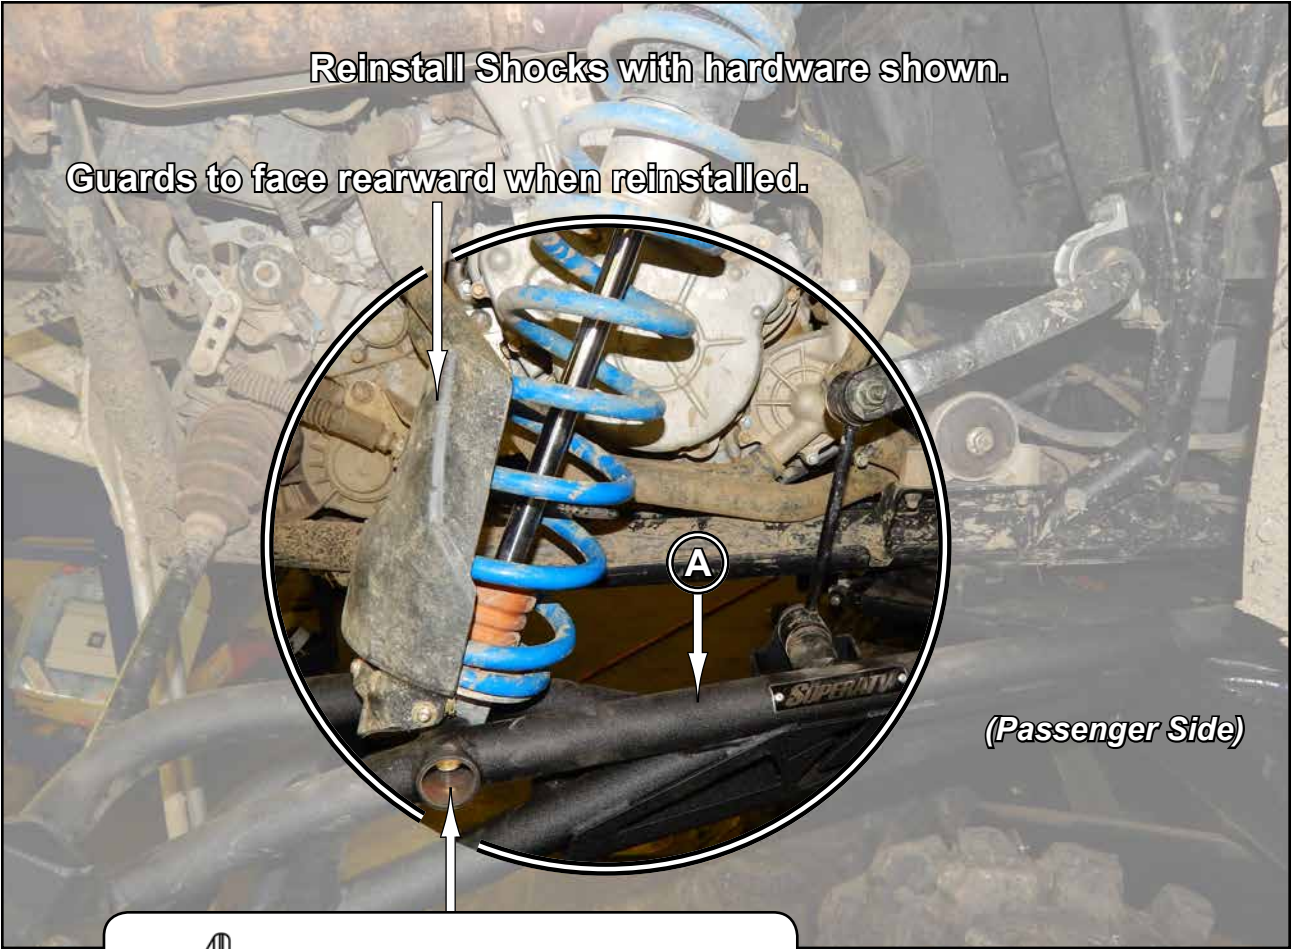

Hub Mount Adjustments: *Do not tighten hardware completely unless noted.*

1. Adjust Set Screw as shown.
2. Repeat steps for opposite side.
4. Install Wheels and set machine on ground.
5. Check Toe; if adjustment is required, raise machine and adjust Set Screws. Set machine on ground and recheck Toe.
6. Once Toe is set, raise machine, remove Wheels, and tighten ***all*** hardware completely.

(Driver Side)

**Adjust until there is approximately 20mm
between Trailing Arm and Hub Mount;
*Number may differ slightly for users machine.***

Ⓓ

Ⓑ



Rear Brake Line securing:

- Secure Brake Lines to Arms with hardware shown.

