



131 County Rd. 34 E. Jackson MN, 56143 1.800.446.8222
www.eagleplows.com

2891 - CF MOTO UFORCE 1000 PLOW MOUNT

Use the attached page to help with part identification during installation. We recommend using Loctite (Blue) on all fasteners.

Tools:	
1/2" Wrench	15mm Socket
1/2" Socket	Ratchet

Plow Mount Installation:

If there is a bolt-on front receiver installed on the lower front metal bumper, remove it before installing this plow mount.

STEP 1: Remove the two flange head hex bolts directly underneath the front metal bumper. Lift the plow mount (Item 1) up to the front of the machine and line the two slots in the bottom of the plow mount up with the holes where the bolts were just removed from. Place a lock washer (Item 4) and flat washer (Item 12) on each of the M10 x 35mm hex bolts (Item 8). Insert the bolts through the slots in the plow mount and thread into the machine. Do not fully tighten.

STEP 2: Line the four holes in the top of the plow mount up with the four holes in the front lower metal bumper. Place a 5/16 flat washer (Item 7) on each of the 5/16 x 1" hex bolts (Item 6). Slide the backer plate (Item 2) on the inside of the front bumper with the cutout up and line the holes up with the holes in the bumper. Insert the bolts through the slot in the plow mount, through the corresponding holes in the bumper, and through the hole in the backer plate. Start a 5/16 serrated flange nut (Item 5) on the bolt. Do not fully tighten. Repeat for the three remaining holes.

STEP 3: Square the mount up to the front of the machine and then fully tighten all of the hardware working in a crisscross pattern to keep the mount straight.

Attaching the Push Tube to the Plow Mount:

STEP 1: Roll the UTV over the push tube assembly.

STEP 2: Lift the push tube up to the plow mount and line the holes in the ears on the push tube up with the holes in the ears on the plow mount.

STEP 3: Insert each of the 3/4 x 2" clevis pins (Item 10) through the holes and secure in place using the hair pin clips (Item 11).

STEP 4: Attach the lift system of choice and the plow is ready for use.

Removing the Push Tube from the Plow Mount:

Reverse the previous steps to remove the push tube. Once the 3/4" pins are removed, place them back into the holes on the push tube assembly with the hair pin clips to prevent them from getting lost when the plow is not in use.


Additional Notes:

- (Optional) Mount the cable stop (Item 3) using the wire clip (Item 9) along the winch cable to prevent interference between the plow system and the machine when the plow is lifted.

It is the operator's responsibility to periodically check all fasteners/mounting hardware to ensure none have come loose during use and to check for any signs of wear.

Do NOT plow at speeds over 5mph. Doing so will void warranty on any parts that become damaged or break.

ITEM NO.	PART NUMBER	QTY	DESCRIPTION
1	2891-6	1	PLOW MOUNT WLDMT, UFORCE
2	2891-7	1	BACKER PLATE, UFORCE 1000
3	3918-4	1	CABLE STOP
4	H3566	2	LOCKWASHER, 7/16" HELICAL SPR., ZINC
5	HDW114	4	NUT, 5/16-18UNC HEX FLG SERR., ZINC
6	HDW122	4	BOLT 5/16-18UNCx1" HEX Z GR5
7	HDW154	4	WASHER, 5/16" FLAT, SAE, Z
8	HDW870	2	BOLT, M10-1.5 X 35 HEX HD, ZINC
9	HDW1247	1	3/16 IN WIRE ROPE CLIP
10	HDW1260	2	CLEVIS PIN, 3/4 X 2, ST,ZN
11	HDW1261	2	HAIRPIN, Ø1/8 X 2-1/2" Z
12	HDW1562	2	WASHER, 7/16" FLAT, SAE ZINC

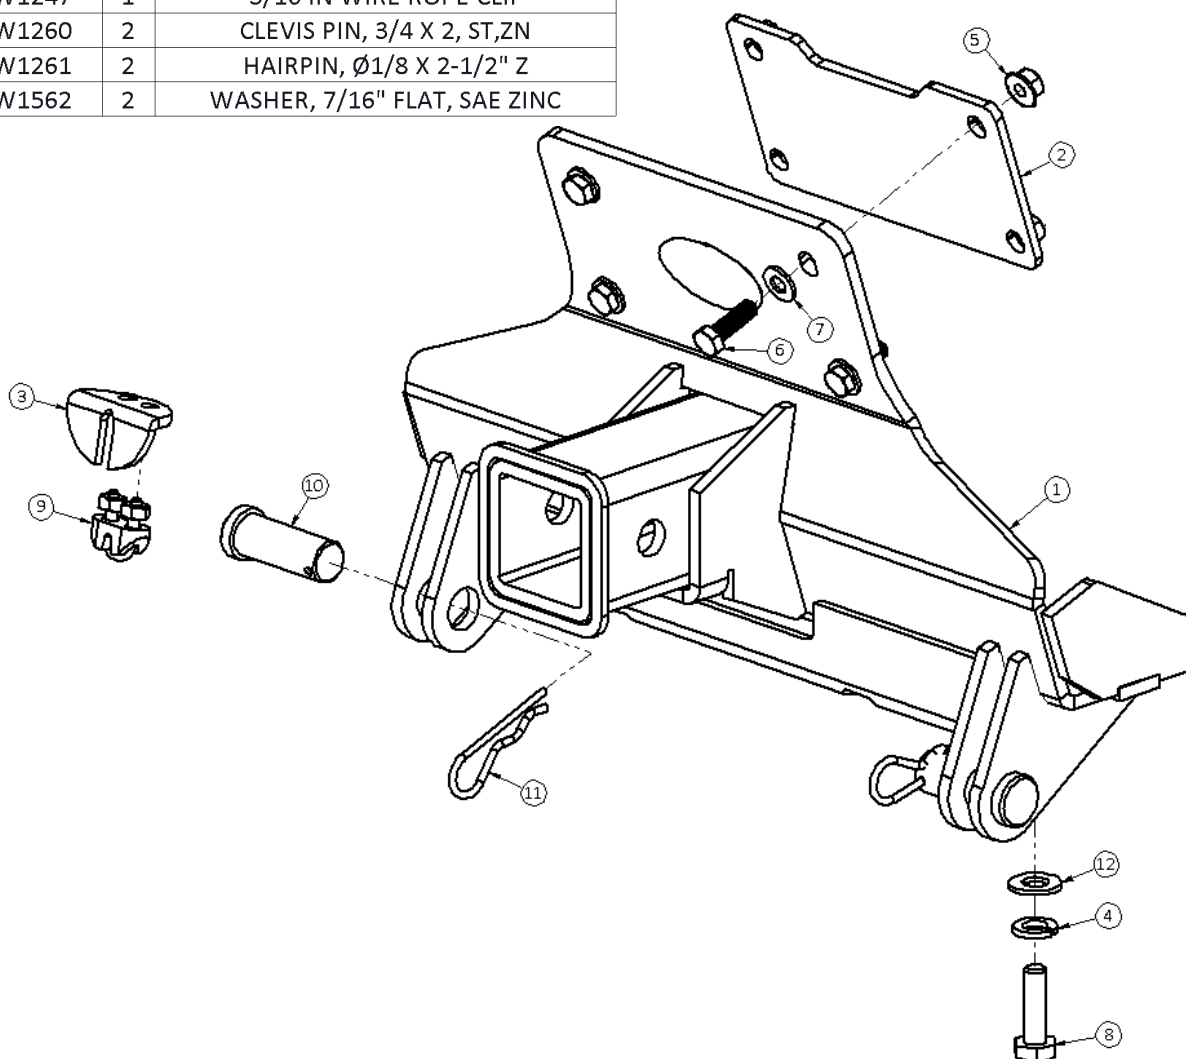



131 County Rd. 34 E. Jackson MN, 56143 1.800.446.8222
www.eagleplows.com

2872 CF Moto Plow Mount Instructions

TOOLS NEEDED

1/2" WRENCH OR SOCKET

PLOW MOUNT INSTALLATION (use attached page to help with part identification during installation)

- STEP 1: Remove the plastic bumper cover from the front of the UTV
- STEP 2: Loosen the bottom bumper bolts and attach the plow mount (Item 1) by reusing these bolts in the two slotted holes on the plow mount.
- STEP 3: Place each of the 5/16" X 1-1/2 X 2-1/4" U-bolts (Items 6) around the front bumper tubes and through the slotted holes on the plow mount. Secure the bolts using the 5/16" flat washers (Item 3) and nylock nuts (Item 2).

ATTACHING THE PUSH TUBE

- STEP 1: Roll the UTV over the push tube assembly.
- STEP 2: Lift the push tube up to the plow mount and line the holes up on the push tube and ears on the plow mount.
- STEP 3: Insert 3/4" pins (Item 4) into the holes and snap the hair pin clips (Item 5) into the 3/4" pins.
- STEP 4: Attach the lift system of choice and the plow is ready for use.

REMOVING THE PUSH TUBE

Reverse the above listed steps to remove the push tube. Once the 3/4" pins are removed, place back into the holes on the push tube assembly with the hair pin clips so they are not lost when the plow is not in use.

Periodically check all mounting hardware to make sure the plow mount is properly secured to the UTV.

It is the operator's responsibility to periodically check all fasteners/mounting hardware to ensure none have come loose during use and to check for any signs of wear.

Do NOT plow at speeds over 5mph. Doing so will void warranty on any parts that become damaged or break.

ITEM NO.	PART NUMBER	QTY.	DESCRIPTION
1	2872-3	1	PLOW MOUNT
2	HDW152	4	NUT, 5/16"-18 NYL-INS HEX, GR5 ZN
3	HDW154	4	WASHER, 5/16 FLAT SAE, ZN
4	HDW1260	2	CLEVIS PIN, 3/4 X 2, ST,ZN
5	HDW1261	2	HAIRPIN, Ø1/8 X 2-1/2" Z
6	HDW1765	2	U-BOLT, 5/16-18X1-1/2 X 2-1/4,RD,ZN

