


INSTRUCTION SHEET

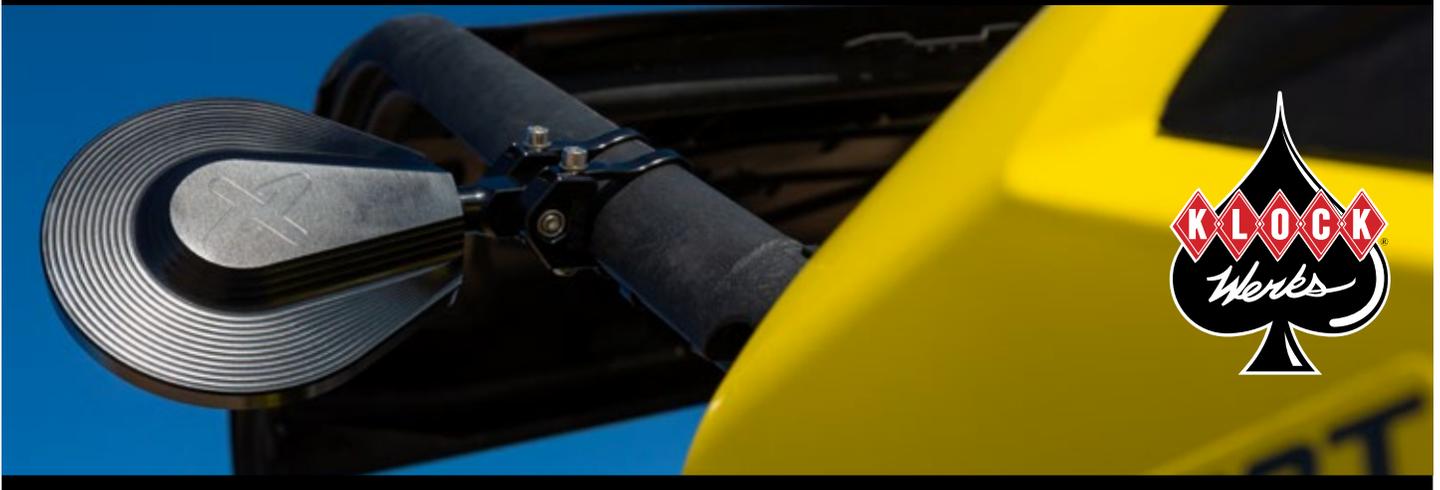

UTV MIRROR KIT FOR RANGER, GENERAL, DEFENDER, AND MAVERICK

Polaris Pro-Fit and Can-Am Profiled Roll Cage Tubing

INCLUDED COMPONENTS:

- (2) Outward Clamps
- (1) 6" Panoramic Mirror
- (1) Instruction Sheet

TOOLS FOR INSTALLATION:

- + 6mm Allen wrench
- + 5mm Allen wrench

QUESTIONS?

-  **EMAIL:**
info@getklocked.com
-  **CALL:**
(605) 996.3700



OUTWARD CLAMPS



6" PANORAMIC MIRROR

1. Following the instructions on the Axia clamp installation card, install the clamps onto the A-pillar
2. Choose the desired height of your mirror and position the top clamp accordingly
3. Install the mirror into the clamps and secure with the supplied hardware

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.