

Installation & Operations Manual for Pursuit Side View Mirror

Contents:



Left Mirror and Clamp Assembly

Right Mirror and Clamp Assembly

Installation:





Temporarily remove this socket head bolt using a 8mm Allen Wrench




Open clamp and place around roll cage tube. Make sure the rubber shim is in place in the thick half of the clamp.

Close clamp around roll cage tube, put the bolt through the hole, and place large rubber washer over the end of the bolt.

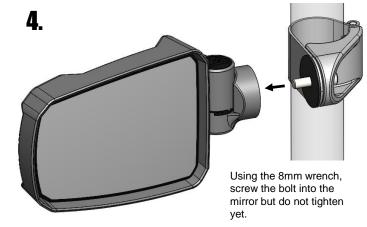

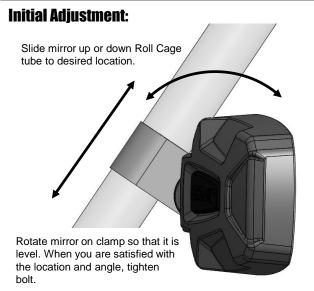

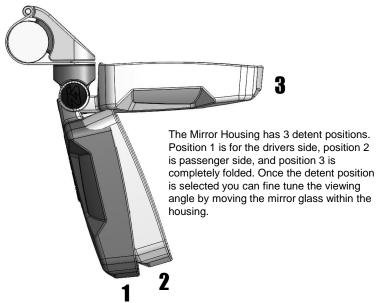





Repair and Maintenance


Tightening Mirror Housing Folding Feature

To tighten the folding feature of the mirror, gently pry off the SZ cap as shown and tighten nut.

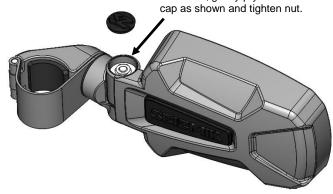

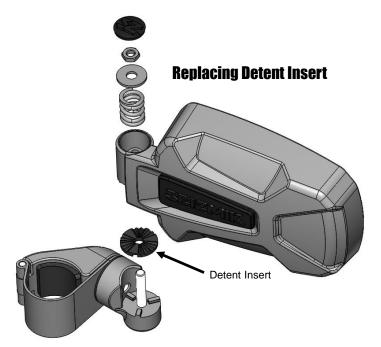

If for any reason the Mirror Detent Insert ever becomes worn enough that the mirror will not hold position well, please contact us for free replacements. It can be replaced by first removing the nut shown in the previous step. Next, remove the Mirror Housing, Spring, and Washer. The Detent Insert can now be gently pried off and replaced. The detent is designed so it can only go on one way.

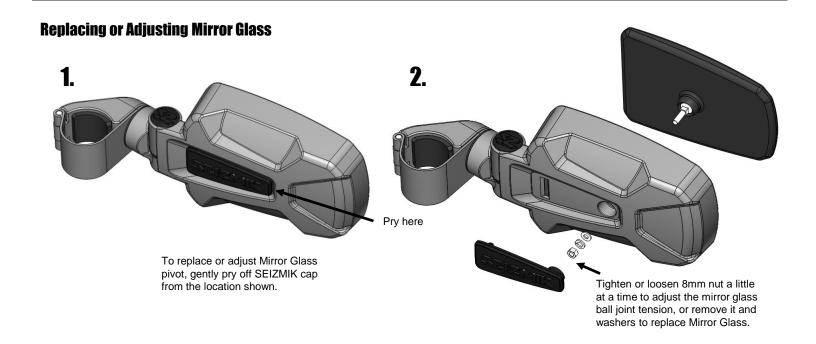

Seizmik makes Windshields, Doors, Tops, Hood Racks, and other great accessories for utility vehicles & side x sides. Our products are engineered tough for long life and tested under the harshest of conditions.

Seizmik products are designed, developed and manufactured by Vialink Corp. If you have any questions, comments, need assistance, or are missing parts, please call 1-866-838-3366 between 9:00AM and 5:00PM EST. You can email us at support@seizmik.com.