




Embark Mirror # 18106 – Pro-fit Clamp

Installation & Operations Manual for Embark Mirror

Contents:

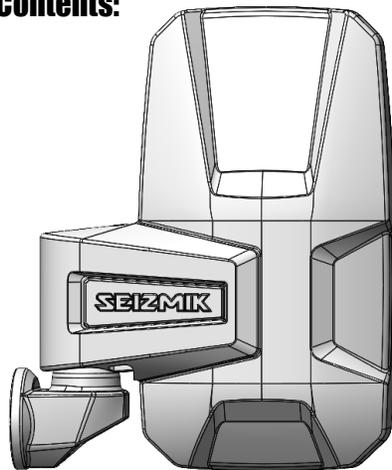

Left Mirror



Right Mirror




(Driver side)
Pro-fit Roll cage clamp



(Passenger side -
slightly longer) Pro-fit Roll
cage clamp



M10x25mm Socket
head Bolts (4)



M10x20mm Hex
head bolt (2)




Metal washer (2)



Rubber washer (2)

Installation:


1.

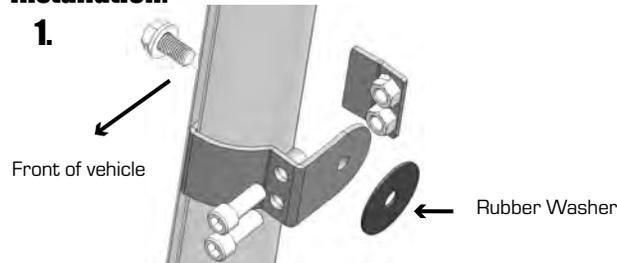

Front of vehicle


Disassemble clamp by removing the two 8mm socket head bolts. Place curved half of clamp against roll cage in desired mirror location. Insert bolts and thread into clamp plate with the welded nuts facing the bolt heads. Assemble loosely.

2.

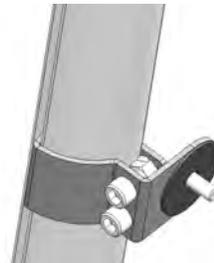


Put mirror mounting bolt through hole and place large rubber washer on the end of the bolt.

3.

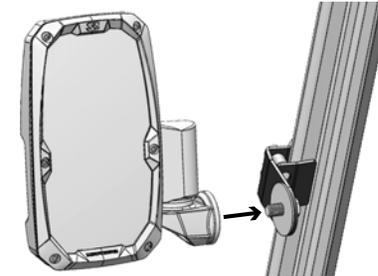


Bolt the mirror to the clamp but do not fully tighten yet.

4.

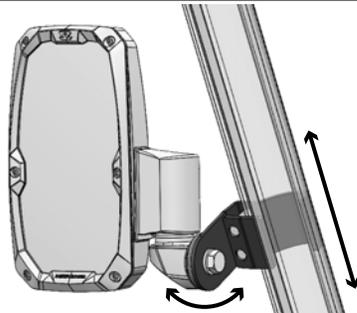


Slide mirror up or down Roll Cage tube to desired location. Rotate mirror on clamp to desired angle. When you are satisfied with the location and angle, tighten bolt.

5.

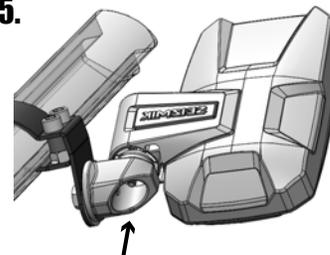

To tighten the folding feature of the mirror, tighten tension adjustment nut on the bottom of the mirror arm.

6.

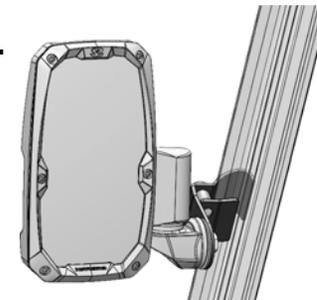

Make the final adjustments and fully tighten mirror mounting bolt.

Seizmik makes Windshields, Doors, Tops, Hood Racks, and other great accessories for utility vehicles & side x sides. Our products are engineered tough for long life and tested under the harshest of conditions.

Seizmik products are designed, developed and manufactured by Vialink Corp. If you have any questions, comments, need assistance, or are missing parts, please call 1-866-838-3366 between 9:00AM and 5:00PM EST. You can email us at support@seizmik.com.