

RPM



**20-24 RPM Pro Series
Ram Air Hood**

Tools Needed:

- Ratchet
- T40 Bit
- Your choice of plastic or fabric cutting/trimming tools


20-24 RPM Pro Series Ram Air Hood	1
20-24 RPM Pro Series Ram Air Hood	1

Note: The installation of this hood is fairly straight forward, however, there is some minor trimming required on Pro R models. For Pro XP owners, there is optional cutting of plastics as outlined in these instructions to allow full use of the hoods ram air capabilities.


Step 1: Remove 2 T-40 screws as highlighted below. Lift up on rear of hood, slide back, and remove hood from vehicle



Step 2 for Pro R: trim the inner liner as shown below

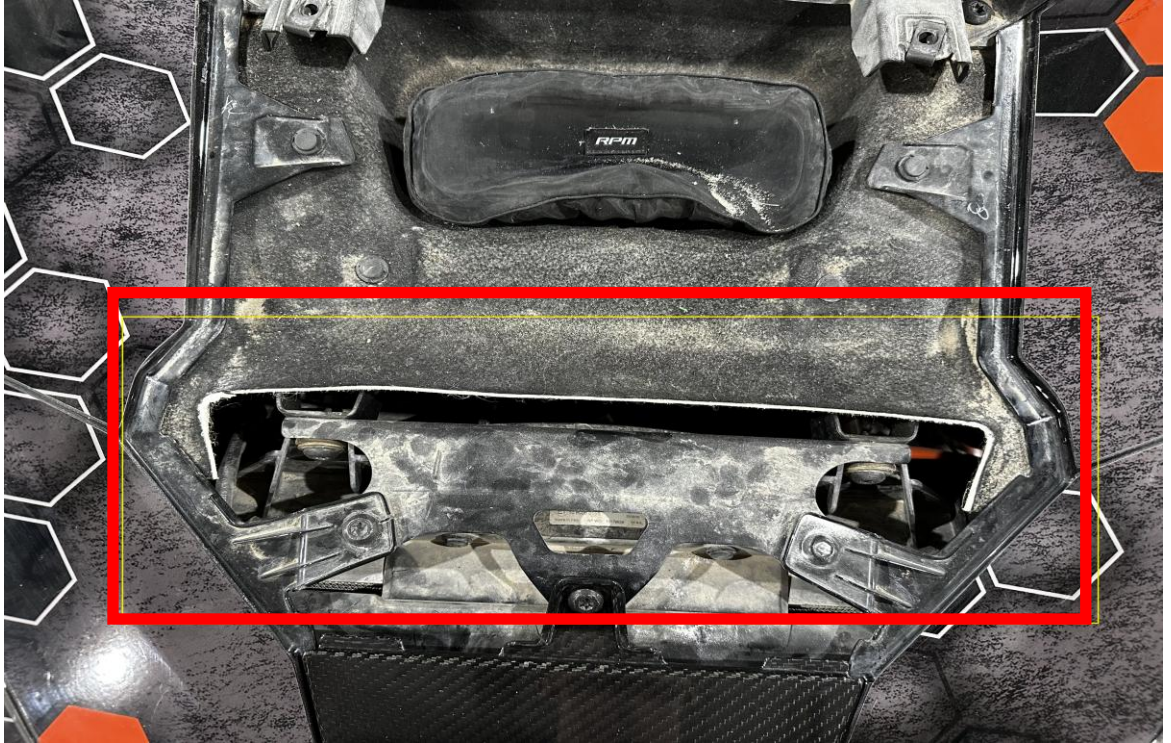

Step 2 for Pro XP: This step is optional but will force cool air down the front of the firewall creating a cooling effect. Trim the recessed area highlighted below with your choice of cutting tool.

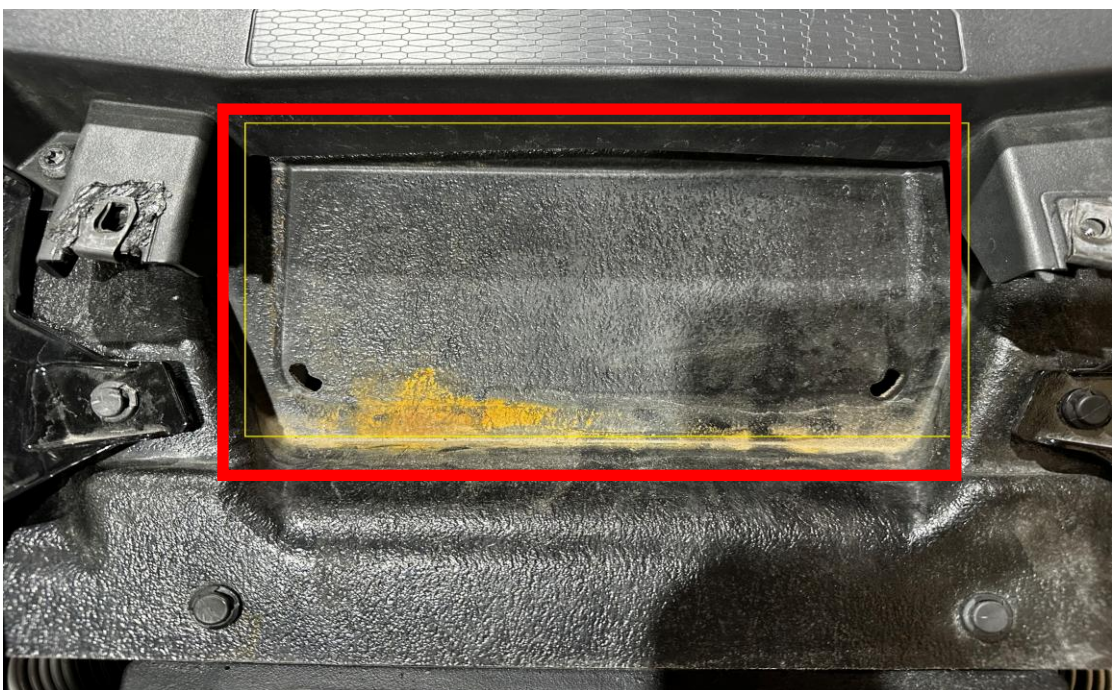

Step 3: Install in reverse order of removal and enjoy making your friends jealous of your new, functional, carbon fiber ram air hood!

