


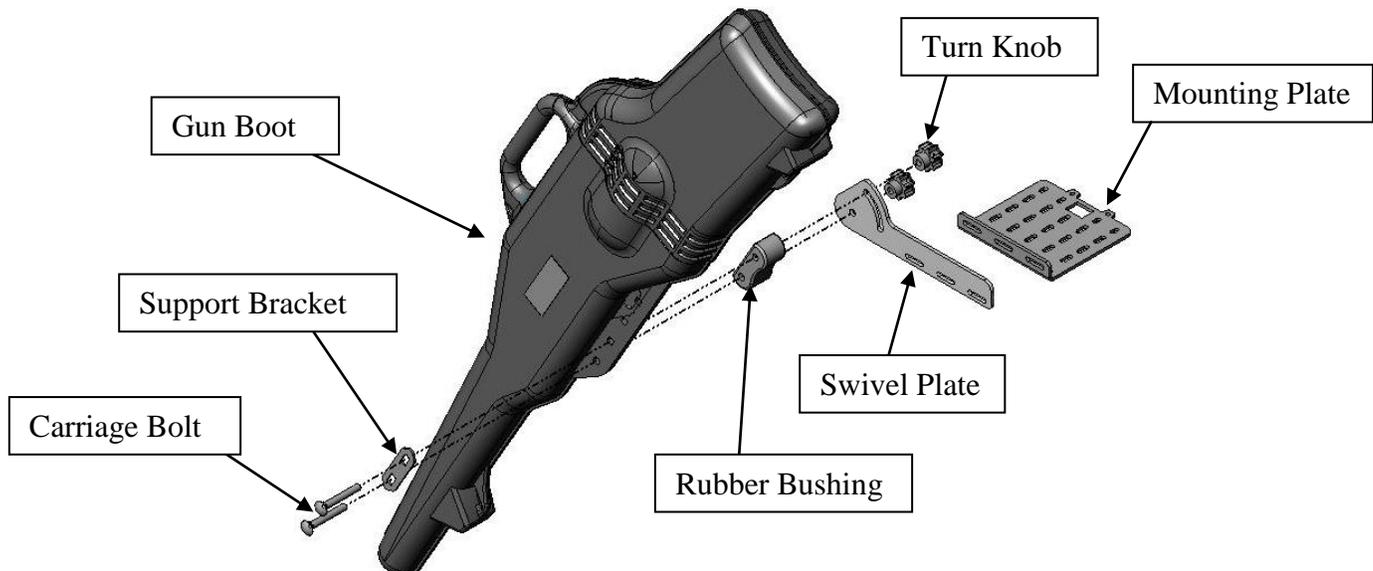

## 20053 – KOLPIN GUN BOOT 4.3

NO.	Description	QTY.
1	Gun Boot	1
2	Mounting Plate	1
3	Swivel Plate	1
4	Support Bracket	1
5	Rubber Bushing	1
6	3/8" Carriage Bolt	2
7	3/8" Turn Knob	2
8	3/8" Washers	2
9	1/4" – 20 U-Bolt	3
10	1/4" x 3/4" Truss Head Bolt	2
11	1/4" - 20 Nylock Nut	8
12	1/4" Washer	10
13	Pin Lock	1
14	Rubber Caps	6



### **Bracket Assembly Instructions:**

1. Attach the Swivel Plate (#2) to the Mounting Plate (#3) (as shown below) to best accommodate your ATV, using (2) 1/4" x 3/4" Truss Head Bolt and (2) 1/4" Washers and Nylock Nuts. Slots are provided for individual fitment to each machine.

2. Attach the Mounting Plate to your ATV using (3) 1/4" – 20 U-Bolts, under the rack and up through the Mounting Plate and secure using the (6) 1/4" Nylock Nuts and (6) Washers. Tighten Securely. Place the Rubber Caps over the protruding threads of the U-Bolt.



FYI: The Gear Lock and Load Plate (Sold Separately) is made to accept the Metal Mounting Plate. Simply slide the Mounting Plate into the slots of the Gear Lock and Load until you hear it snap. The snap is made by the square hole in the Metal Mounting Plate engaging the tab on the Gear Lock and Load. To remove, press the tab on Gear Lock and Load and slide out the entire Gun Boot Bracket.

**Gun Boot Mounting Instructions:**

1. To attach the Gun Boot to the Bracket, use the (2) 3/8" Carriage Bolts through the Support Bracket, then the Gun Boot and finally through the Rubber Bushing. Be sure that the Rubber Bushing has the flat side up towards the bottom of the Gun Boot.
2. Now place the Carriage Bolts through the single hole and slot on the Swivel Plate as pictured above in the exploded view. Secure the carriage bolt with (2) 3/8" Turn Knobs and 3/8" Washers provided. Tighten Securely. The knobs allow you to adjust your Gun Boot angle, or remove your Gun Boot without any tools if necessary.



NOTE: BRACKET CAN BE USED ON EITHER SIDE OF THE ATV.