

Kolpin Rhino Grip Pro - Universal Mount

Product Instructions | Part No: 21560

Kit contents:

Item	Qty	Part Description	Part Number
1	2	Rubber Strap	-
2	2	Rhino Grip	KOL21560
3	2	Side Pivot Block, Screw Guide	KOL21561
4	2	Side Pivot Block, Nut Holder	KOL21562
5	2	Pivot Base	KOL21563
6	2	Thumb Screw	KOL21564
7	2	Bottom Plate	-
8	2	Rubber Pad	-
9	10	M8-1.25 Nylon Lock Nut	-
10	8	M8-1.25 x 40mm LG Button Head Cap Screw	-
11	8	M8-1.25 x 70mm LG Button Head Cap Screw	-
12	2	Flat Washer	-


Install Preparation:

1. Remove the Rhino Grip assemblies from packaging. Verify that the grips are in good condition and that all the hardware is present.

Note: If any hardware is missing, do not return to the store.

Call us to help, Toll Free 1-877-956-5746.

These grips are designed to quickly and easily universal mount to any tubular bar including UTV roll cages and ATV racks. The kits fit tubing sizes from 5/8" to 2" in diameter or flat drillable surfaces. The grip can be used in the vertical and horizontal positions. *Note, installation may be easier if certain items are removed from vehicle first.*

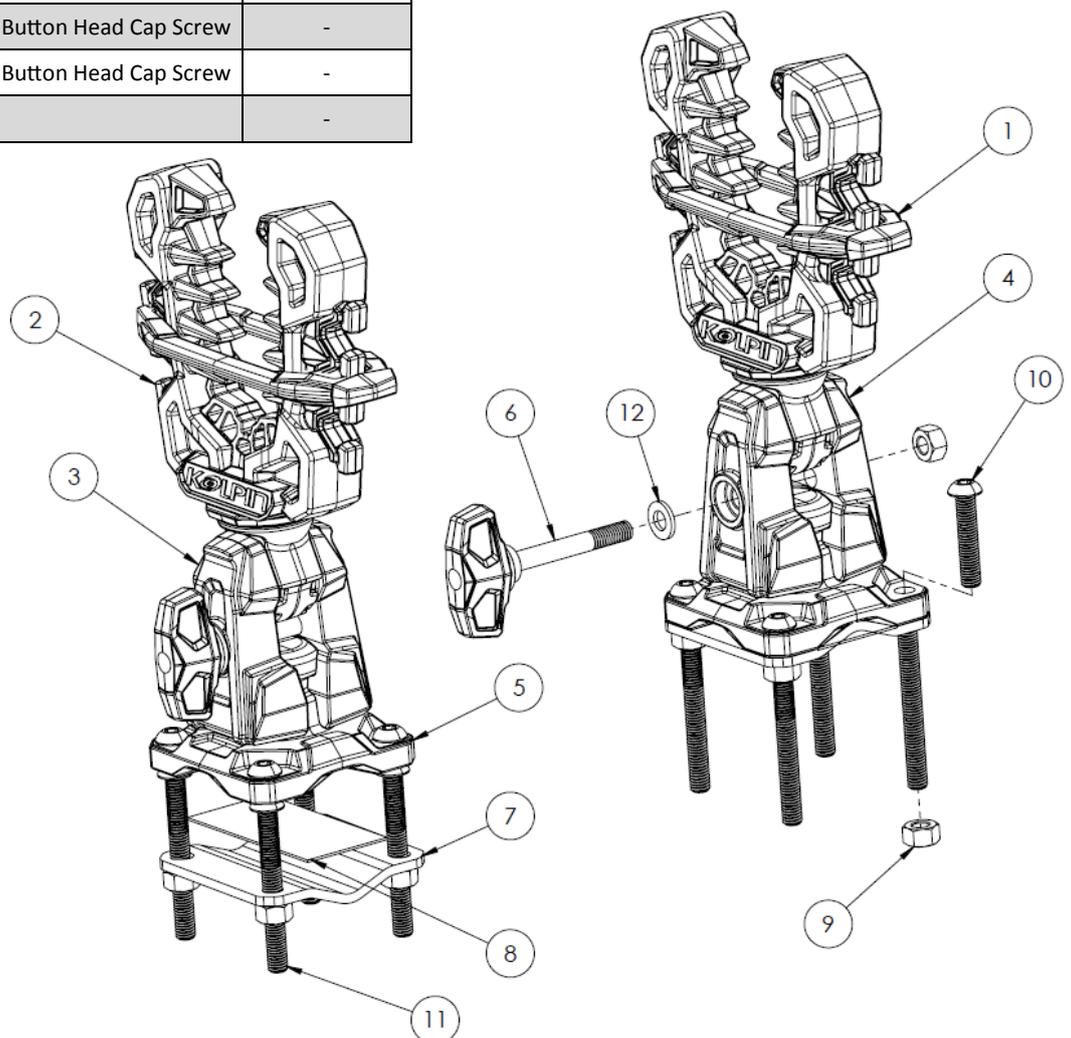

Kolpin Outdoors, Inc. | 9955 59th Ave N | Plymouth, MN 55442

(877) 956-5746 or (763) 478-5800 | www.kolpin.com | customerservice@kolpin.com

Mounting Instructions:

1. Position the Rhino Grip mounting bases (items 5) on the roll bar/ rack where desired.
2. The rubber pads (item 8) can be adhered to the inner/concave surface of the bottom plates (item 7). The rubber strips are used to create friction on mounting surfaces to help reduce the possibility to rotate on the roll bar/rack surfaces.
3. Insert the M8 screws (items 10 or 11) thru the main base and thru the bottom plate (item 7). Fasten with the M8 nut (item 9). Repeat three more times.
4. Tighten the four M8 x 70mm long (UTV applications) or 40mm long (ATV applications) cap screws evenly.

WARNING: Do not over tighten hardware or damage can occur.

Operating Instructions:

- **To rotate the grip on its base**

1. Slightly loosen the thumb screw, rotate grip to the orientation of your choice and retighten. *Note, the grip can rotate 360°.*

- **To tilt the grip on its base**

1. Loosen the thumb screw enough to pivot grip within the side blocks to the angle of your choice and retighten. *Note, the grip can tilt 0° to 180° at 45° increments.*

NOTE: Extra hardware is provided for multiple mounting applications.

NOTE: Hardware provided is based on the biggest tube diameter. You may need to trim excess threads once installed. Failure to do so may result damage to your vehicle.

WARNING: Make sure the items carried in your Rhino Grips do not extend below or outside the vehicle frame as severe damage could result to your items if obstructions are encountered.

CAUTION: Always make sure your firearm is unloaded before placing it in your Rhino Grips.

SPARE KITS		Rubber Strap kit	Hardware kit
Item	Description	P/N: 21590	P/N: PUR3336
1	Rubber Strap	2x	
6	Thumb Screw		2x
7	Bottom Plate		2x
8	Rubber Pad		2x
9	M8-1.25 Nylon Lock Nut		10x
10	M8-1.25 x 40mm LG Button Head Cap Screw		8x
11	M8-1.25 x 70mm LG Button Head Cap Screw		8x
12	Flat Washer		2x

For additional assistance, please contact Kolpin customer service department at (877) 956-5746 or (763) 478-5800 or email customerservice@kolpin.com