

EN BUMPER KIT INSTALLATION MANUAL

DE MONTAGEANLEITUNG FÜR STOßFÄNGER KIT



For: Can-Am Defender (2016-)

2444.7621.1





EN Regular fasteners
DE Originale montageile




EN Regular fasteners
DE Originale montageile




EN Screw a several turns
DE Für wenigen Umdrehungen
befestigen



EN Loosen bolts
DE Bolzen lockern

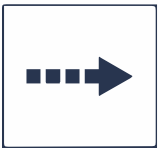

EN Movement Arrow
DE Bewegungsrichtung

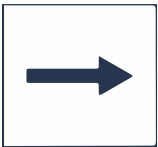











EN Location/Position Arrow
DE Anordnung/Positionsrichtung





EN Screw Arrow
DE Drehungsrichtung


 EN Ratchet DE Ratsche	 S - 10; S - 13	 HEX S - 4; S - 5	 EN Office Knife DE Büromesser
--	---	--	--




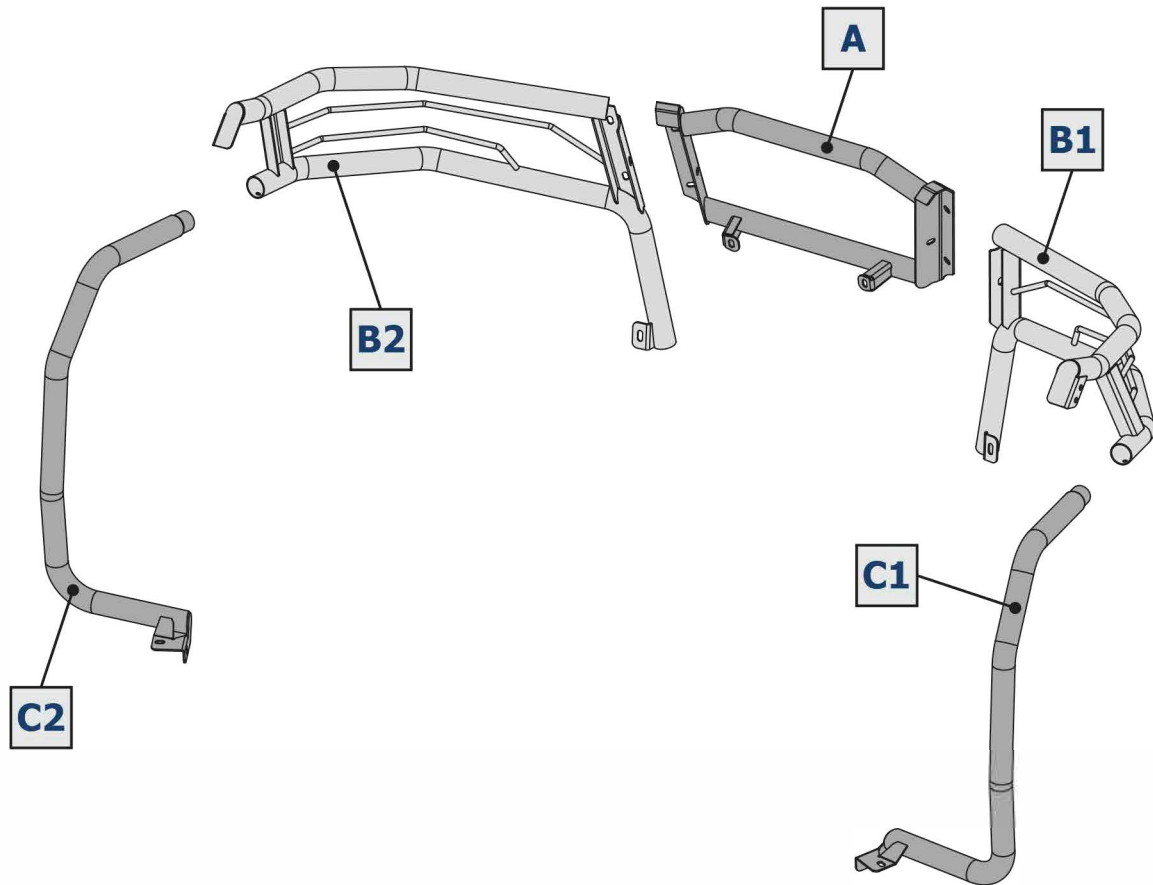




D1  x1	D2  x1	E1  x1	E2  x1	1  M6 x4	2  M8 x4
3  M6 x2	4  x2	5  x2	6  M6x20 x6	7  M8x25 x16	8  M8x50 x2
9  M8x70 x4	10  Ø6 x2	11  Ø6 x4	12  Ø8 x16	13  Ø8 x18	14  M8 x12





PRE-INSTALLATION: LAY OUT COMPONENTS AND COMPARE TO LIST AND IMAGES. IMAGES MAY NOT PORTRAY THE FULL DETAIL OR EXACT SHAPE OF THE PARTS; HOWEVER, THEY REPRESENT PARTS THAT HAVE SAME OR SIMILAR FUNCTION.

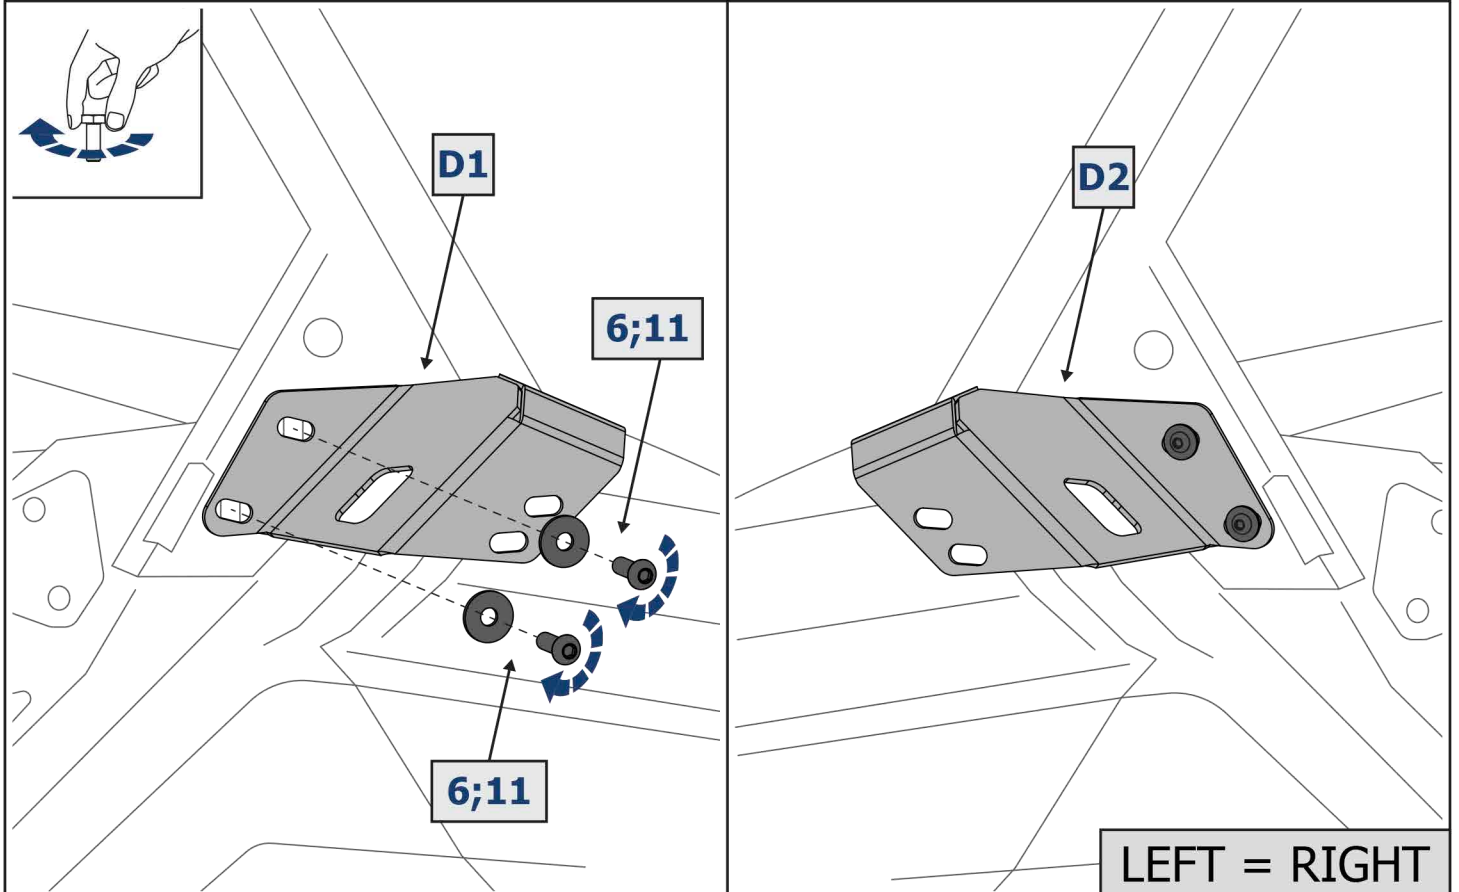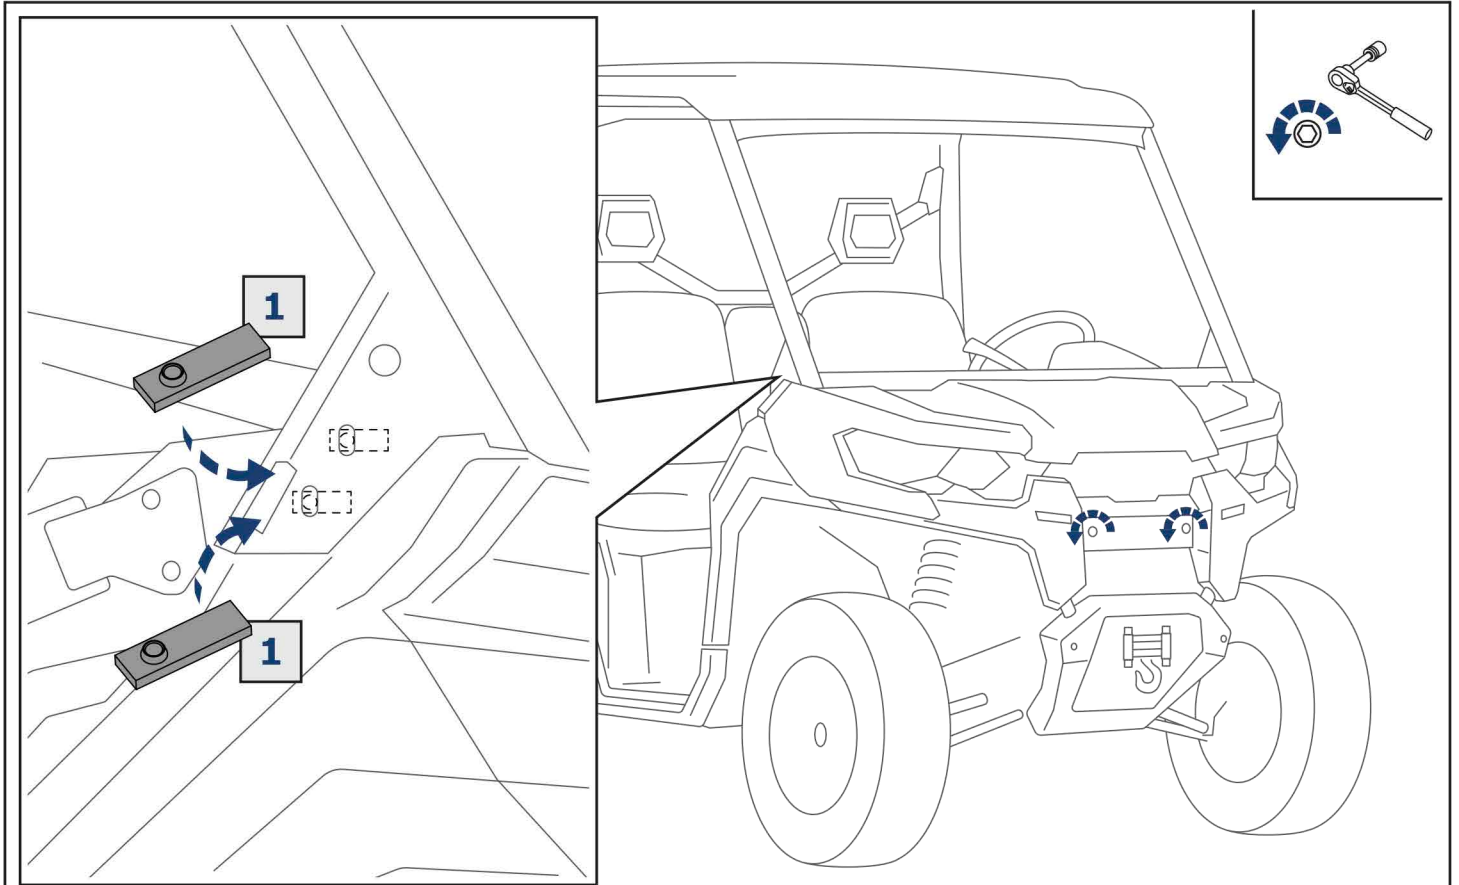

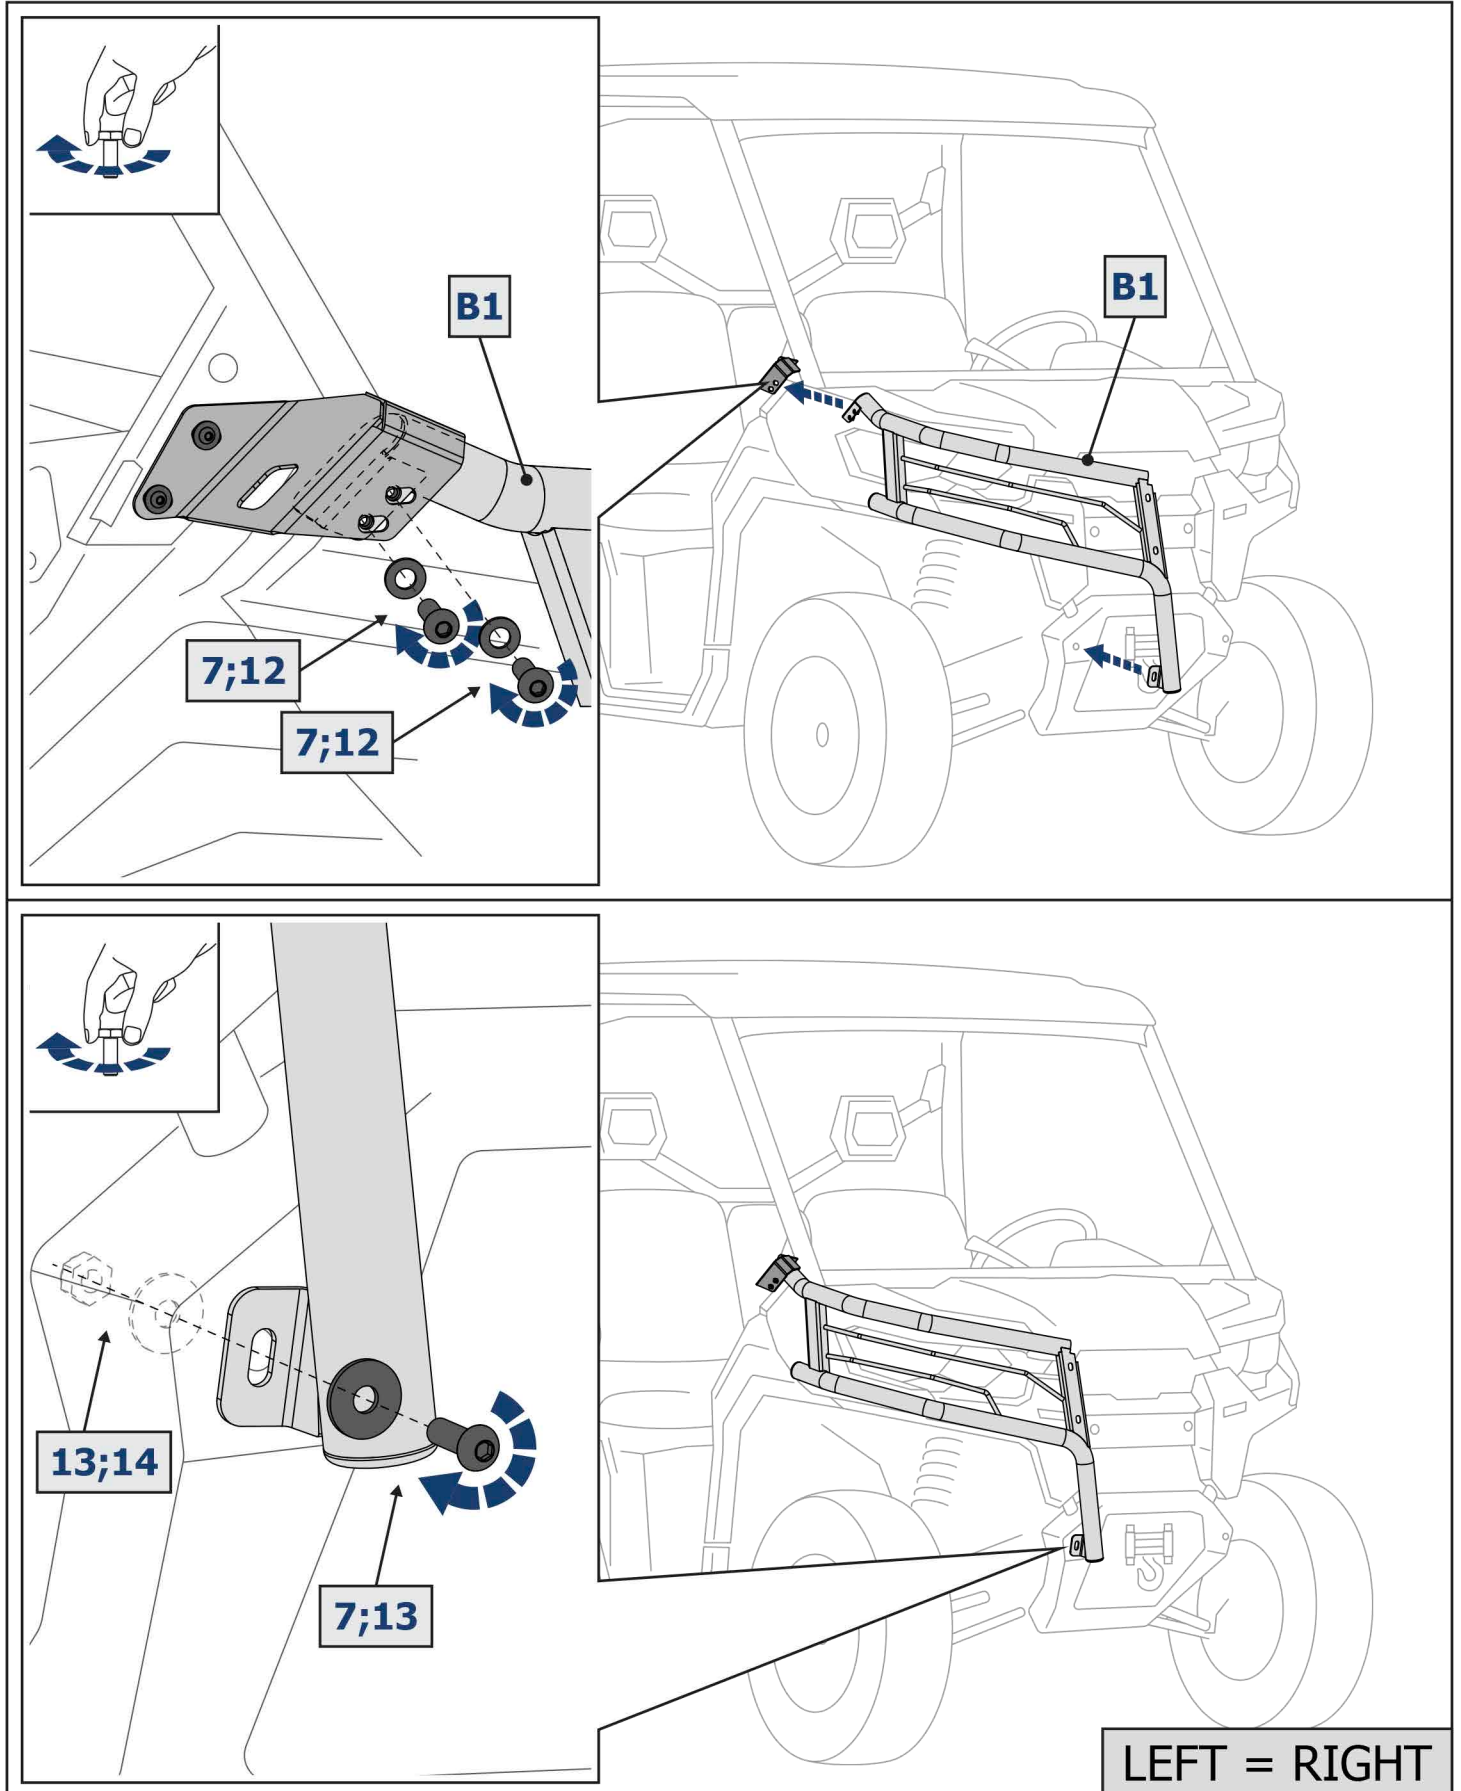

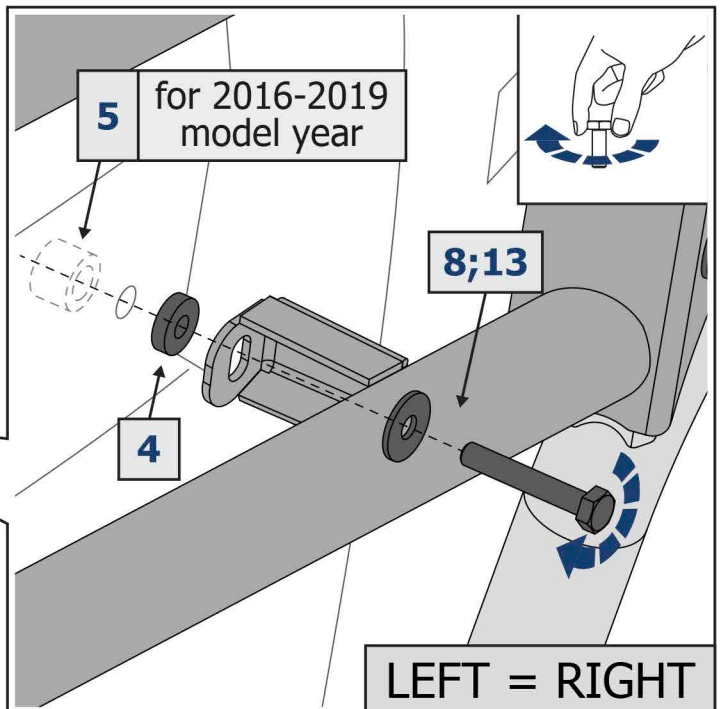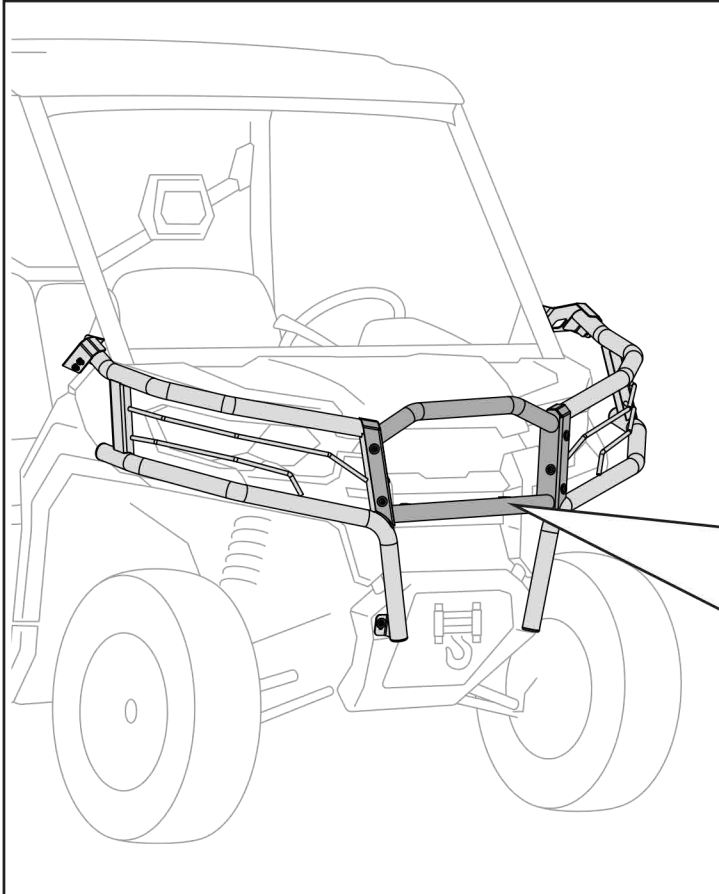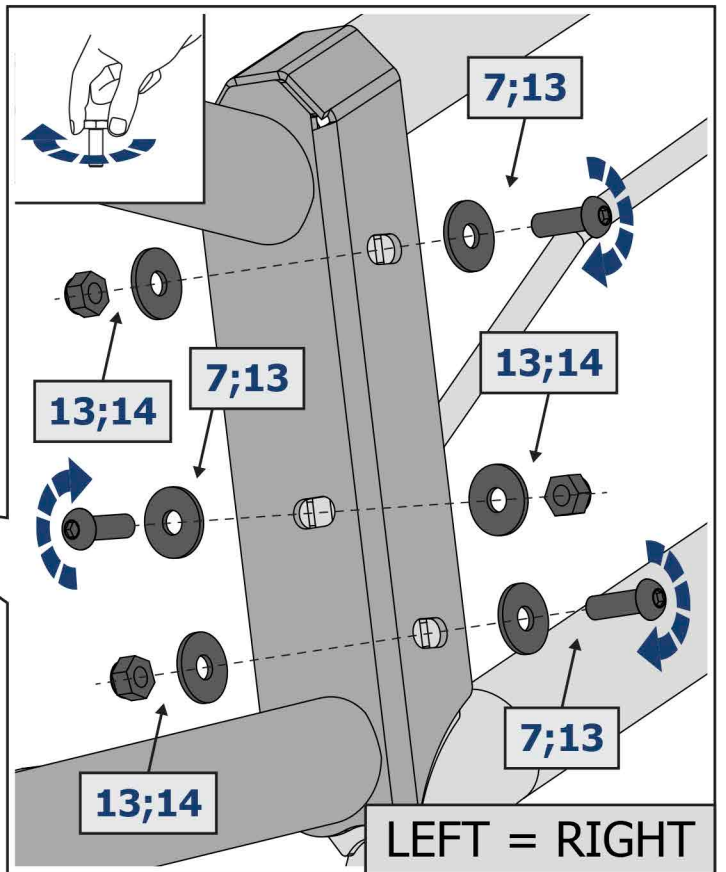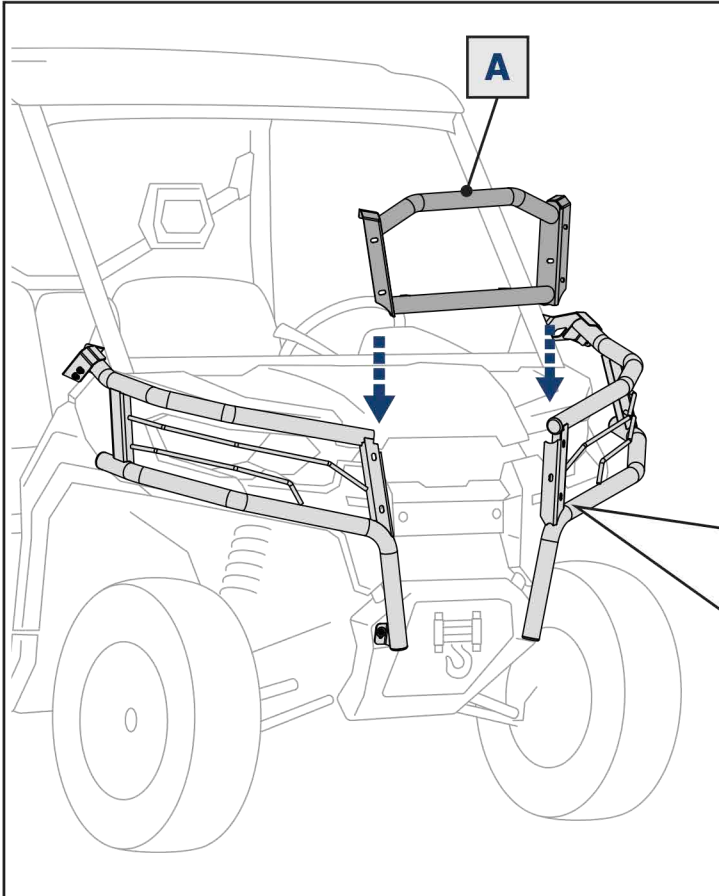

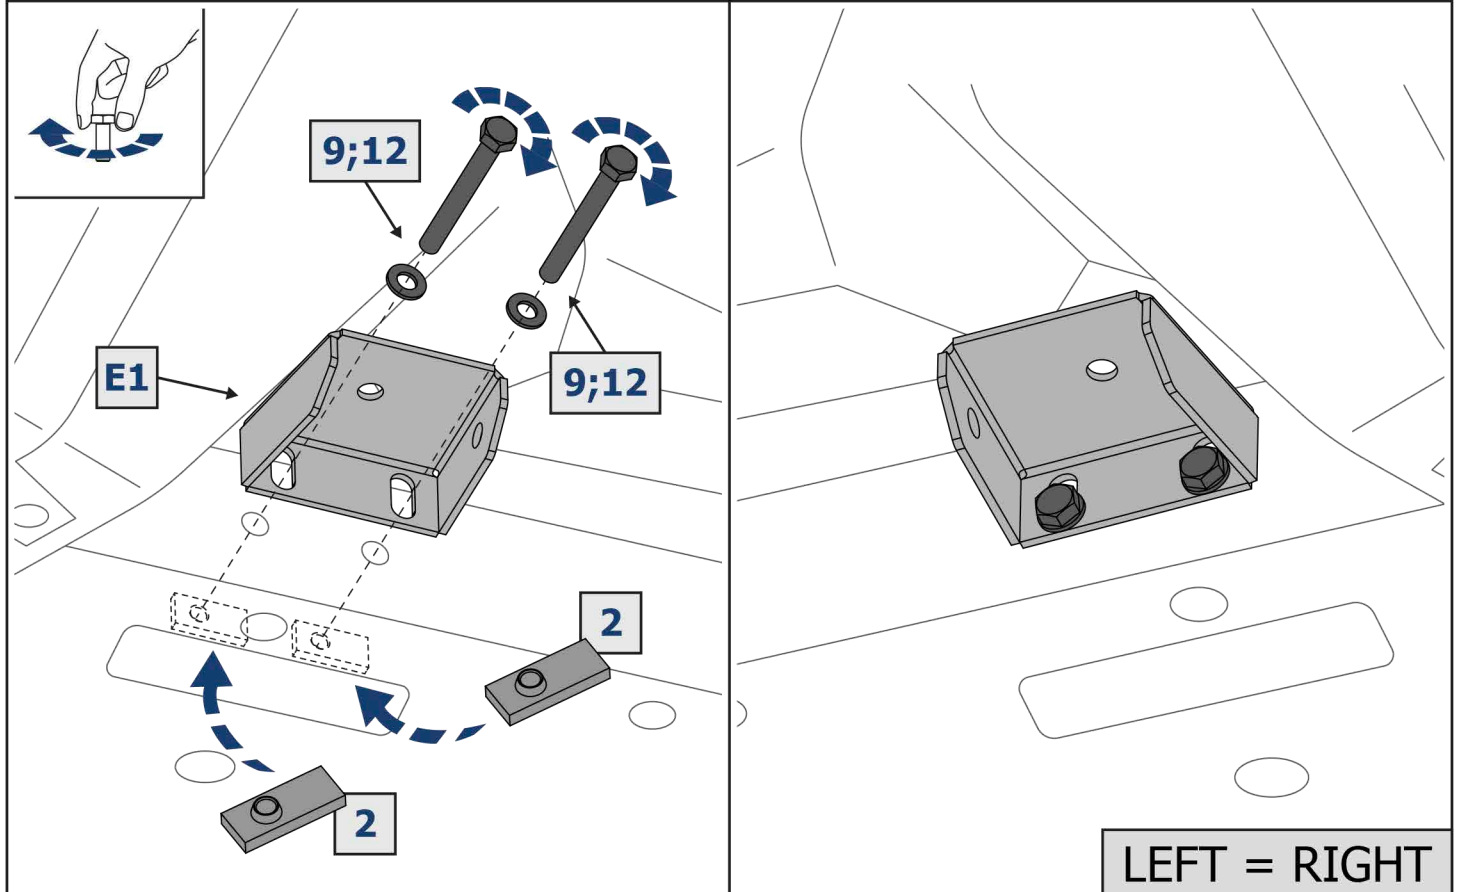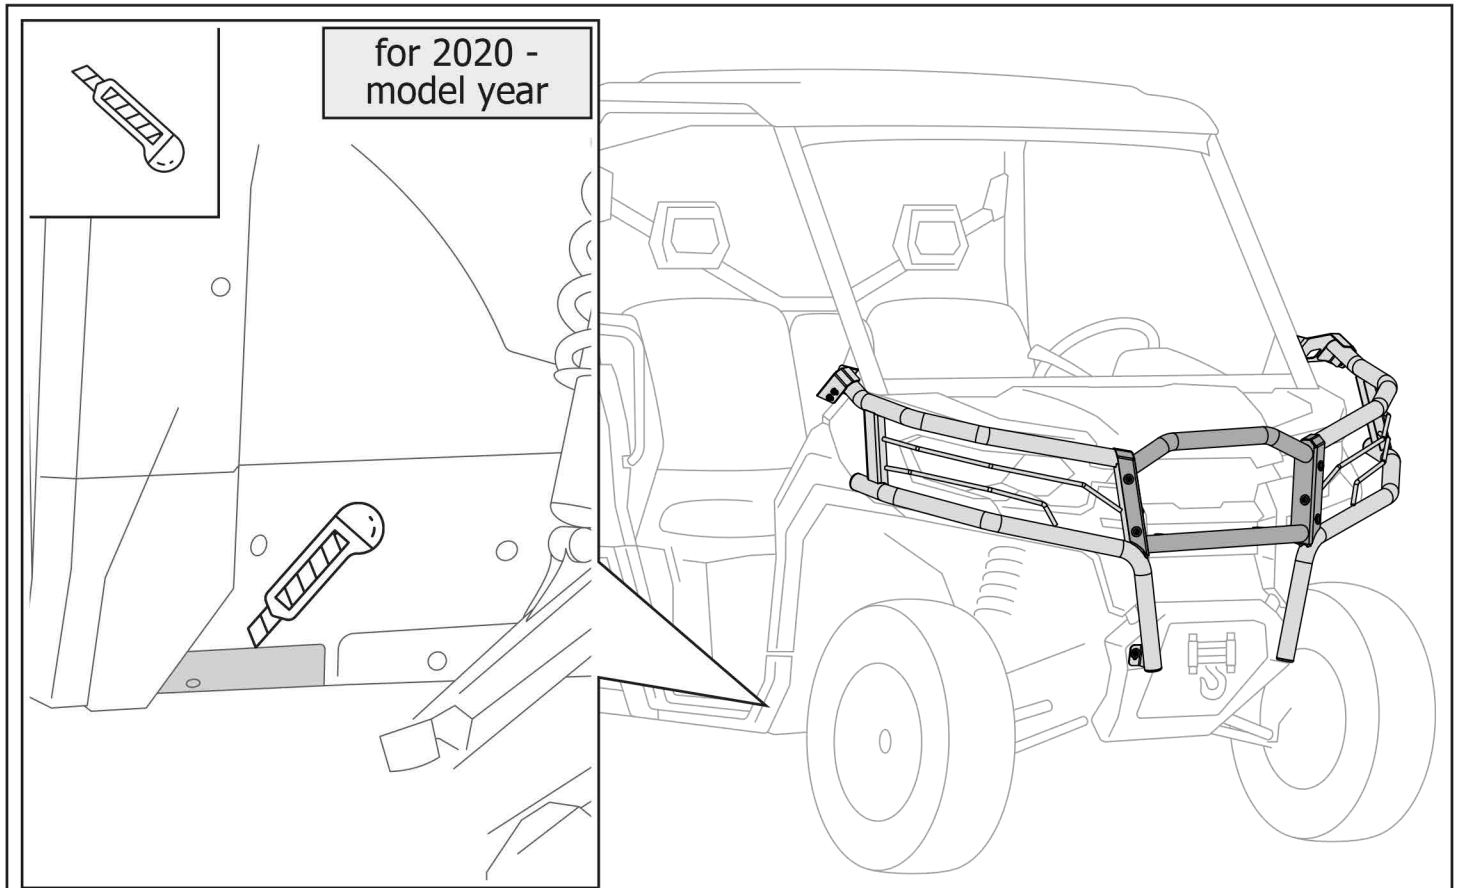

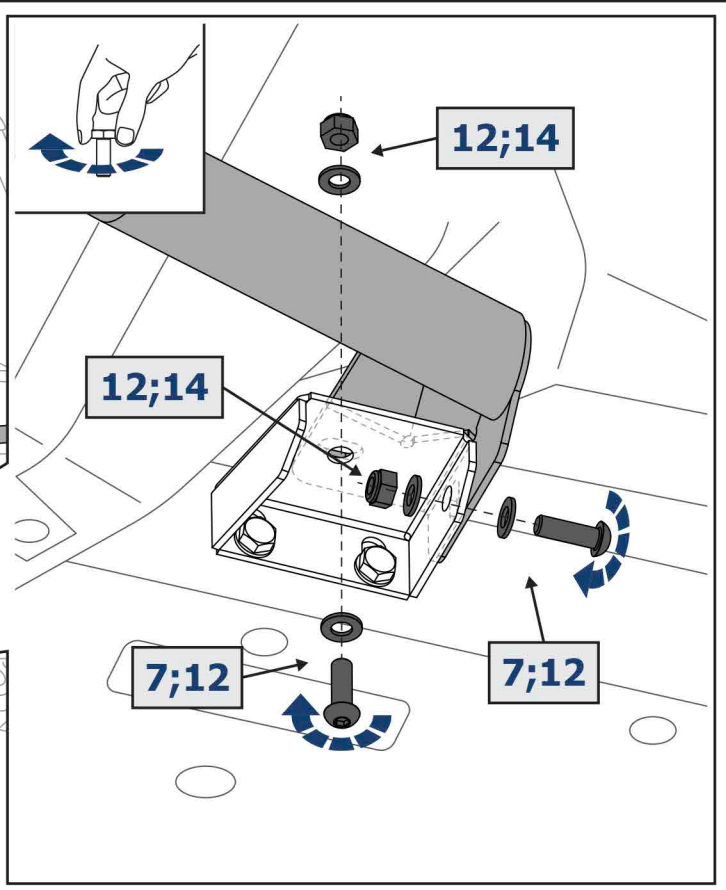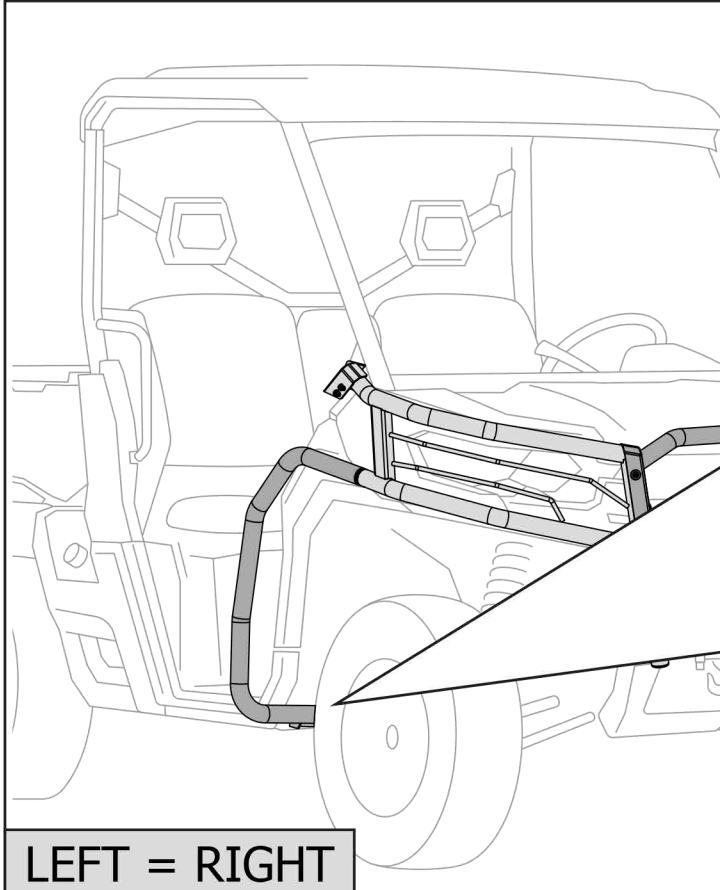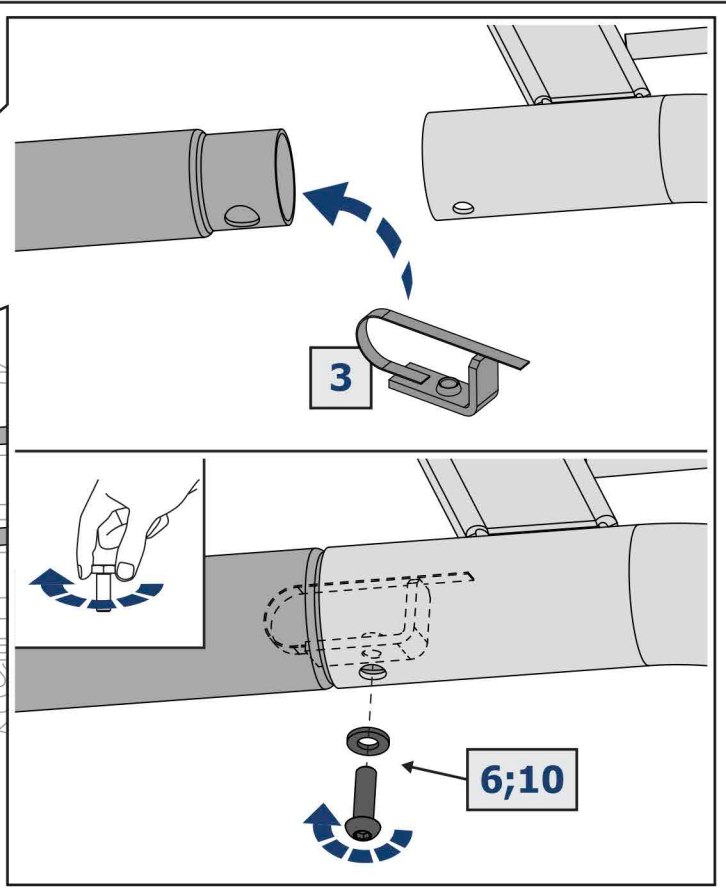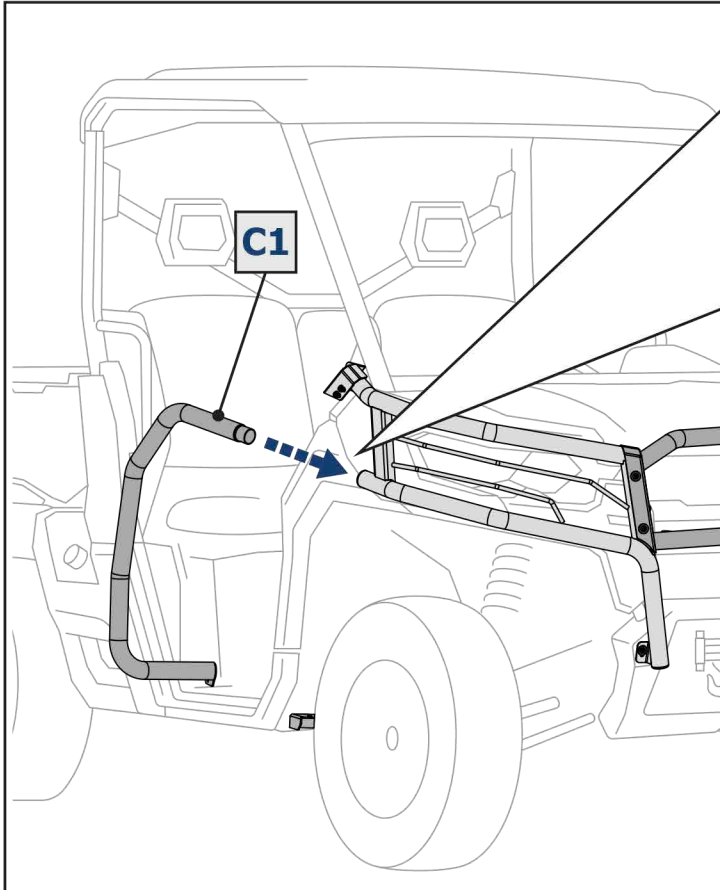




M6=9.5 Nm



M8=24 Nm

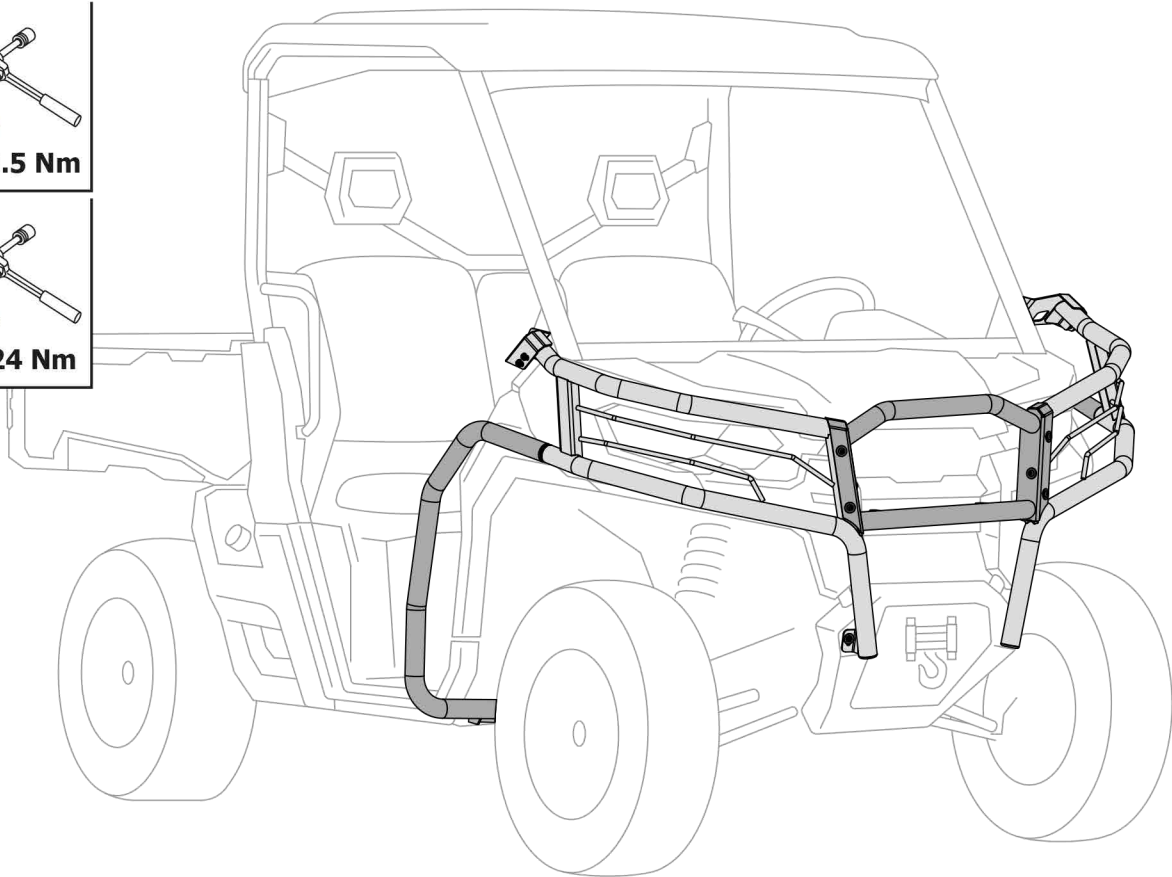

TIP: PERIODICALLY CHECK ALL HARDWARE AND RE-TIGHTEN IF NEEDED.