2014-2016 POLARIS® RZR® XP 1000 LED GRILLE

GRILLE INSTALLATION INSTRUCTIONS
10" SR-SERIES®



KIT INCLUDES

(1) Rigid Grille Insert
(2) #8 3/8" Sheet Metal Screws

IMPORTANT

It is strongly recommended that this product be installed by a professional.

This product may have more surface area than your factory grille. It may reduce airflow. Reduction in airflow can potentially lead to overheating or other mechanical issues.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical system.

STEP 1

Release two tabs at top of grille to remove from vehicle.




STEP 2

Fit Rigid Industries grille into place, making sure to line up the brackets with the shell.




STEP 3

Align for proper fit, and then use provided screws to mount the grille into the shell.

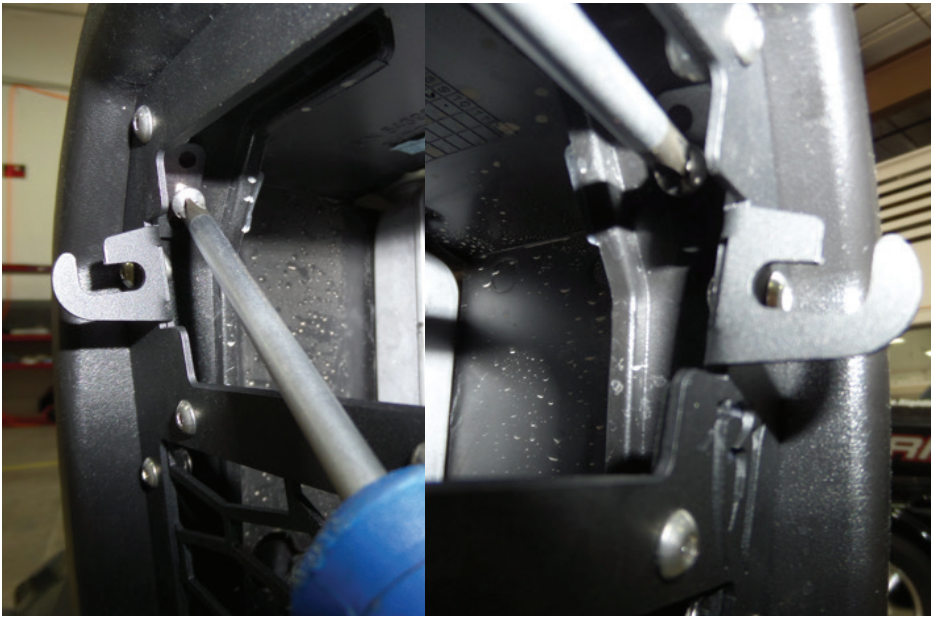

STEP 4

Use the hardware provided with your Rigid Industries 10" SR-Series® to mount light into bracket.

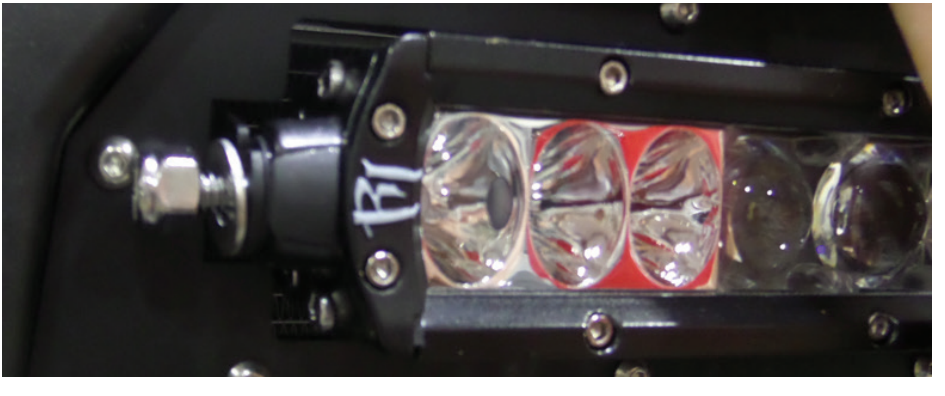

STEP 5

Adjust the light to sit how you want it. Then fully tighten the bracket mount bolts and the nuts on the ends of the light bar. Make sure all hardware is fully tightened on the bracket so the light bar is secure.

WIRING

Wire your light(s) using the wire harness and switch provided with your SR-Series®. Take care to avoid any heat sources and sharp or abrasive surfaces when routing the wire.

Your installation is now complete.

Welcome to the Rigid Nation!

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

Follow us on facebook at
Facebook.com/RigidIndustries

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 • www.rigidindustries.com

PKG-IS-061-B

Rigid Industries and SR-Series are registered and/or common law marks
owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.