



POLARIS® ARA® XP1000

2014-2016 POLARIS® ARA® XP1000

B-PILLAR MOUNT INSTALLATION INSTRUCTIONS - FITS (2) D-SERIES®

*Lights sold separately



KIT INCLUDES

Mount #46533

(4) 5/16"x 18 x 5/8" Long SS Button head bolts

(4) 5/16"x 18 SS Nuts

(4) 5/16" SS Washers

(4) 5/16" SS Lock Washers

IMPORTANT

Thank you for purchasing Rigid Industries® products for your Polaris®. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with the installation.

It is strongly recommended that this product be installed by a professional.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

STEP 1

Install (2) 5/16" - 18 x 5/8" Long SS Button head bolts, (2) 5/16" SS Washer, (2) 5/16" SS Lock Washer, and (2) 5/16"-18 nuts. See Figure 1.



Figure 1.

STEP 2

Install Rigid Industries light using hardware provided with the light. See Figure 2.

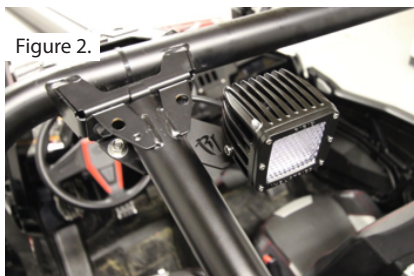


Figure 2.

STEP 3

Repeat Steps 1 – 2 for remaining side.

Wire your lights according to the instructions included with the light.

Take care to avoid any heat sources and sharp or abrasive surface.

**Your installation is now complete.
Welcome to the Rigid Nation!**



WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

Follow us on facebook at
[Facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 • www.rigidindustries.com

PKG-IS-142-B

D-Series and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.