



## CAN-AM 2020 Maverick X3 Rear Cargo Tailgate

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

**KIT CONTENTS:**


- Driver Side Cargo Rack x1
- Passenger Side Cargo Rack x1

**TOOLS NEEDED:**

- 4MM Allen Wrench
- 10MM Wrench/Socket
- T30 Torx Bit

**HARDWARE INCLUDED:**

- 6MMx1x20MM Button Head Bolt x16
- 6MMx1x35MM Hex Head Bolt x4
- 6MM Flat Washer x36
- 6MM Nylock Nut x16
- Flag Nuts x4

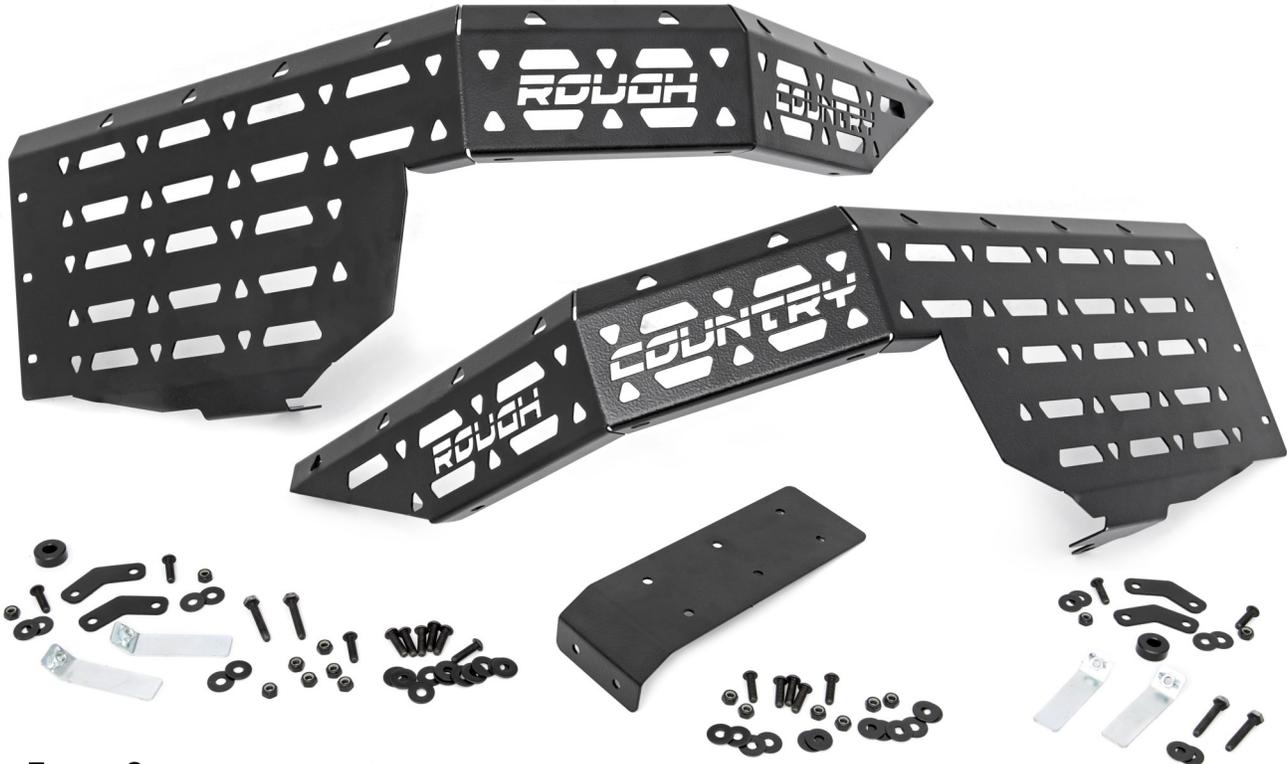



**Torque Specs:**

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




## INSTALLATION INSTRUCTIONS


1. Remove the bolts on the rear cargo rim using a T30 Torx bit. **See Photo 1.**
2. Remove the front and rear plastic clip. **DO NOT** remove the middle clip. **See Photo 2.**

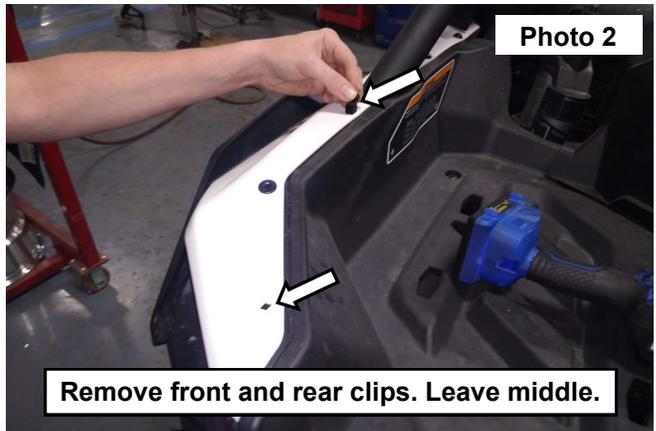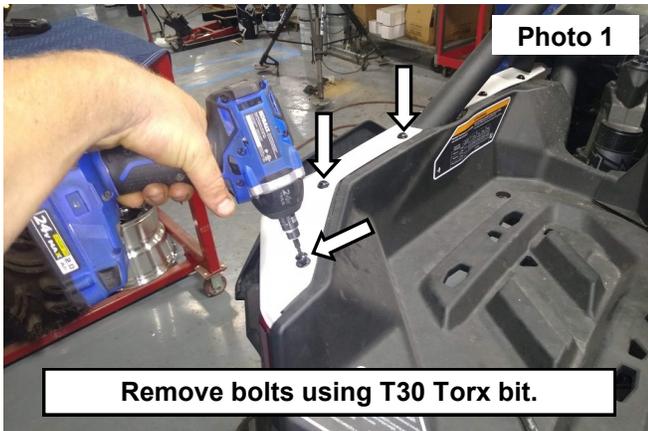


3. Remove the bolts at the rear of the bed. **See Photo 3.**
4. Install the cargo rack brackets in the corners using the 6MMx1x20MM bolts, nuts, and washers. **See Photo 4.**

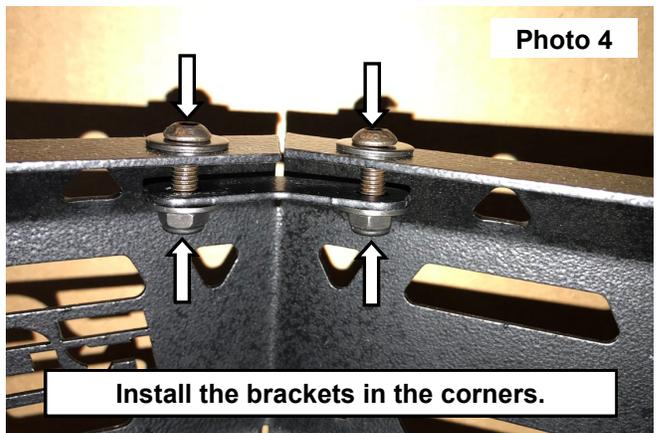

5. Install the cargo rack. Place the cylindrical spacer beneath the rear corner of the cargo rack. Use the supplied flag nuts and 6MMx1x35MM bolts on the front and rear holes but the middle hole uses the stock hardware. **See Photo 5.**

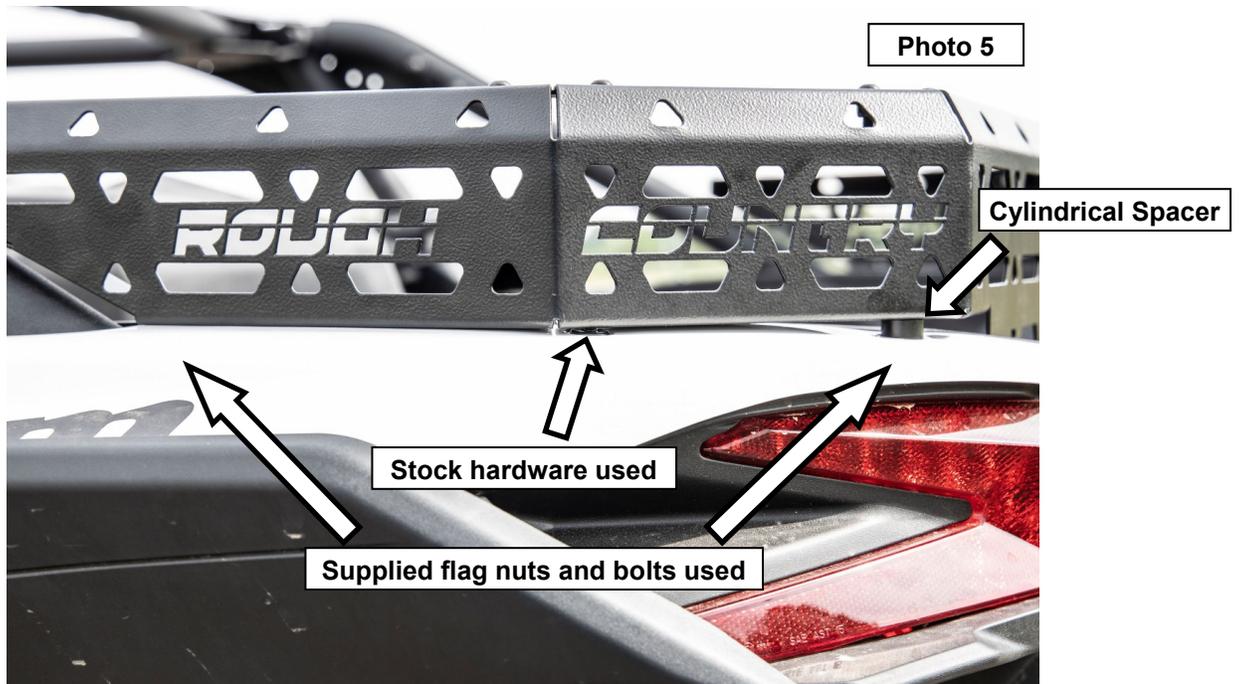

6. Install the cargo rack end-plate with the supplied 6x1x20mm bolts, nuts, and washers. **See Photo 6.**
7. Tighten the end-plate and secure the rack to the bed using stock hardware. **See Photo 7.**

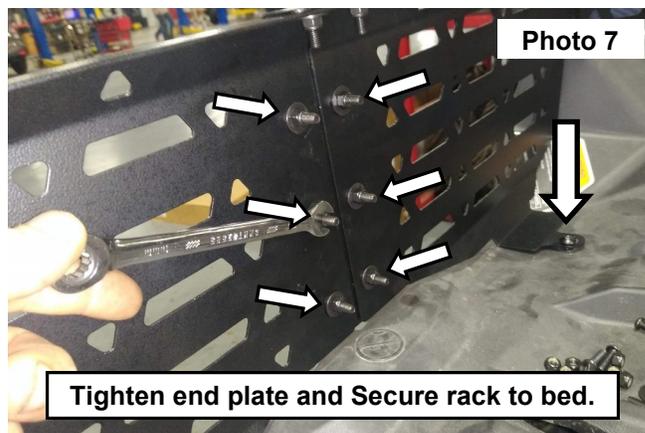



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

