



# Radiator Scoops, Polaris RZR® RS1 Instructions

---

## Installation

1. Line the **Radiator Scoops** up parallel about **1/2" Off of the Sticker Line** and the same height. *(See Figure #1)*
2. Mark **(5) Holes** on the **Plastic Body** for drilling. *(See Figure #2)*
3. Using a **5/16" Drill Bit (\*Unibit)**, drill out the **(5) Holes** on each side of the plastic. **\*Note:** *We recommend using a Unibit instead of a drill bit to avoid damage to your plastic panels. (See Figure #3)*
4. Using the supplied **Push Rivets**, install the **Radiator Scoops** on the vehicle. *(See Figure #4)*
5. *(Optional)* Trim the plastic behind to **Radiator Scoop** to produce more air flow to the radiator. *(See Figure #5)*

## Hardware

 (10) Plastic Push Rivet

\* Click thumbnails to enlarge

---

Figure #1



Figure #2

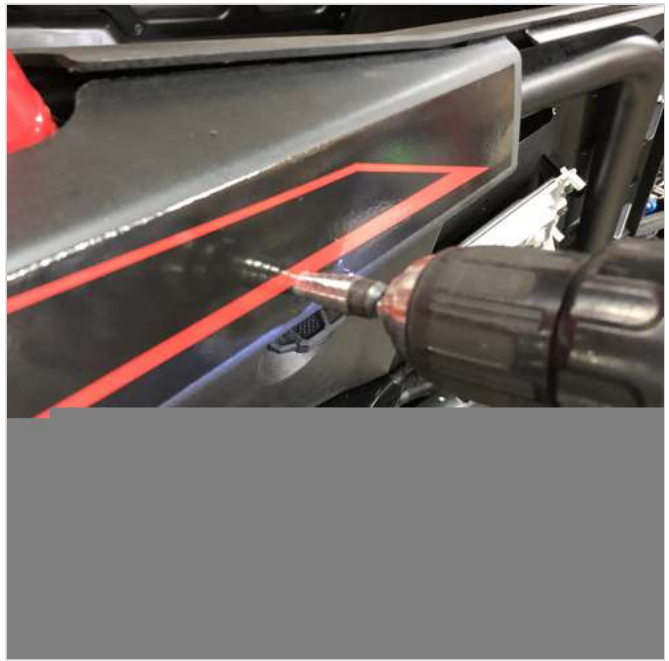


Figure #3



Figure #4



Figure #5

(10) Plastic Push Rivet

