



CAN-AM COMMANDER Taillight Power Out Adapter


Thank you for purchasing XTC Motorsports Power Adapter for Rear Light or Whip Lights.

Please read the instructions fully and familiarize yourself with the components before starting the installation.

1. Remove either side dump bed side panel to expose the taillight connector.



2. Unplug OEM light connector from the taillight and plug the adapter in-line

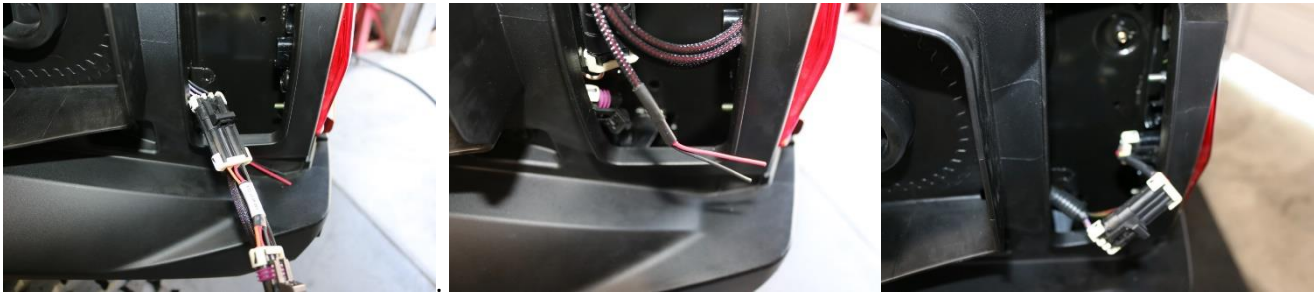

WARNING! Keep power wire away from any hot or moving parts.

3. Run the red and black wire down to the item being powered.
4. Crimp the red power wire to the positive wire on the light, and the black wire to the negative using the supplied Heat Shrink Butt connectors.
5. Using a heat gun, heat the ends of the Butt connectors to seal them.
6. Using the supplied cable tie's, secure the power wire to the car once again making sure that the wire is kept away from any hot or moving parts.

We can be reached by email at Support@xtcpowerproducts.com

To purchase Accessories please visit our web site at www.xtcpowerproducts.com

Copyright © 2024 XTC MOTORSPORTS LLC, all rights reserved.

XTC Power Products
A Division of XTC Motorsports LLC
380 E Comstock Dr.
Chandler AZ 85225
480-558-8588
www.xtcpowerproducts.com