




2753 Michigan Road · Madison, Indiana 47250  
855-743-3427

# INSTALLATION INSTRUCTIONS

## Full Skid Plate: FSP-CF-UF1000

- ⓐ Please look through and read these instructions BEFORE starting so you understand what processes you'll be doing, and possible extra tools you may need.
- ⓑ Do Not discard product packaging until installation is complete and functioning properly.

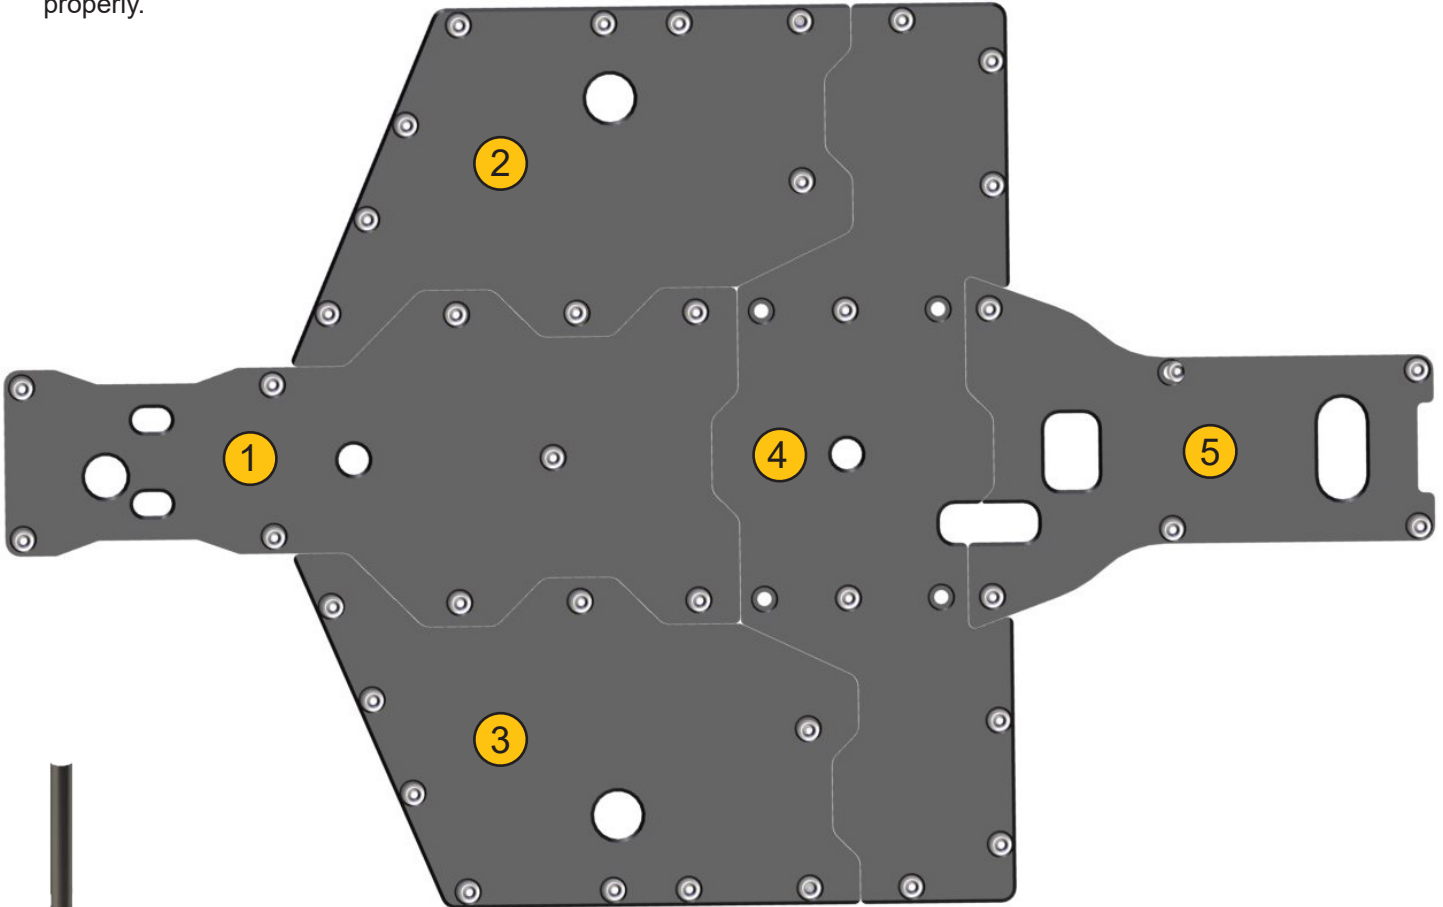

**5.5mm Drill Bit (1pc)**



**M6x20 Hex Flanged (33pcs)**



**1/4-20x1 Self Tap (6pcs)**



**M6x35 Hex Flanged (2pcs)**




**36mm Bowl Washer (45pcs)**



**24mm x 12.5mm Spacer (2pcs)**



**M8x20 Hex Flanged (4pcs)**

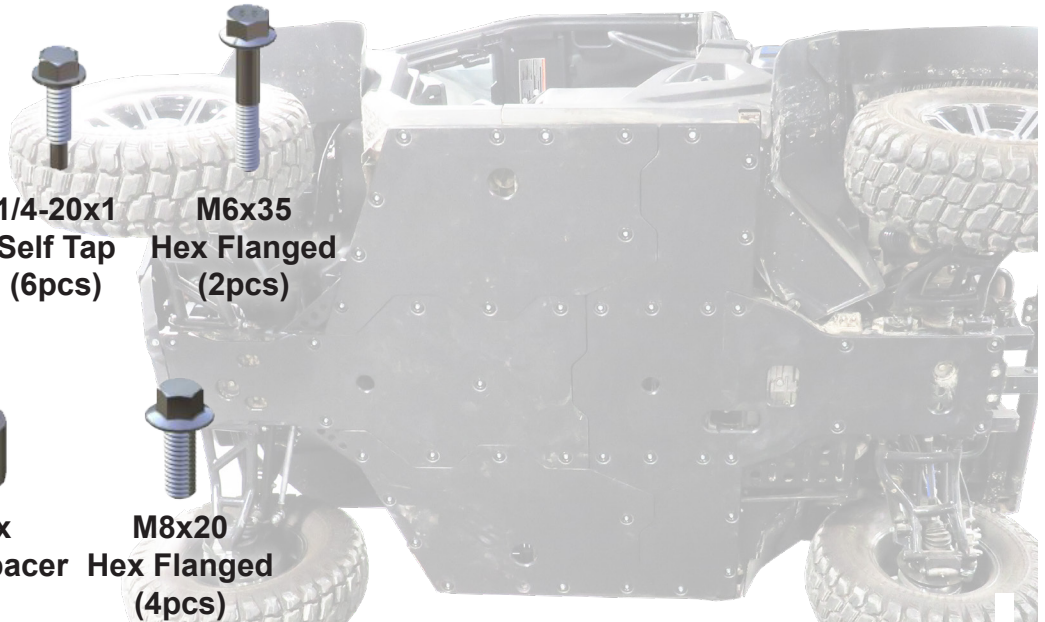

1. The first thing you need to do is **Remove** any existing **Splash Pans** or **Skid Plates** for your vehicle. Your vehicle should look like the one in **Fig.1** before you start your installation. You will need to either get the vehicle up off the ground on secure jack stands or tip it up onto one side, secured in that position as we have chosen to do. See **Fig.1**.




**Fig.1**

2. Now you can start to install the new **Skid Plates**. The picture on the cover has numbers on it for the sequence of which plate to install first, second etc. as a reference for you. So first install the front center plate as shown in **Fig.2a**, and then install the hardware in each hole shown in **Fig.2b**. Install using the **M6x20 Hex Flanged Bolts** and **Bowl Washers** provided in your kit. **NOTE: When installing the hardware, thread them in but leave a little loose, enough so that the plate can slightly move around able to be adjusted after all plates are threaded in place.**



**Fig.2a**

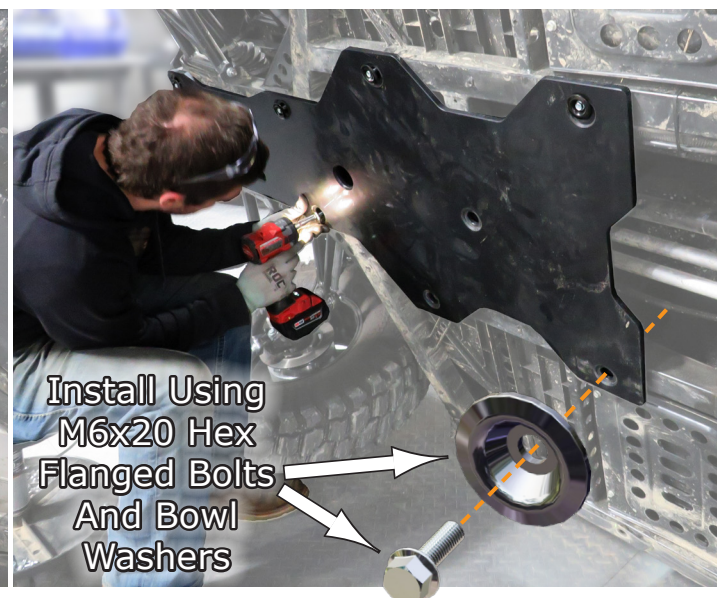


**Fig.2b**

3. Next, install the **Side Plate** shown in **Fig.3a** using the same **M6x20 Hex Flanged Bolts** and **Bowl Washers**, except for one location shown in **Fig.3b**. This one you will use the **M6x35 Hex Flanged Bolt** along with the **24mm Spacer** That goes behind the **Skid Plate** as shown in **Fig.3c-d**. There are only two (2) locations that use the longer bolt and Spacer. The other is in the same location in the opposite side plate you will install next.


**NOTE: For 2023 models and UP, you WILL NOT NEED these Spacers.**




**Fig.3a**

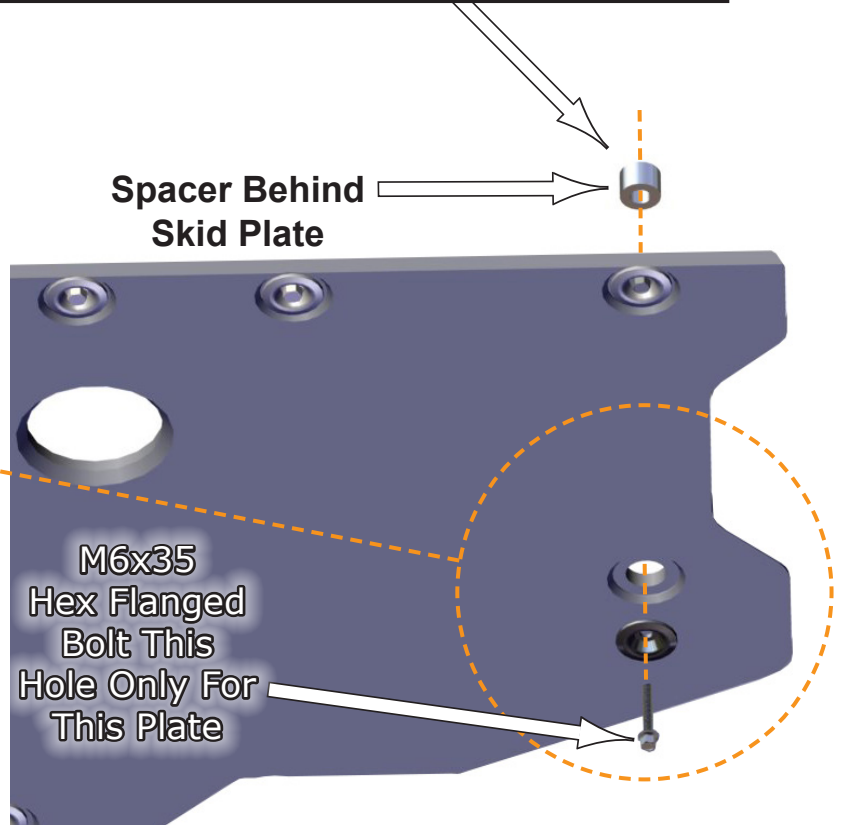



**Fig.3b**

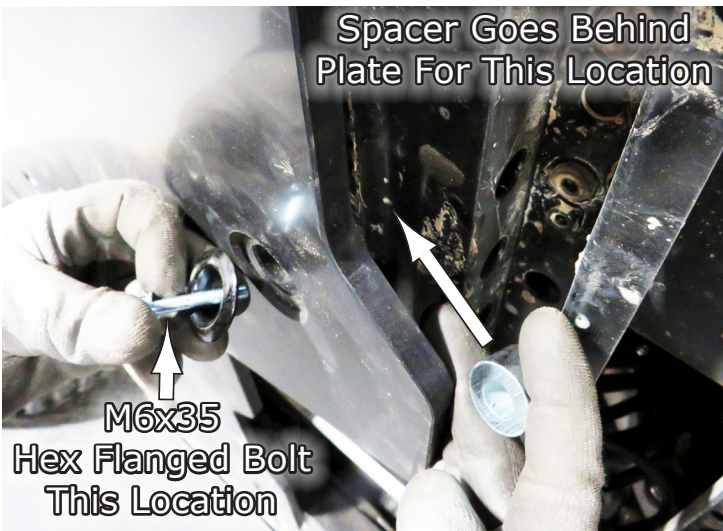

**Fig.3c**

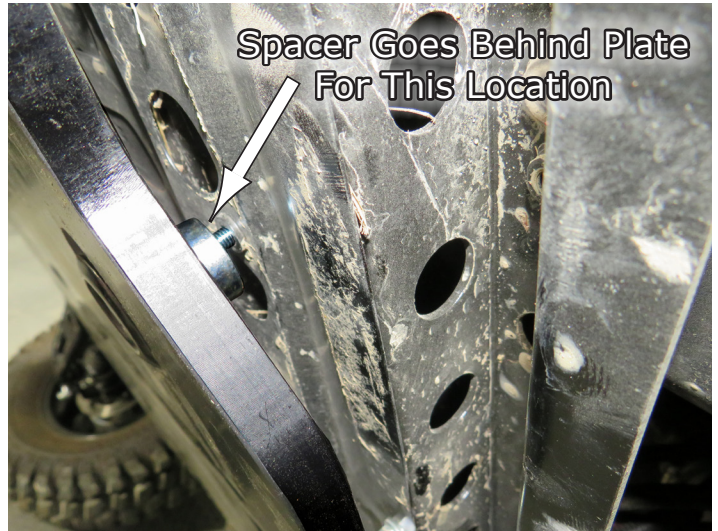


**Fig.3d**

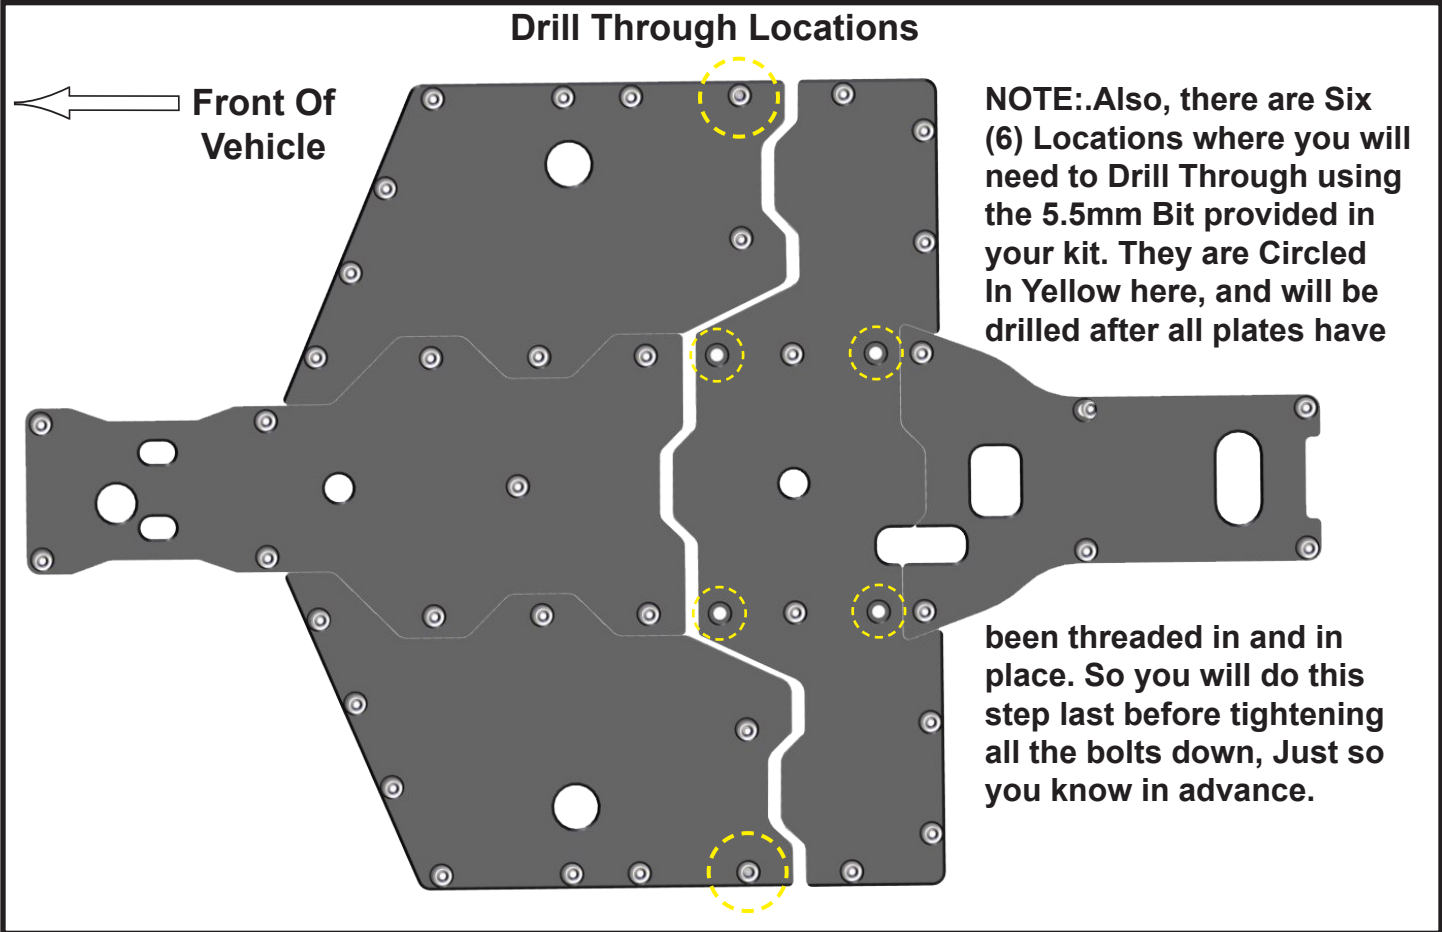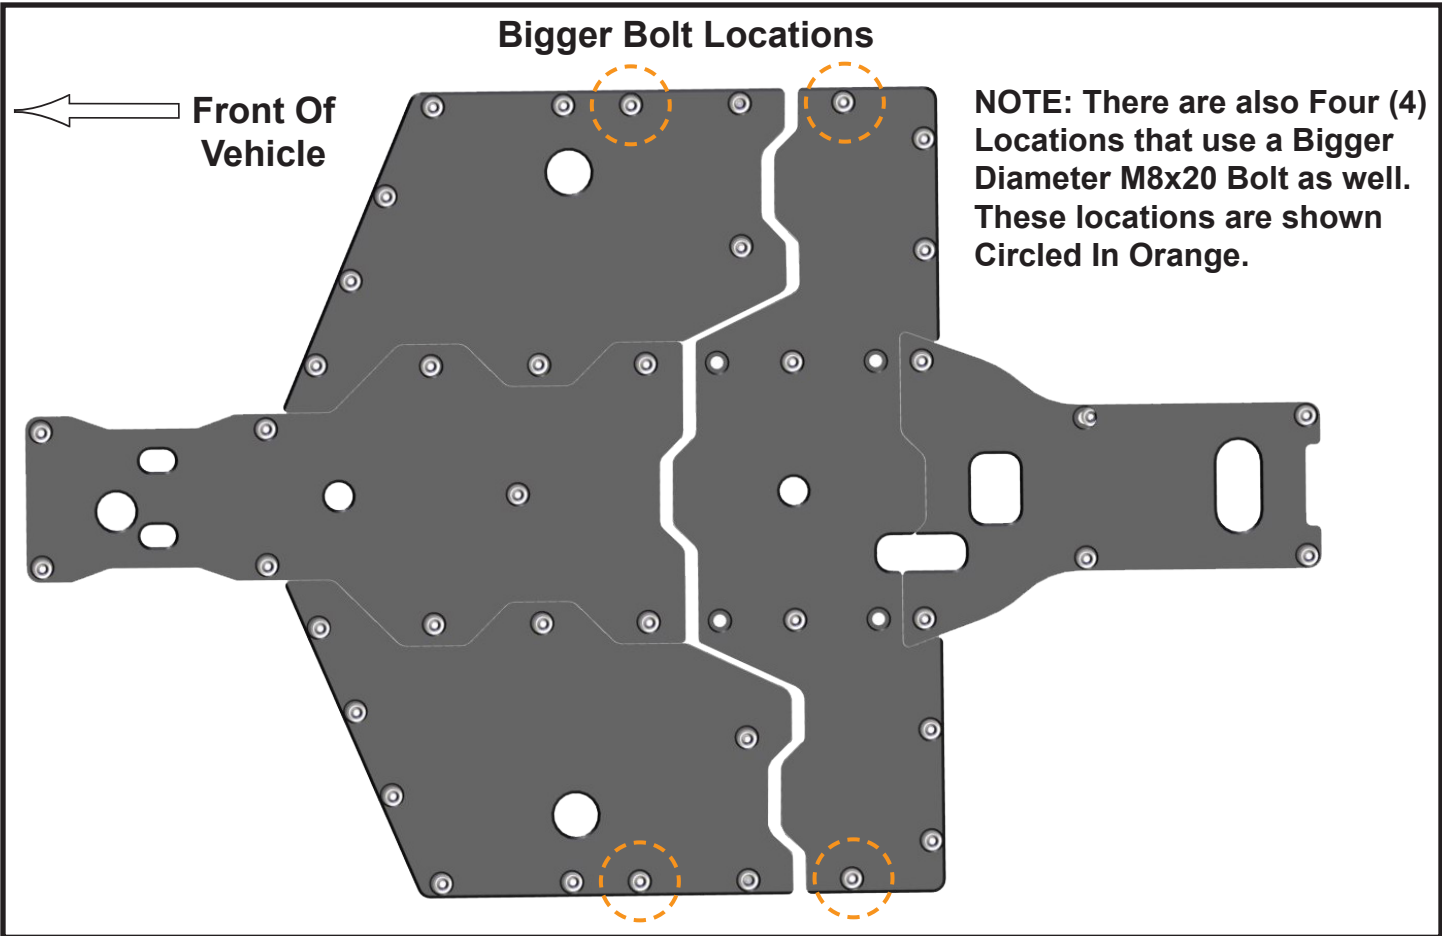

4. After you have threaded the bolts in place but leaving a little loose, you can now install the opposite side plate. The same hardware is placed in the same locations including the **Spacer** and **Longer M6x35 Bolt** you used in the previous step. Notice **Special Bolts** on **P.4**. See **Fig.4a-b**.



**Fig.4a**

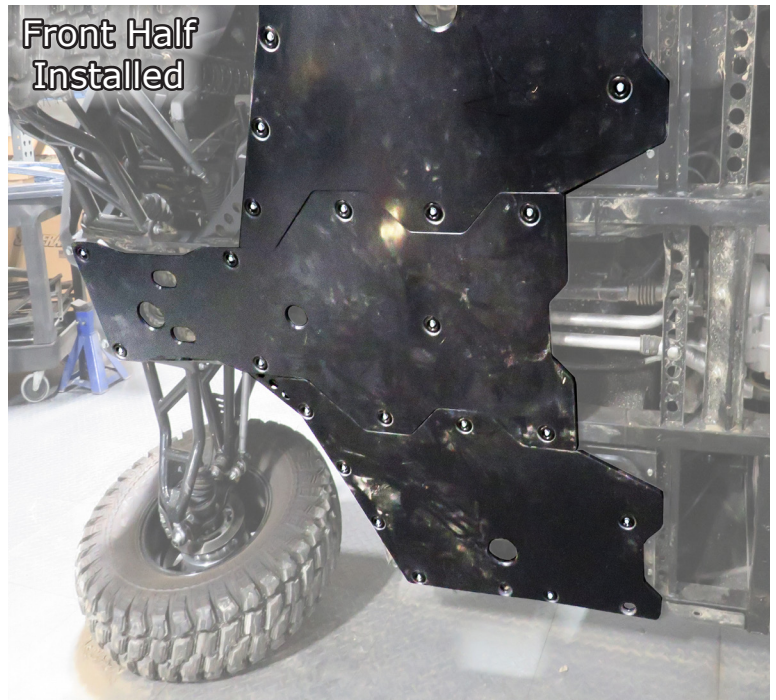

**Fig.4b**

5. Next, you can install the **Center Plate**. All screws install the same as the previous ones except any **Special Screws** on **P.4**, if any apply. Also leave these Screws a little loose as the previous plates you installed until the Rear Plate is installed. See **Fig.5a-b**.



**Fig.5a**




**Fig.5b**

6. After the **Center Plate** is in place, you can install the **Rear Plate** using the same **M6x20 Hex Flanged Bolts** and **Bowl Washers** provided in your kit. Thread the bolts in but also leave a little loose until ready to adjust. See **Fig.6a-b**.




**Fig.6a**

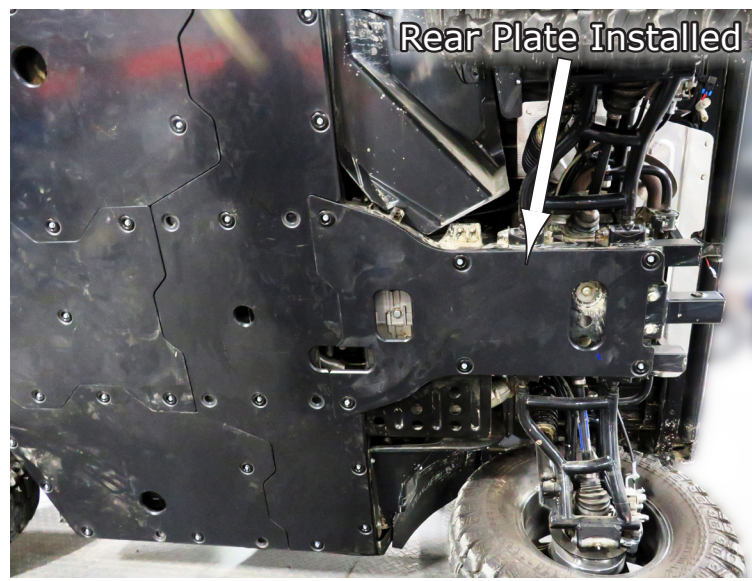

**Fig.6b**


7. Now, before you adjust the plates and tighten all the bolts down, you will need to **Drill out the Remaining Hole Locations** shown below in **Fig.7a** and also on **P4**. Then use the **5.5mm Drill Bit** Provided in your kit to drill the holes. To center you drilled hole, place a **Bowl Washer** into the location and use the center hole to mark or start your drill thru, then drill thru at that spot. See **Fig.7b-c**. Then install the Bolts and Bowl Washers as before to install.

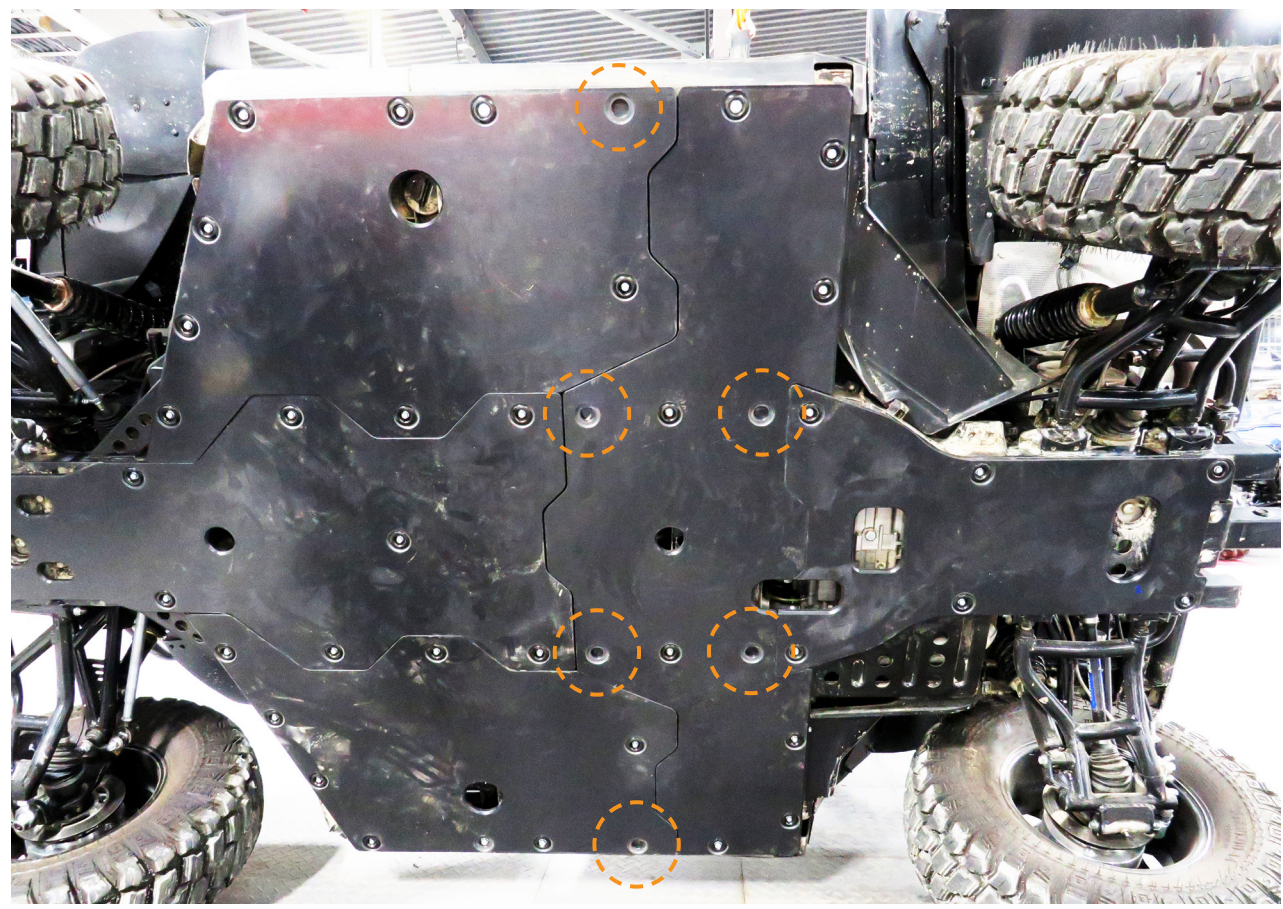

**Fig.7a**




**Fig.7b**

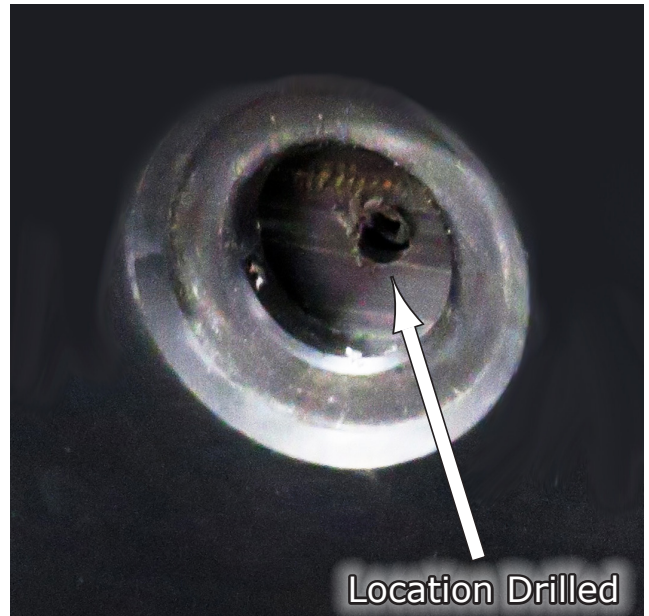

**Fig.7c**

8. Once all plates are threaded in place, look at the arrangement and make any adjustment you feel necessary for a good fit and appearance, then tighten all bolts down securely. See **Fig.8**.

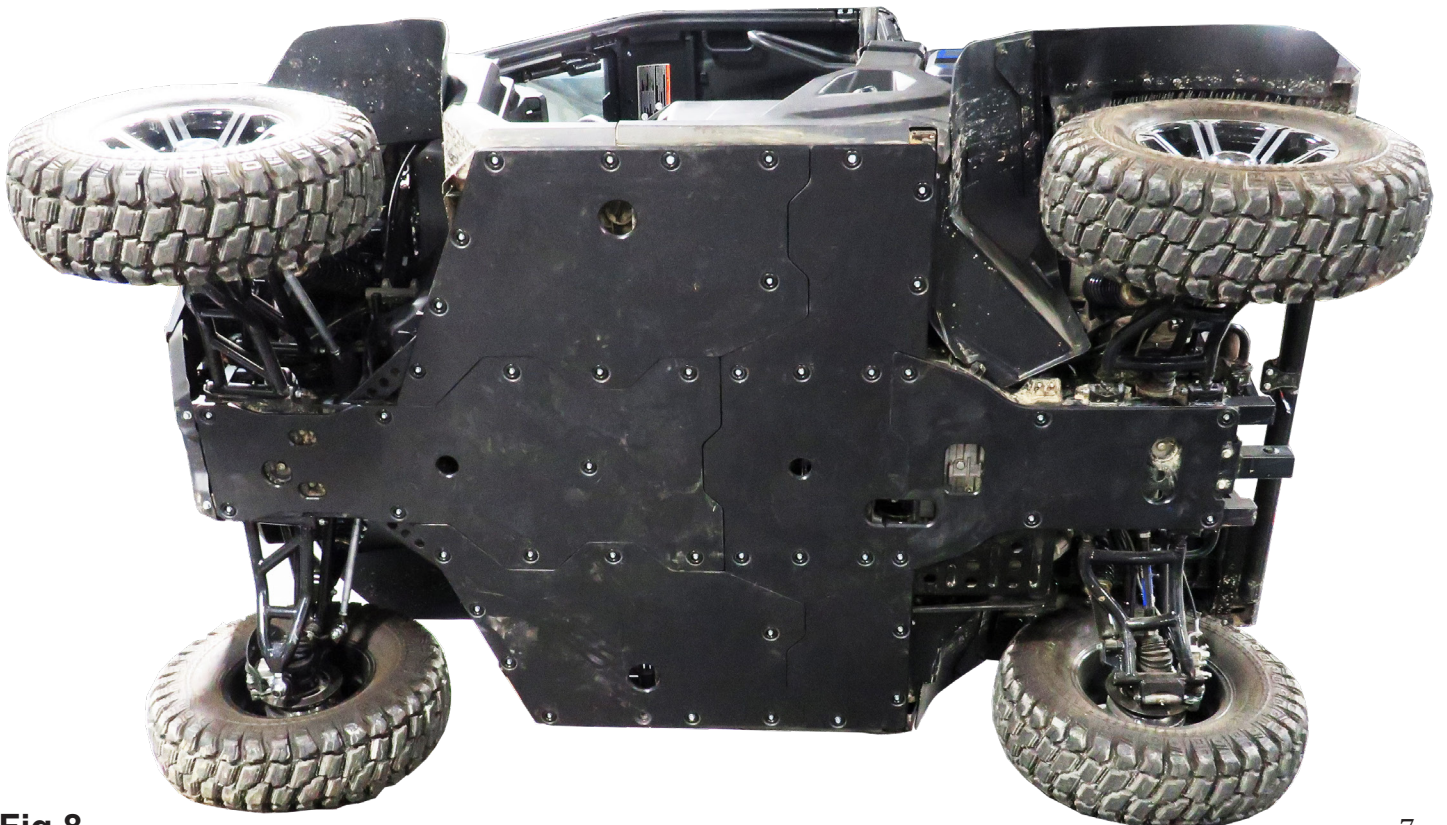

**Fig.8**



**Liability Statement**

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

If you have any problems/questions on this kit, contact us by email at Superatv.com.

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*



**Like SuperATV on Facebook to keep up to date on new products!**