


INSTALLATION INSTRUCTIONS

Plug and Play Turn Signal Kit: for Polaris Ranger XD

- Do not discard packaging until product has been successfully installed.
- Components may be installed in locations other than where shown. Always verify wire harness length.
- While routing, follow factory wiring when possible.
- Use provided dielectric grease on all connections.
- Always consult labels on Harnesses when making connections.
- Avoid rotating or hot components when securing.
- Before drilling any holes, check behind area to be drilled for any interference.

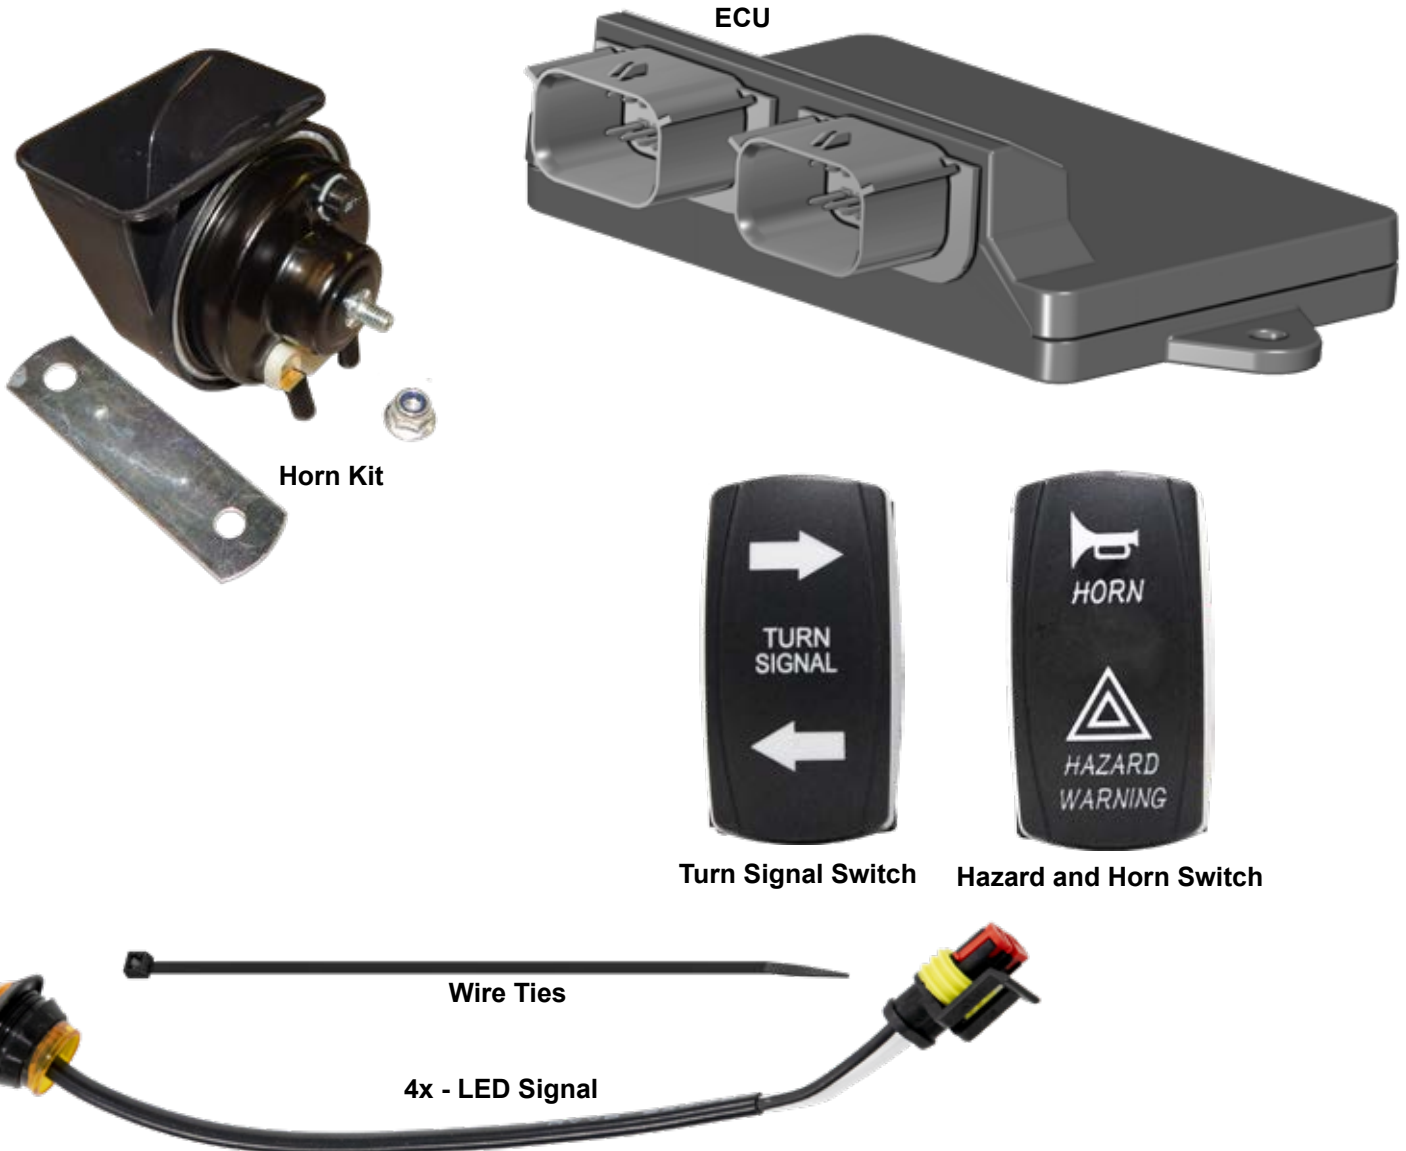

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427








8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

*Thank You
For Choosing*

SUPERATV.COM[®]

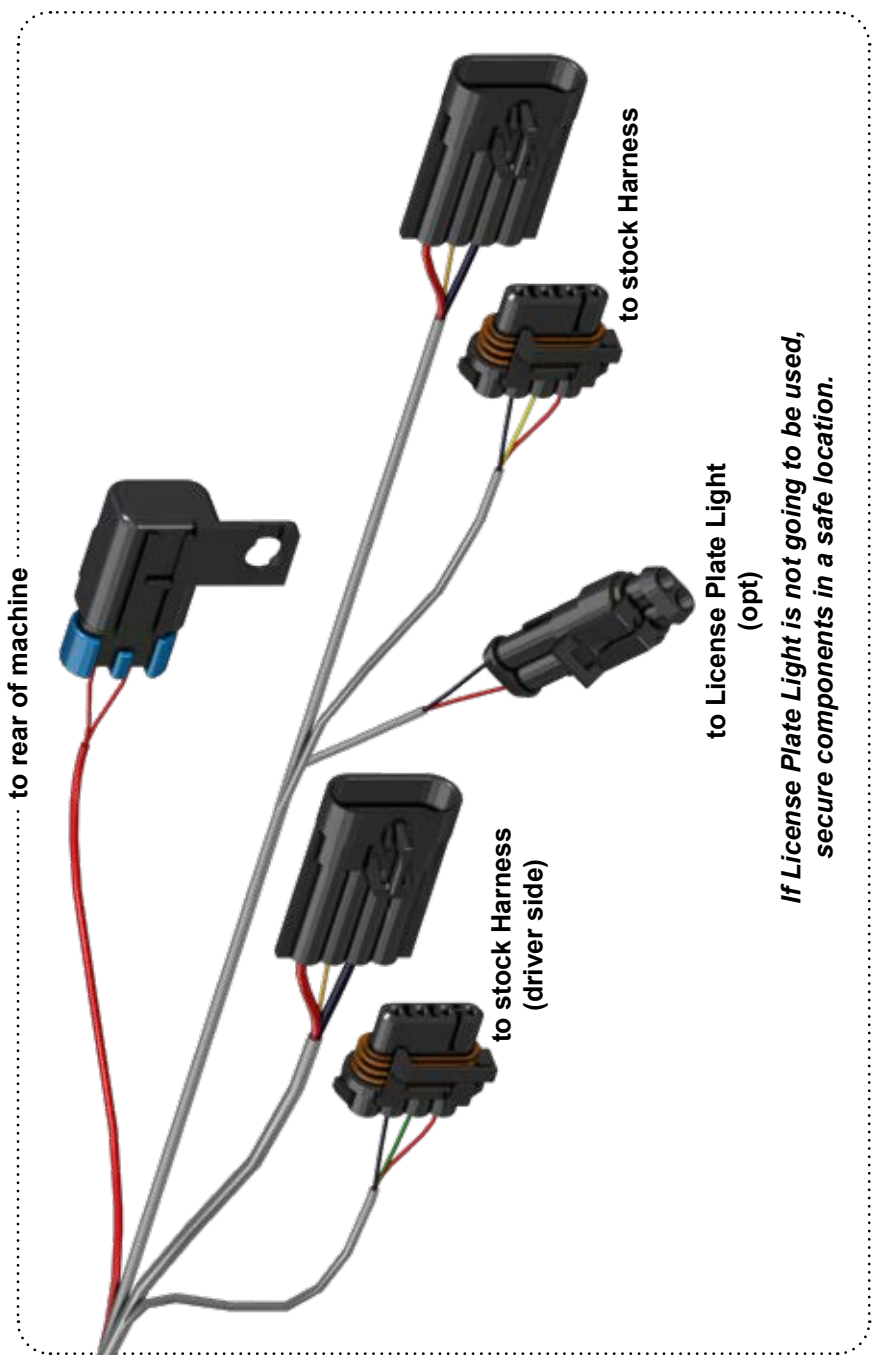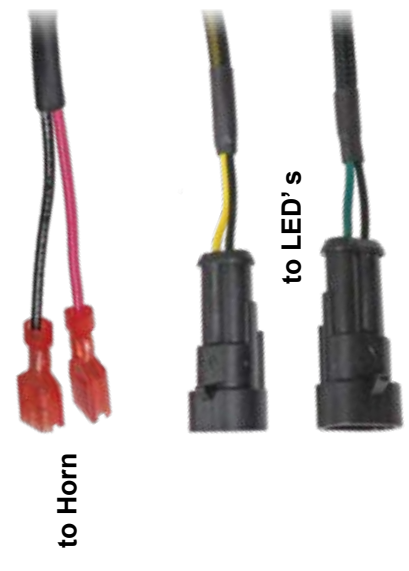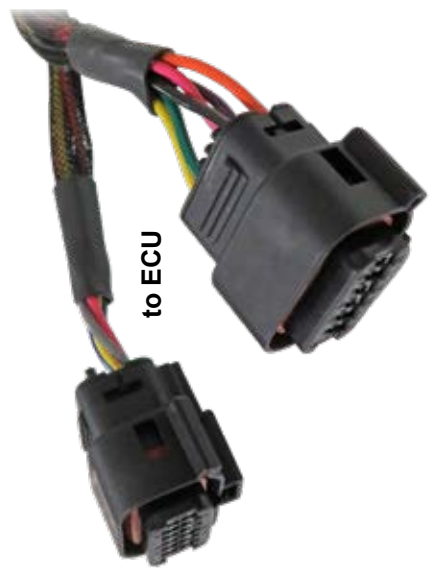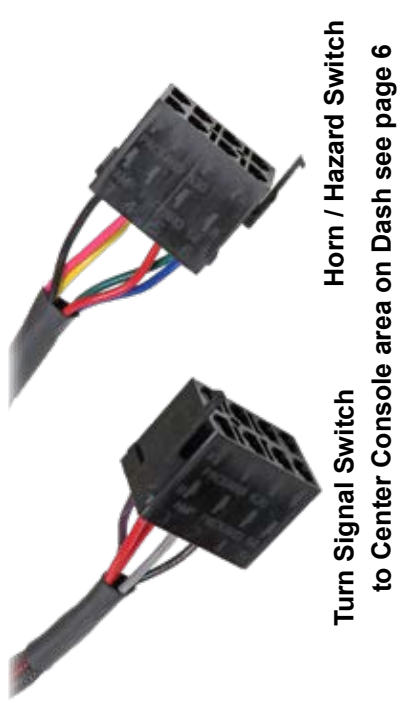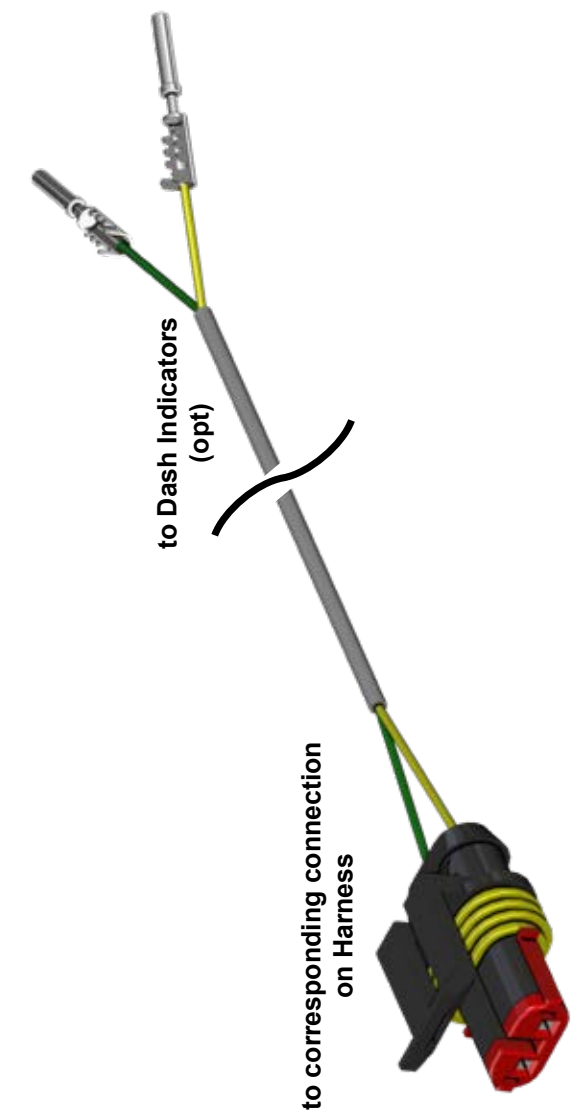






- Repeat for driver side.
- Reinstall this hardware **AFTER** Tail Lights have been connected to Harness.








- Remove Tail Light hardware shown.
- Repeat for driver side Tail Light.

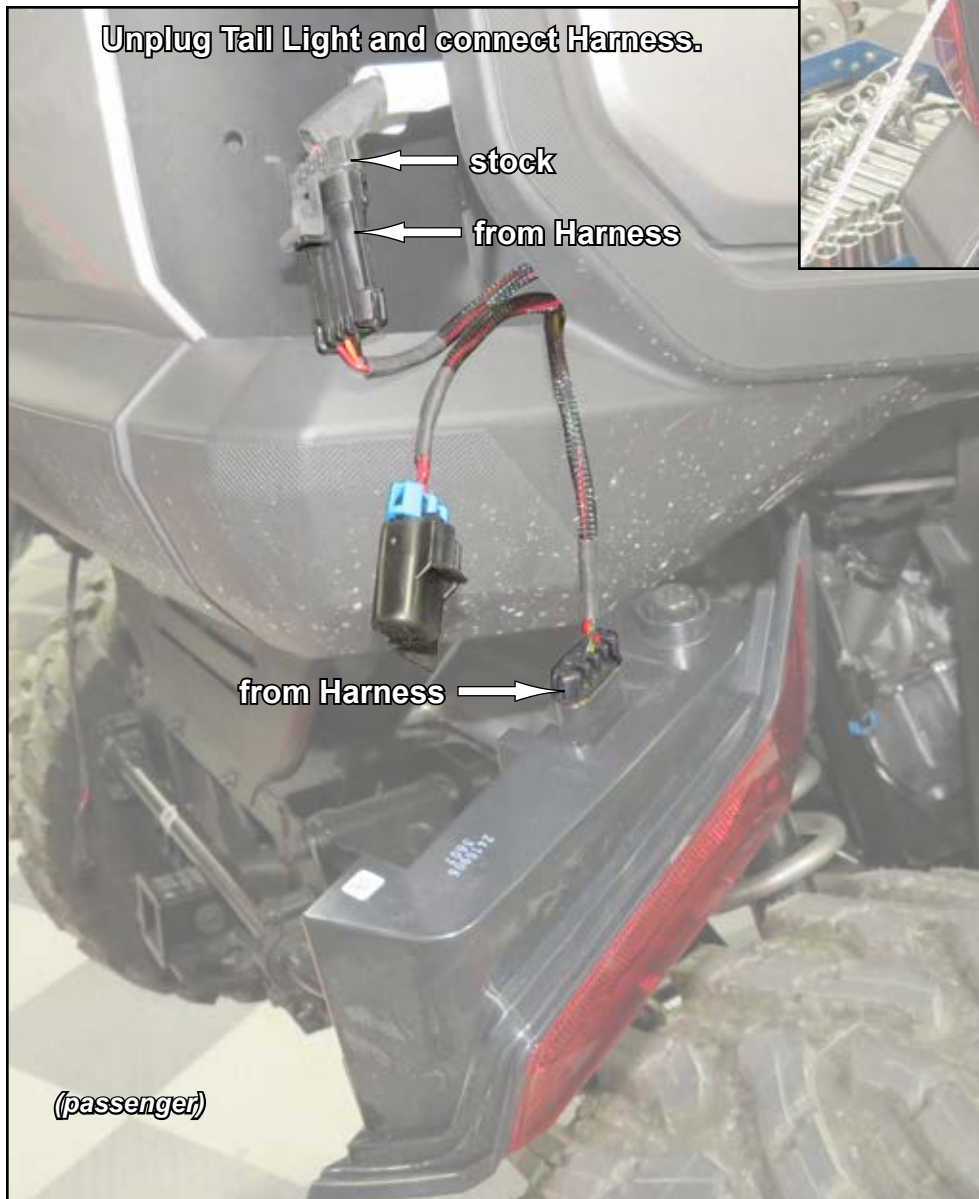



- Route remaining section of “rear” Harness to driver side Tail Light area.

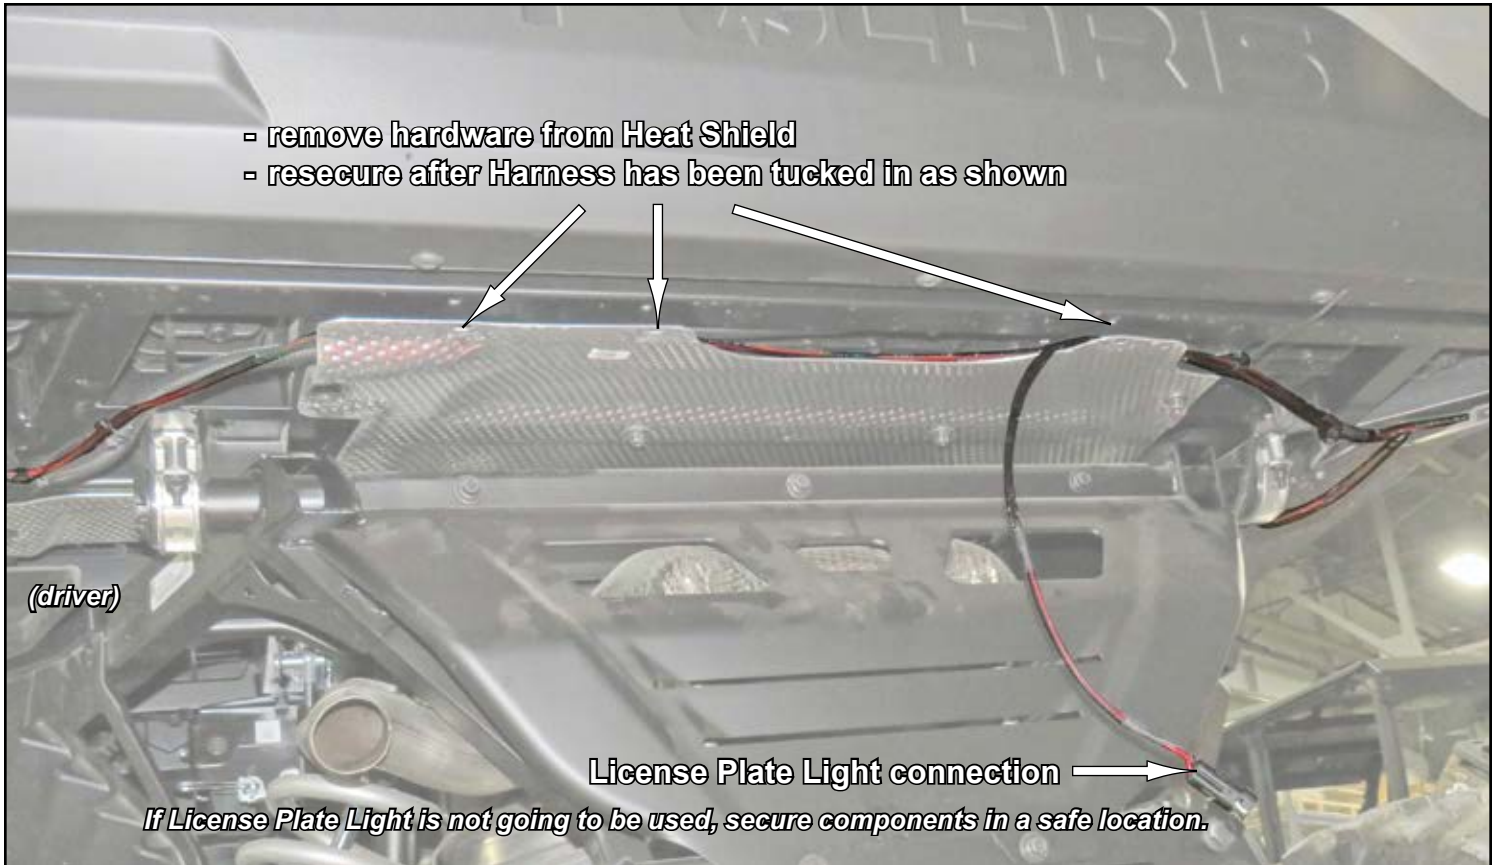

- Repeat steps for passenger side Tail Light, and connect Harness to driver side Tail Light.
- Reinstall all Tail Light hardware.

DISCONNECT BATTERY BEFORE CONNECTING OPTIONAL INDICATOR LIGHTS

Indicator Lights:

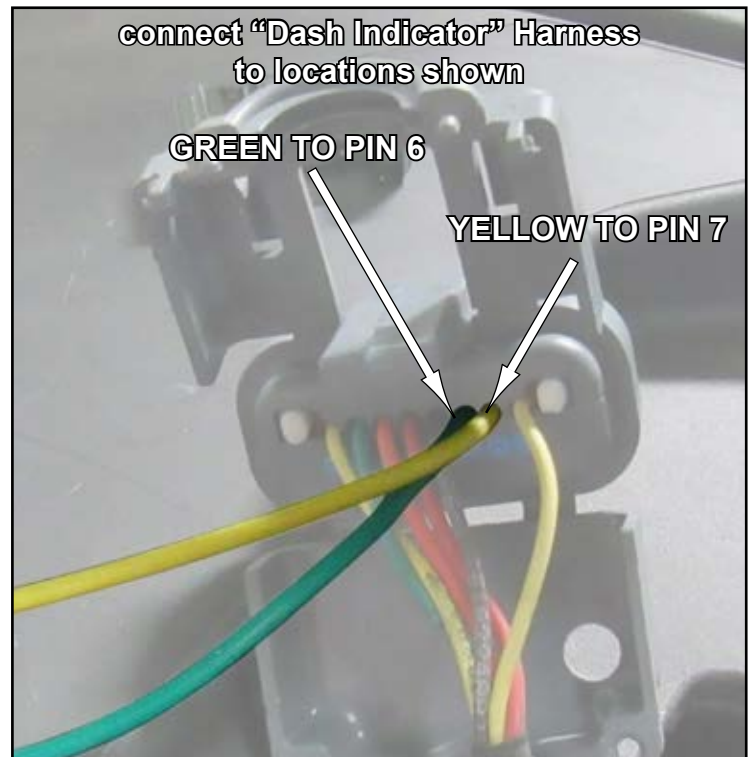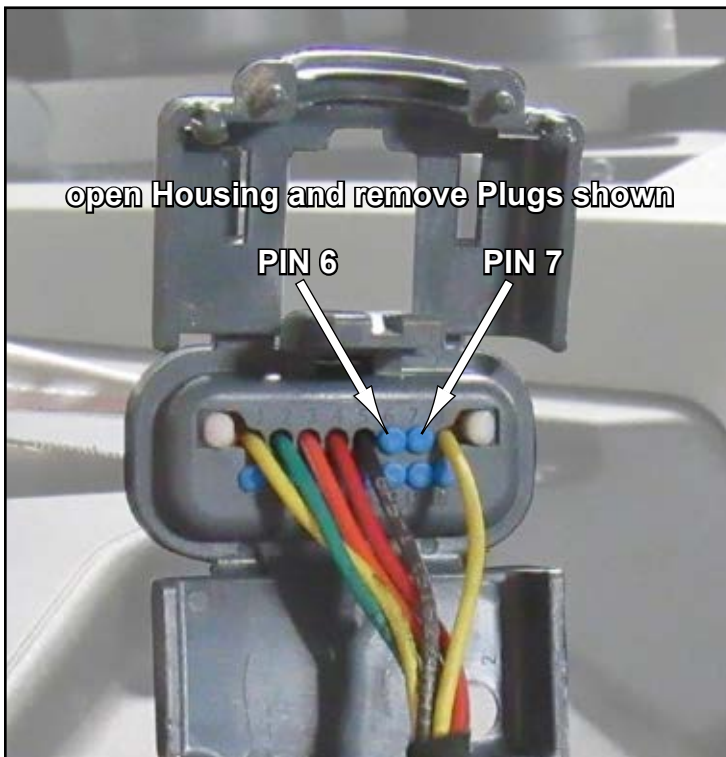

- Close Housing and reconnect to Gauge Pod.
- Reinstall previously removed Gauge Pod components.
- Reconnect Battery.

Horn:

- User may install Horn in location different than shown.
- Install Horn to Horn Bracket.
- Connect Harness to Horn. Connections can be made to either Tab on Horn.
- Secure to location shown; tighten.




ECU:

- User may install ECU in location different than shown.
- Plug in each Harness and secure ECU with hardware shown; tighten.

Before drilling any holes, check behind area to be drilled for any interference.

LED Signals:

- User may install in locations different than shown.
- Drill a Ø3/4" hole in body and install LED Signal. Repeat for remaining LED Signals.
- Plug LED Signals into corresponding inputs on Harness.
- Secure all Wires as needed.

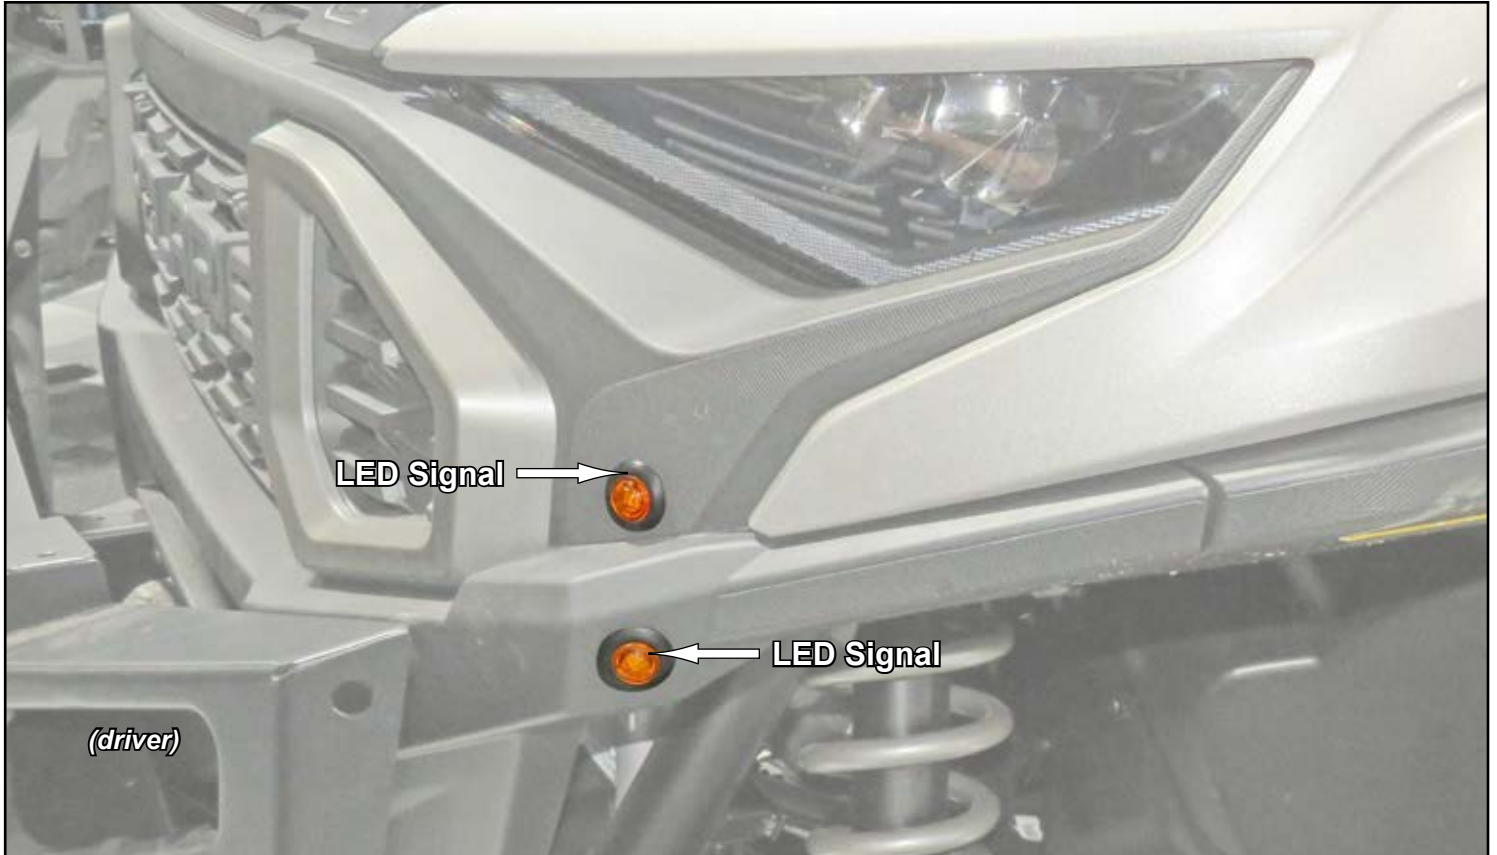

**If Light is hard to insert
separate as shown.**

- Separate LED from Gasket.
- Install Gasket into hole.
- Install LED into Gasket.

Gasket



Switch Mounting:

- User may install Switches in locations different than shown.
- Verify that Harnesses will reach Switches before mounting.

SuperATV recommends testing Switches before permanently mounting.



- Connect Harnesses to Switches.
- Secure Switches.




- Secure all Harnesses, as needed, with provided Wire Ties.
- Reinstall and/or reconnect all applicable previously removed stock components.

Accessory to Turn Signal Kit Wiring

Left Turn Signal Harness shown in illustrations.



Accessory to Turn Signal Kit Wiring continued

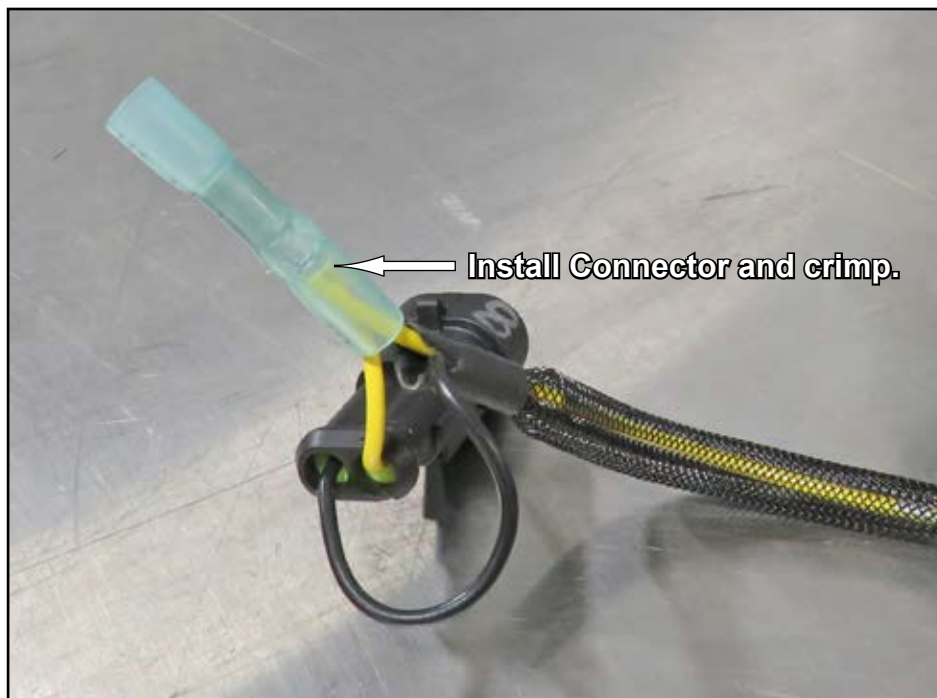

SuperATV recommends using a handheld mini torch, or lighter, to activate heat shrink on Connector.