

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

Instructions for Installation and Care of

Honda Talon


Poly Rear Window

HO-TALON-RW02

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Honda Talon Hard Rear Window.
2. Check over the parts included in the carton with the parts list shown below:

1" Bolts	6 each
2" Loom Clamps	4 each
1 ½" Loom Clamps	2 each
Small Washers	6 each
Thumb Nuts	6 each
3. From the side install the Rear Window through the rear down bars and get it in place so that it sits flush up against the outside of the roll cage.
4. Down the sides of the Rear Window are two slots. Using the 2" loom clamps attach the window as shown in the diagram below.

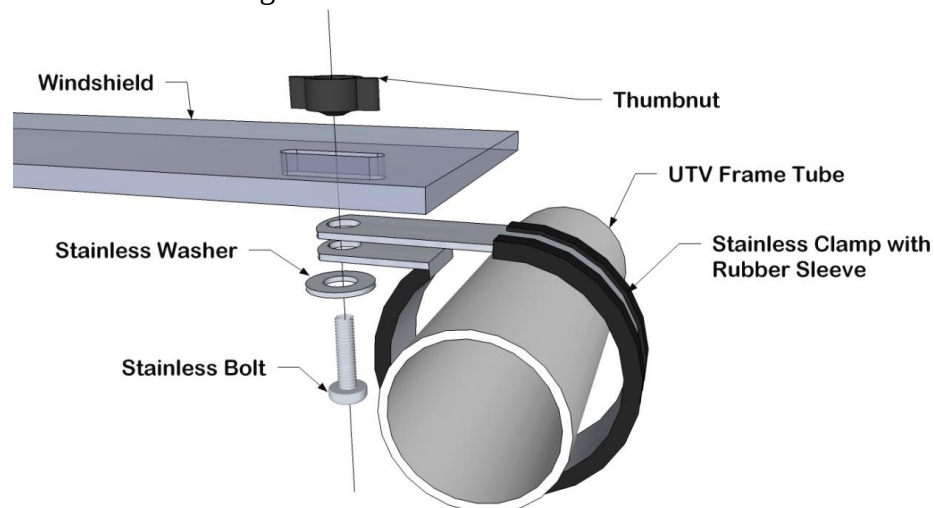

5. Along the bottom use the two 1 ½" clamps the attach the rear window as you did along the sides. The following pictures show where all the clamps go.



6. This concludes your installation. Enjoy!!