



RAVEK

CAN-AM MAVERICK X3 2017+

GLOVEBOX UPGRADE



INSTRUCTION MANUAL



RAVEK

CAN-AM MAVERICK X3 2017+ ***GLOVEBOX UPGRADE***

Part #: H65-301

Fitment: CAN-AM MAVERICK X3 2017+

PARTS INCLUDED:

- **UPPER GLOVEBOX UPGRADE HALF(1X)**
- **DIVIDER (4X)**
- **PUSH-IN MOUNTING STUD (1X)**
- **ALCOHOL WIPE (1X)**
- **PUSH PIN FASTNER (4X)**
- **DOUBLE SIDED TAPE (1X)**
- **LOWER GLOVEBOX UPGRADE HALF(1X)**
- **ADHESIVE PROMOTER WIPE (1X)**
- **ADHESIVE BACKED LOOP (1X)**
- **ADHESIVE BACKED HOOK (1X)**

TOOLS NEEDED: SCISSORS

CALL OUR TECH LINE WITH ANY QUESTIONS: 855-617-2787

INSTALLATION VIDEO GUIDE

SCAN CODE FOR VIDEO WALKTHROUGH



1 PREPARE THE OEM GLOVEBOX FOR INTSALL

1.1


REMOVE OEM LID

- Open the Maverick's glovebox lid.
- Firmly pull the lid straight forward to disengage it from the vehicle. [SEE FIGS. 1A & 1B]
- Once released, remove the lid completely and set it aside.
- The glovebox lid must be removed before installing the Maverick glovebox. [SEE FIG. 1C]



INSTALL PUSH-IN MOUNTING STUD

- Locate the factory hole in the dash where the glovebox lid was previously secured.
 - This mounting location uses a rubber grommet.
- Apply a small amount of lubricant (such as silicone spray or soapy water) to the tip of the provided push-in mounting stud to ease installation. [SEE FIG. 2A]
 - Lubrication is recommended but not required.
- Align the push-in mounting stud with the rubber grommet. [SEE FIG. 2A]
- Firmly press the stud into the grommet until it fully seats in place. [SEE FIGS. 2B & 2C]
- Once installed correctly, the stud should appear as shown below.

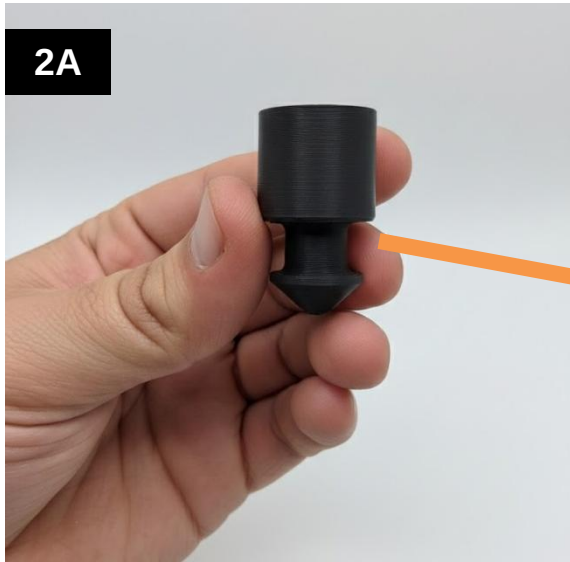

INSTALL HOOK STRIP ON OEM GLOVEBOX

- Identify the outer perimeter surface of the OEM glovebox. Refer to Figure 3A for the correct location.
- Thoroughly clean the perimeter surface using the provided alcohol wipe. Allow the surface to completely dry.
- Once dry, with the included adhesive promoter wipe; wipe the same flat surface and let dry.
- After properly preparing the surface, use the 1 yard of adhesive-backed hook material provided in your kit.
- Cut the material into sections and apply it around as much of the outer perimeter of the OEM glove box as possible. Apply to the areas indicated in Figure 3A and 3B.
- Apply firm, even pressure across the entire hook strip to ensure full contact and proper adhesion.

3A



PREP THE OUTER PERIMETER
WITH ALCOHOL AND
ADHESIVE PROMOTER WIPES



HOOK STRIPS INSTALLED



2.1


INSTALL LOOP STRIP ON UPPER GLOVEBOX HALF

- Locate the upper half of the glove box upgrade included in your kit. [SEE FIG. 1A]
- Locate the 1 yard of rolled loop material provided.
- Turn the upper half over. On the bottom side, apply the loop material around the entire perimeter, positioning it as close to the inner edge of the large center opening as possible. Use scissors to cut pieces to your needed lengths. [SEE FIG. 1B]
- Apply firm, even pressure along the loop to ensure proper alignment and a strong bond.

1A



1B

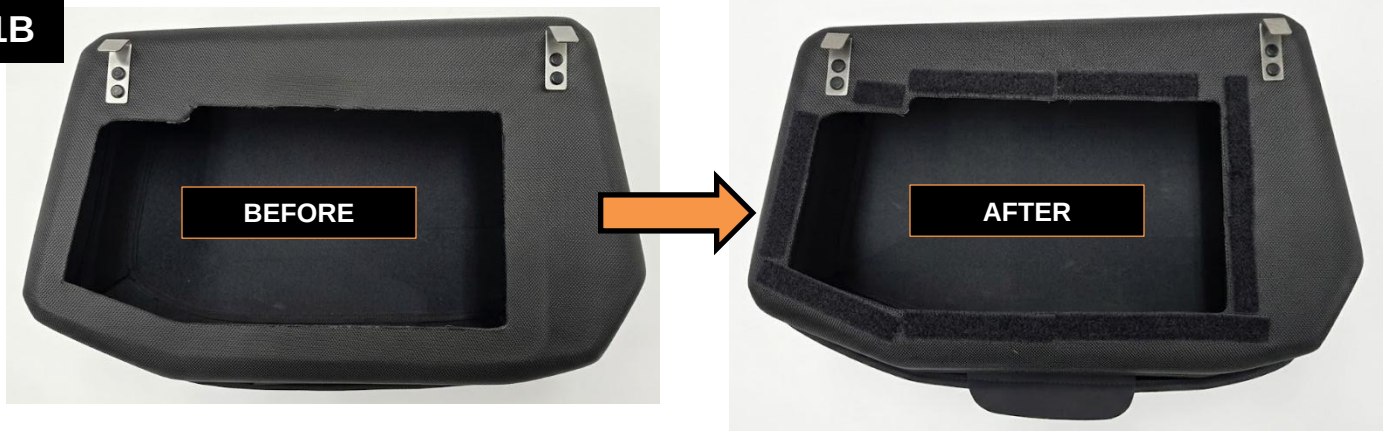


ASSEMBLE GLOVEBOX UPGRADE

- Locate the provided upper and lower glovebox upgrade halves included in your kit. [SEE FIG. 2A]
- Insert the lower half to the upper half, to form one complete glovebox unit.
- Press the integrated hook-and-loop surfaces together to secure both halves.
- Apply firm, even pressure along the entire seam to ensure a strong bond and proper alignment.
- Once fully joined, the glovebox upgrade should be one complete unit ready for installation on your machine. [SEE FIG. 2A]



INSTALL GLOVEBOX UPGRADE

- Attach the provided assembled glovebox upgrade to the OEM glovebox by engaging it onto the securing cylinder points. [SEE FIG. 3A]
- Position the assembled glovebox upgrade into the Maverick's OEM glovebox compartment. [SEE FIG. 3B]
- Align the mounting hole on the lower half of the glovebox upgrade with the previously installed push-in mounting stud.
- Once aligned, insert the provided push-pin fastener through the mounting hole and onto the push-in mounting stud.
- The push pin may be stiff during installation. Apply steady pressure until it fully seats into the hole of the push-in mounting stud. A small hammer may be used for additional leverage if necessary. [SEE FIG. 3A]

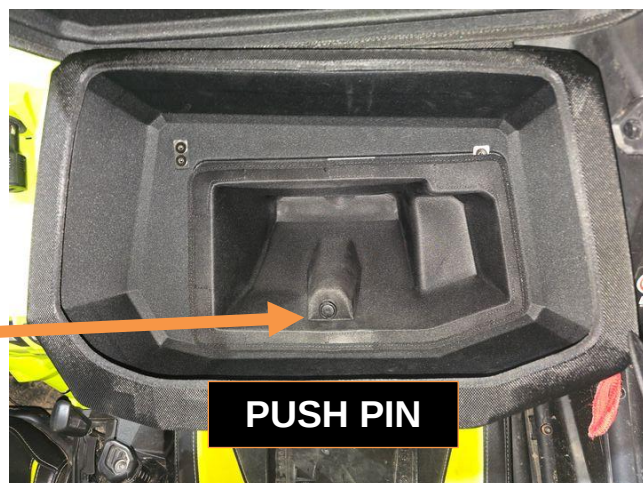

INSTALL YOUR DIVIDER (OPTIONAL)

- Your kit includes a removable divider. [SEE FIG. 4A]
- This divider allows you to separate the lower compartment from the upper section of the glovebox upgrade.
- Install the divider into the designated slot to create two storage areas. [SEE FIG. 4A]
- The integrated handle allows for quick and easy removal when needed.
- Use the lower compartment to store valuables or other items as desired.

4A





RAVEK
BUILT FOR MORE