

Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion.

Surface Preparation Instructions and Guidelines

Cleaning: To achieve a strong bond between Velcro adhesive and UTV surface, you must clean the surface. Use a mixture of 50% alcohol and 50% water to remove dirt, mud and dust from roll bars and plastic body components. Let dry. Repeat this process 3 times.

The adhesive hook should be applied at a temperature of 70 degrees or above.

Bond between UTV and adhesive hook is dependent upon the amount of adhesive to surface contact development. Firm application pressure develops a better adhesive contact and improves bond strength.

After application, the bond strength increases and approaches the ultimate bond strength after 72 hours. Bond strength build up: 20 min equals 50% bond strength, 1 hour equals 75% bond strength, one day equals 90% bond strength, and 3 days equals 100% bond strength.

More tips for installation.

Two is better than one: We recommend a second person be involved for the installation process. Getting the panel in the correct position takes some pulling and tugging, we find the process runs smoother when there are two people pulling.

Test adhesion: Use a small piece of Velcro, remove backing and adhere to roll bars. Wait 20 minutes, Velcro should already be difficult to remove.

Still having trouble with adhesion: If Velcro is still not adhering to the roll bars, use a piece of hook (rough side of Velcro) to “rough up” the surface of your roll bar. We do not recommend this for the plastic body of your UTV, it will scratch.

Unsure about Velcro placement: With-out removing the white backing, attach the Velcro to your enclosure panel. Hold panel up to the UTV and note the area that the Velcro should attach. You can use the double-sided straps with-out Velcro to help hold up the panel while you remove the white backing and adhere sticky Velcro. We will send extra Velcro that can be used to hold the enclosure to the cab frame for easy notation of Velcro placement.

Attaching panel: Attach the panel top first, then work your way around the panel pulling the tabs and sticking them to the corresponding adhesive Velcro. The binding (black trim) of the panel should align to the outside of the rear roll bars.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You

For Choosing

SUPERATV.COM

Installing with Hard Top.

If you have a hard top on your UTV, you will need to remove it before installing the rear panel. After the installation of your enclosure is complete you will then reinstall the hard top.

If clamps for the hard top are interfering with the sewn-on Velcro tabs or straps on your enclosure you can modify the tabs and straps easily by cutting them to fit. Mark where the tabs need to be cut to accommodate your windshield or hard tops clamps or bolts. Cut the tabs and burn the edges with a lighter to prevent unraveling. Do not cut in to the binding (darker black trim around your door panel).

Installation Instructions

Step 1: Remove your UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Remove existing hard top.

Step 3: Clean all surfaces on which you will be placing the adhesive Velcro according to the surface preparation instructions. Wait until the surfaces are dry.

Step 4: Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and pictures. Press firmly.

Step 5: Wait 72 hours! This step is very important to the life of your Velcro. Waiting the full 72 hours will ensure that your Velcro and enclosure will stay on in rain, sleet, snow or mud.

Step 6: After all adhesive Velcro strips are attached, begin attaching panel to the cab frame.

Step 7: After panel is attached work your way around the UTV remove, pull, and reattach, each Velcro tab to achieve a tight fit. You may need to do this a few times.


Step 8: Re-install your hard top.

See enclosed Product Care sheet for instructions on how to properly care for your UTV Enclosure.

BACK PANEL



PICTURE SHOWS THE SEWN-ON VELCRO TABS AND STRAPS THAT CORRESPOND TO THE VELCRO CHART

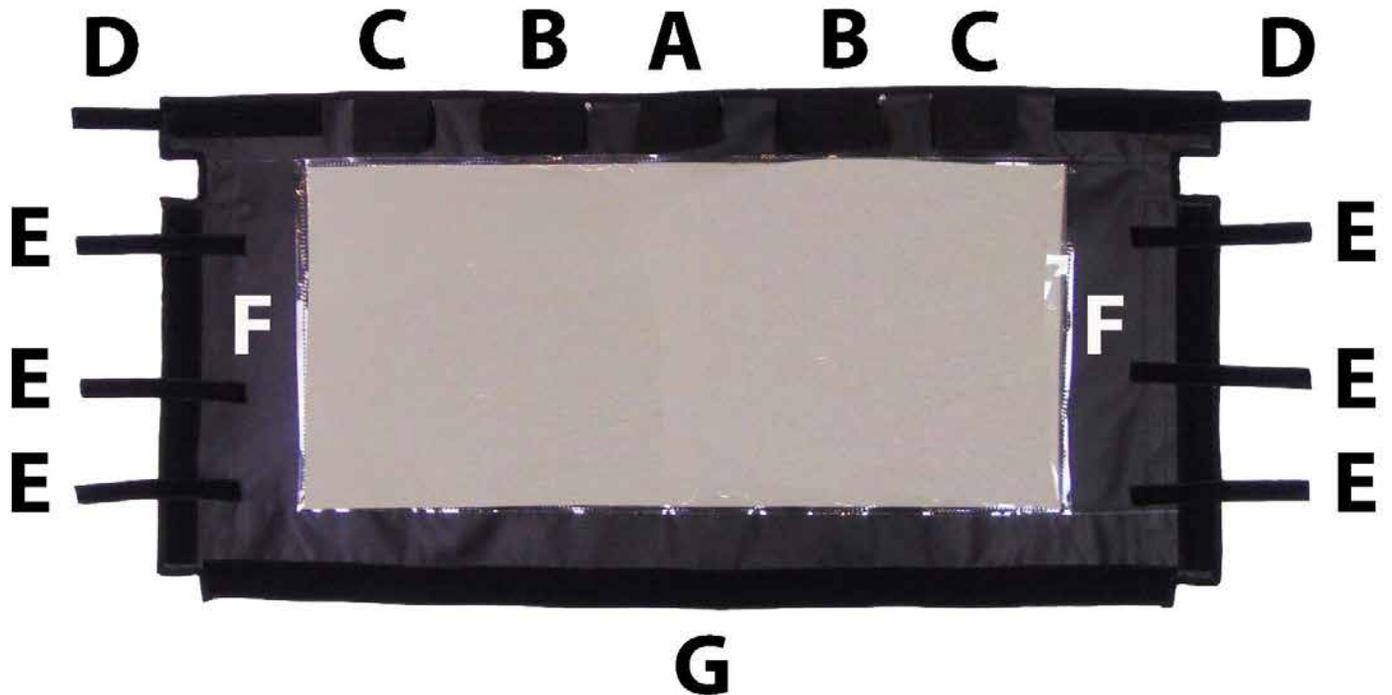

ADHESIVE HOOK TABLE

REFERENCE	QUANTITY/SIZE	PLACEMENT
A	1-4"	PLACE HORIZONTALLY ON THE BACK INSIDE THE CAB FRAME BELOW CENTER CUT OUT (FIGURE 1)
B	2-5"	PLACE HORIZONTALLY ON EITHER SIDE OF VELCRO STRIP A (FIGURE 1)
C	2-4"	PLACE HORIZONTALLY ON EITHER SIDE OF VELCRO STRIPS B (FIGURE 1)
D	2-12"	WRAP AROUND THE OUTSIDE OF THE BACK CAB FRAME, AT THE TOP BELOW THE CRUVE OF THE ROLL BAR. (FIGURE 2)
E	6-6"	WRAP AROUND REAR ROLL BAR YOU MAY CHOOSE TO WRAP THESE STRIPS AROUND STRIPS F. OR YOU MAY CUT STRIPS E TO ONLY WRAP AROUND THE FRONT OF THE REAR ROLL BAR. (FIGURE 3)
F	2-18"	PLACE VERTICALLY ON THE OUTSIDE OF THE CAB FRAME ON THE REAR ROLL BAR. (FIGURE 4)
G	1-54"	PLACE HORIZONTALLY ACROSS BACK BOTTOM OF THE WINDOW FRAME (FIGURE 5)

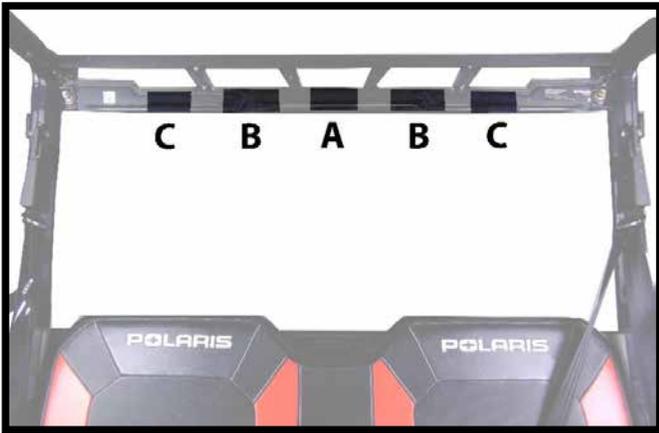


Figure 1: SHOWS PLACEMENT OF 4", 5" AND 4" VELCRO STRIPS (A, B, C).



Figure 2: SHOWS PLACEMENT OF 12" VELCRO STRIPS (D).



Figure 3: SHOWS PLACEMENT OF 6" VELCRO STRIPS (E)



Figure 4: SHOWS PLACEMENT OF 18" VELCRO STRIPS (F).



Figure 5: SHOWS PLACEMENT OF 54" VELCRO STRIP (G)

WHEN INSTALLED CORRECTLY BACK PANEL SHOULD BE STRAIGHT AND PULLED TIGHT TO CAB FRAME.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**

Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion.

Surface Preparation Instructions and Guidelines

Cleaning: To achieve a strong bond between Velcro adhesive and UTV surface, you must clean the surface. Use a mixture of 50% alcohol and 50% water to remove dirt, mud and dust from roll bars and plastic body components. Let dry. Repeat this process 3 times.

The adhesive hook should be applied at a temperature of 70 degrees or above.

Bond between UTV and adhesive hook is dependent upon the amount of adhesive to surface contact development. Firm application pressure develops a better adhesive contact and improves bond strength.

After application, the bond strength increases and approaches the ultimate bond strength after 72 hours. Bond strength build up: 20 min equals 50% bond strength, 1 hour equals 75% bond strength, one day equals 90% bond strength, and 3 days equals 100% bond strength.

More tips for installation.

Two is better than one: We recommend a second person be involved for the installation process. Getting the panel in the correct position takes some pulling and tugging, we find the process runs smoother when there are two people pulling.

Test adhesion: Use a small piece of Velcro, remove backing and adhere to roll bars. Wait 20 minutes, Velcro should already be difficult to remove.

Still having trouble with adhesion: If Velcro is still not adhering to the roll bars, use a piece of hook (rough side of Velcro) to “rough up” the surface of your roll bar. We do not recommend this for the plastic body of your UTV, it will scratch.

Unsure about Velcro placement: With-out removing the white backing, attach the Velcro to your enclosure panel. Hold panel up to the UTV and note the area that the Velcro should attach. You can use the double-sided straps with-out Velcro to help hold up the panel while you remove the white backing and adhere sticky Velcro. We will send extra Velcro that can be used to hold the enclosure to the cab frame for easy notation of Velcro placement.

Attaching panel: Attach the panel top first, then work your way around the panel pulling the tabs and sticking them to the corresponding adhesive Velcro. The binding (black trim) of the panel should align to the outside of the rear roll bars.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You

For Choosing

SUPERATV.COM

Installing with Windshield and Hard Top.

If you have a windshield and or hard top on your UTV, you will need to remove them before installing the door panels. After the installation of your enclosure is complete you will then reinstall the windshield and hard top.

If clamps for the windshield or hard top are interfering with the sewn-on Velcro tabs or straps on your enclosure you can modify the tabs and straps easily by cutting them to fit. Mark where the tabs need to be cut to accommodate your windshield or hard tops clamps or bolts. Cut the tabs and burn the edges with a lighter to prevent unraveling. Do not cut into the binding (darker black trim around your door panel).

Installation Instructions

Step 1: Remove your UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Remove existing windshield and hard top.

Step 3: Clean all surfaces on which you will be placing the adhesive Velcro according to the surface preparation instructions. Wait until the surfaces are dry.

Step 4: Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and pictures. Press firmly.

Step 5: Wait 72 hours! This step is very important to the life of your Velcro. Waiting the full 72 hours will ensure that your Velcro and enclosure will stay on in rain, sleet, snow or mud.

Step 6: After all adhesive Velcro strips are attached, begin attaching each panel to the cab frame.

Step 7: After all panels are attached work your way around the UTV remove, pull, and reattach each Velcro tab to achieve a tight fit. You may need to do this a few times.

Step 8: When your enclosure is in the correct position the binding or trim around the panels will rest in the center of the roll bar. If you have a windshield the binding, will rest along the edge of your windshield.

Step 9: Re-install your windshield and hard top.

See enclosed Product Care sheet for instructions on how to properly care for your UTV Enclosure.



DRIVERS SIDE (INSIDE)



PASSENGER SIDE (INSIDE)

PICTURES SHOW THE SEWN-ON VELCRO TABS AND STRAPS THAT CORRESPOND TO THE VECRO CHART.



DRIVERS SIDE



PASSENGER SIDE

ADHESIVE HOOK TABLE

DOOR KIT

REFERENCE	QUANTITY/SIZE	PLACEMENT
A	2-26"	Attach vertically to the outside of the front facing roll bars. Sewn on Velcro strip will attach to this adhesive strip. (FIGURE 1)
B	2-26" (1")	Attach vertically to the outside track of the front facing roll bar. Velcro straps will wrap around the bar and connect to adhesive Velcro. The straps depicted in the picture are included in your Velcro kit. They are detachable so that you may decide the best placement depending on your accessories. (FIGURE 2)
C	2-7"	Attach vertically to the top of the factory visor plate on each side. (FIGURE 3)
D	2-22"	Attach horizontally to the inside track of the top side roll bar. Velcro tab will wrap around the top of the roll bar. (FIGURE 4)
E	2-10"	Attach to top of back roll bars wrap adhesive Velcro around to the inside of the cab. (FIGURE 5)
F	2-22"	Attach vertically to the back roll bars. (FIGURE 5)
G	2-9"	Raise the bed and attach vertically to the bottom of the back roll bars. (FIGURE 6)
H	2-10"	Attach vertically to the front fender. (FIGURE 7)
I	2-19"	Attach vertically to the front fender below strip H. (FIGURE 7)
J	2-13"	Attach at an angle to the back body of the UTV. (FIGURE 8)
K	2-13"	Attach to the body of the UTV below Velcro strip I. (FIGURE 8)
L	2-22"	Attach horizontally to the outside floor of the UTV. (FIGURE 9)
	4-2"	These strips are for the tops of your windshield clamps, they are optional.



Figure 1: SHOWS PLACEMENT OF 26" VELCRO STRIPS (A) VELCRO. THE STRIP OF VELCRO SEWN ON TO THE DOOR WILL ATTACH TO THIS STRIP.

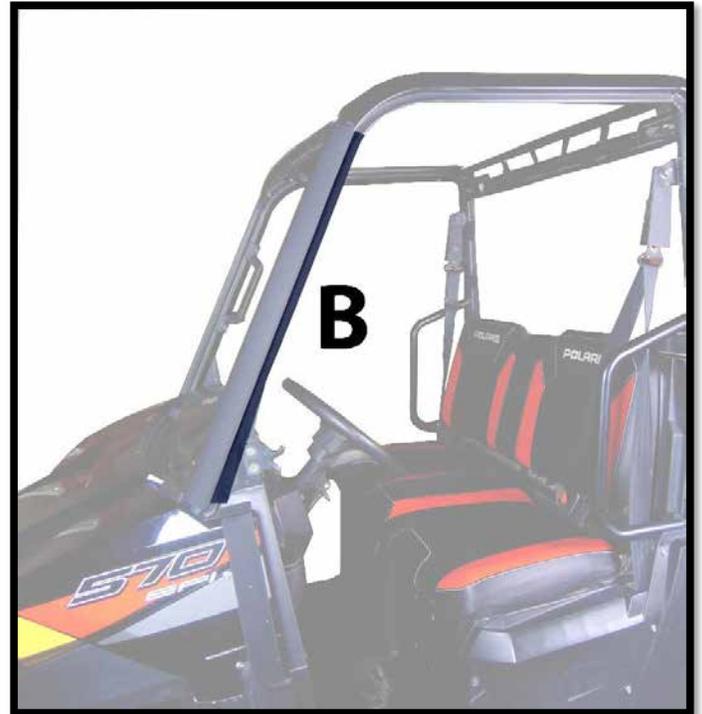


Figure 2: SHOWS PLACEMENT OF 26" VELCRO STRIPS (B) STRAPS ON THE DOOR WILL WRAP AROUND ROLL-BAR AND CONNECT TO ADHESIVE VELCRO



Figure 3: SHOWS PLACEMENT OF 7" VELCRO STRIP (C)

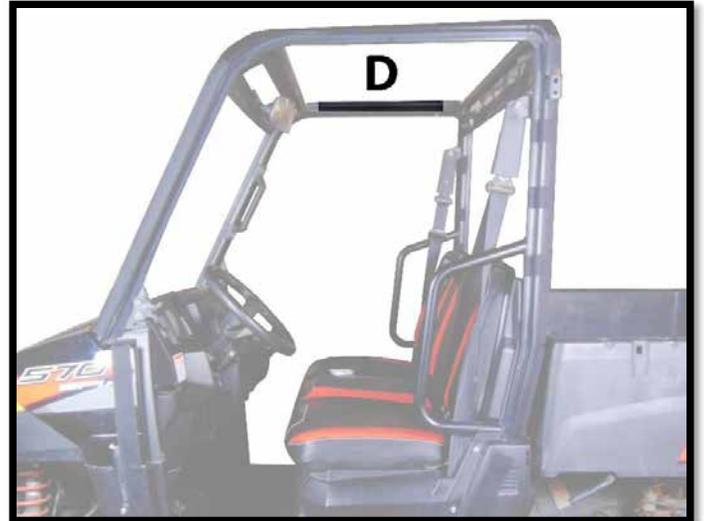


Figure 4: SHOWS PLACEMENT OF 22" VELCRO STRIPS (D) WRAP TAB AROUND THE TOP OF THE ROLL BAR.



Figure 5: SHOWS PLACEMENT OF 10" AND 22" VELCRO STRIPS (E AND F)



Figure 6: SHOWS PLACEMENT OF 9" VELCRO STRIPS (G)



Figure 7: SHOWS PLACEMENT OF 10" AND 19" VELCRO STRIPS (H AND I)



Figure 8: SHOWS PLACEMENT OF 13" VELCRO STRIPS (J AND K).



Figure 9: SHOWS PLACEMENT OF 22" VLECRO STRIPS (L)



Figure 10: WHEN ATTACHING DOOR TO ADHESIVE VELCRO START WITH SIDE A. ALIGN BLACK TRIM ON THE DOOR PANEL TO THE EDGE OF THE INSET ROLL BAR. WRAP TABS AROUND THE INSIDE OF THE BAR AND ATTACH TO ADHESIVE VELCRO. CONTINUE TO ATTACH DOOR TABS AND STRAPS IN THE ORDER OF THE PICTURES AND VELCRO CHART.



Figure 11: DOOR SHOULD RESEMBLE PHOTO WHEN INSTALLATION IS COMPLETE.



Figure 12: REINSTALL WINDSHIELD AND HARD TOP OVER THE DOOR KITS TABS AND STRAPS.

Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**