





RS1 Solo Roof Instructions (P186R136)

NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on proarmor.com.

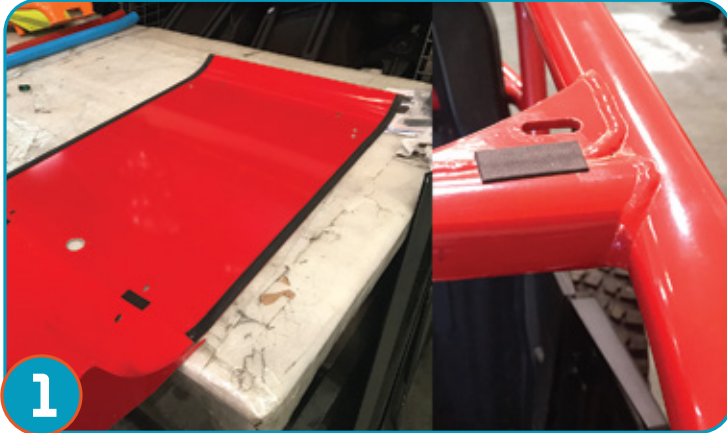

Apply provided foam padding to Solo roof along the outer sides of roof and front two corners on cage and one strip in the middle of the rear cross tube, as shown.

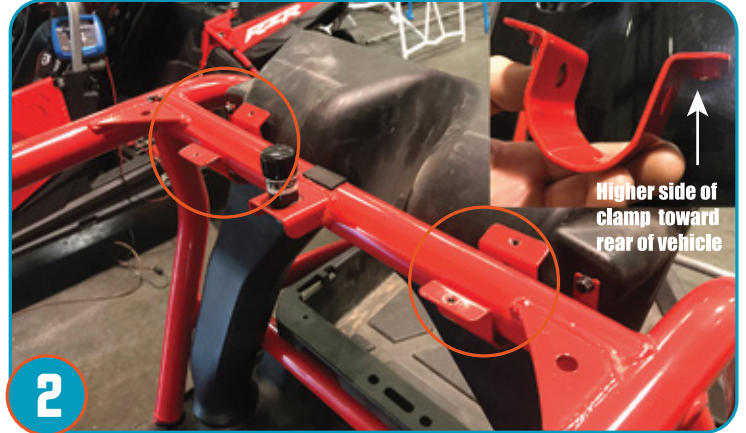

Apply two cage clamps, sliding them up and around the B-pillar cross tube as shown, with higher side of clamp toward the rear of vehicle.



Place Solo roof in place on top of the cage.




Using the provided allen bolts secure the rear of roof to the cage clamps from step 2.



Using the provided allen bolts (x2) secure the front of roof to the cage on both sides of vehicle with two cage clamps, at the A-pillar cross tube as shown.



RS1 Solo Roof Instructions (P186R136)

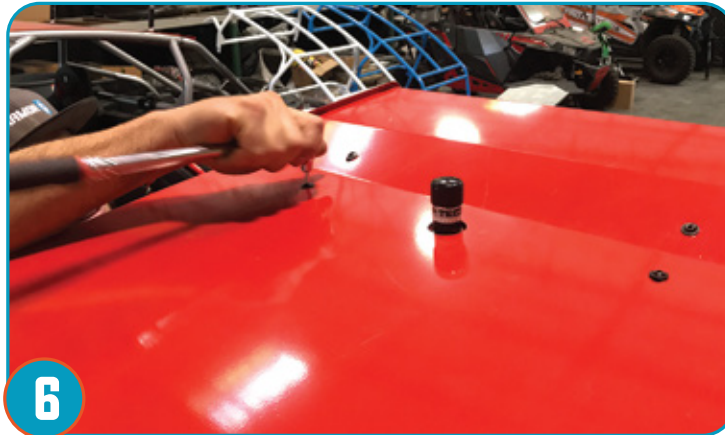

Tighten all installed allen bolts (6).



⚠ WARNING

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.