
CONTENTS:

- 1- PRO XP SPORT REAR BUMPER
- 2- HARDWARE

TOOLS REQUIRED: RATCHET 15MM SOCKET 15MM WRENCH 10MM WRENCH 4MM ALLEN SOCKET

PRO XP Rear Sport Bumper & Skid (P199P361/P199P367)

NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on proarmor.com.

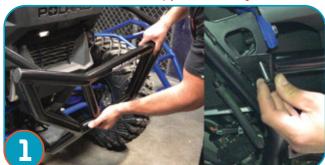

Align Bumper to rear of vehicle lining up bolt holes, inserting a bolt and nut to both sides to support and position bumper in place before tightening to factory specs.



Insert lower bolts and nuts to both sides of bumper, securing bumper to frame.



Tighten rear bumper upper and lower bolts firmly securing rear bumper to frame of the vehicle.



Apply provided rubber strips to skid plate clamps as shown. Using provided bolts and nuts, attachand hand tighten clamps to the Rear skid.



Position skid onto rear bumper mounted to vehicle and tighten claps to bumper securing skid to rear bumper.



AWARNING

Never stick hands, head or arms outside of vehicle at any time when it is in motion

Never stick name, nead or arms outside or venicle at any time when it is in motion.

Altways were and use proper softly equipment when using any Pra Armor product.

Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.

Disclaimer please read: This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user/ occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.

unecus; related to the manner invincint installation or an invincint in the manner of thorized dealer or trained technician, inspect your installation.