



**CONTENTS:**


- 1- ALUMINUM ROOF
- 2- HARDWARE (8-12MM M6 BOLTS) (2- 10MM M6 BOLTS)
- (2- WASHERS)
- TOOLS REQUIRED: » RATCHET, 4MM ALLEN SOCKET

## PRO R / TURBO R ROOF INSTRUCTIONS (P2111R137/P2111R138)

\*\*\*NOTE: PRIOR TO INSTALLATION, PLEASE VERIFY IF A REVISED VERSION OF THIS INSTRUCTION SHEET IS AVAILABLE ON PROARMOR.COM. \*\*\*




**1**  
Apply provided foam padding to the roof along the under-sides of roof where the roof will come in contact with the cage (roof underside). Picture is for illustration purposes only, then place roof on top of cage.

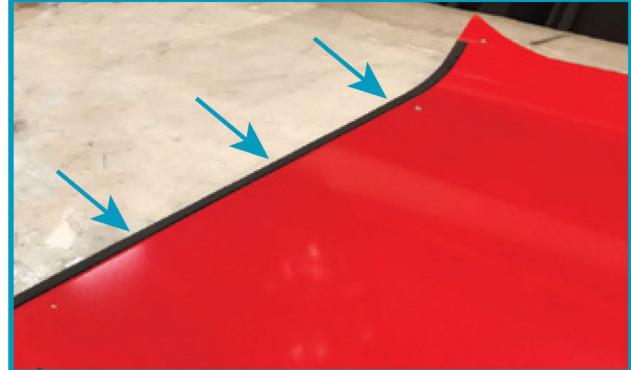

A. The roof bolts directly to cage, 1- bolt & 1-washer (washers for front roof bolts only), per side of vehicle.

\* Washers to be placed on bolt between roof & cage

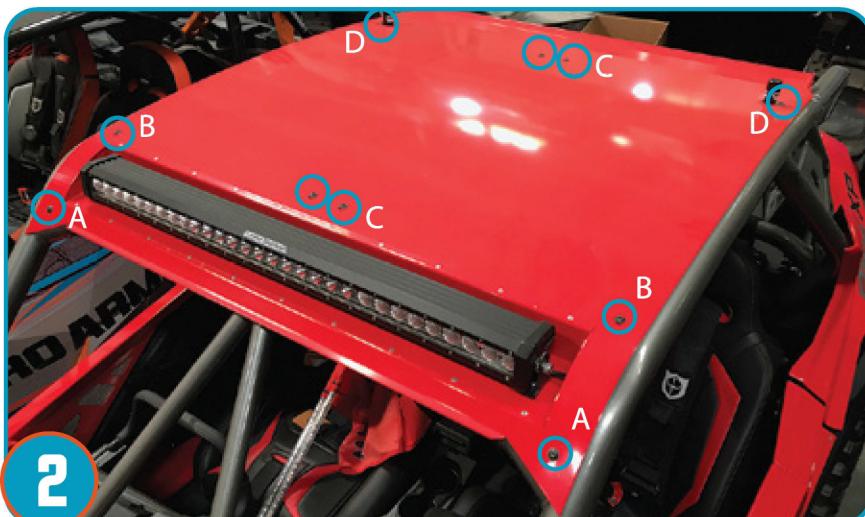

**2**  
Using the supplied allen bolts (10), line up the bolt holes of the roof to the bolt locations on the cage and tighten roof to secure roof to cage.



B. 1- 10mm bolt per side just past roof bend.



C. Center bolts 2 per location for front and rear of roof directly to cage.



D. Rear bolts 1 per side of rear roof directly to cage.



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

**WARNING**