

Tusk Force Aluminum Roof Polaris RZR 1000/900

Part#1811430002

Thanks for your purchase of the Tusk aluminum roof, it will be a great addition to any side-by-side vehicle. The Tusk aluminum roof does a great job blocking dust and the weather from getting inside the cab of your utility vehicle.



Assembly: Before you throw any packaging away, make sure you received all the necessary hardware:

Contents

- 1- Tusk aluminum roof panel
- 2- Tusk billet aluminum 1.75" roll cage clamps
- 2- Tusk roll cage clamp gaskets
- 4- Allen head cap screws M6 x 1.0 x 20mm
- 2- M8 x 1.25 x 16mm button head bolt
- 2- M8 x 1.25 x 30mm button head bolt
- 12 LF- Foam tape gasket 1/4" x 3/4"
- 2-M8 x 1.25 x Barrel Nut



Foam gasket tape 1/4"x 3/4" x 12LF



Billet 1.75" Roll Cage Clamp (2)



Button head M8 x 1.25 x 16mm (2)




Button head M8 x 1.25 x 30mm (2)



M8 Barrel nut (2)



Allen Cap Screw M6 x 1.0 x 20mm (4)

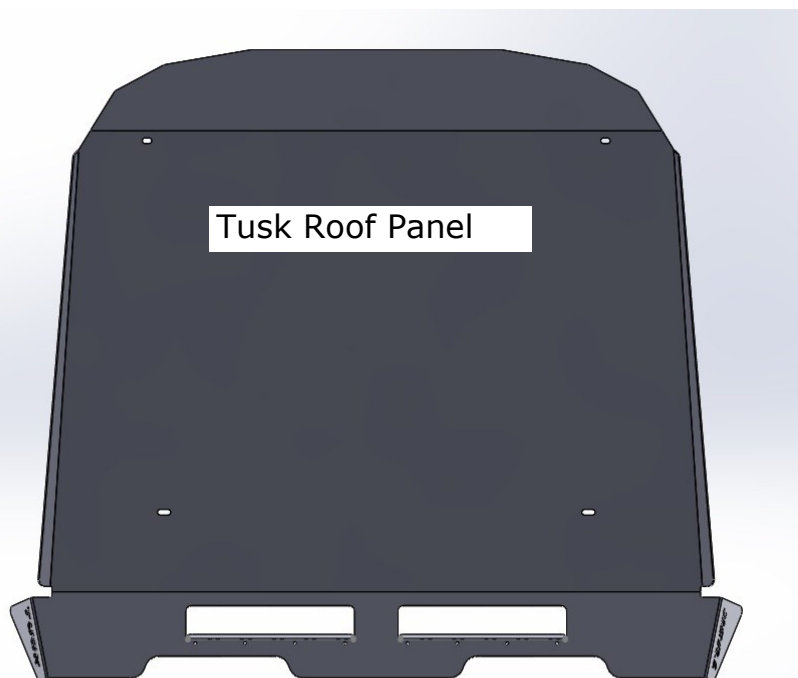

Roll cage clamp gaskets (2)

Tusk Force Aluminum Roof Polaris RZR 1000/900

Part#1811430002





Roof Installation

It is your choice if you want to run the OEM visor, the Tusk roof **will fit with or without** the OEM visor installed. **Image #1**



2. Using water and a clean rag, wipe down the roll cage to make it free off any dust dirt or oily substances. **Do not install the foam tape gasket yet!**
3. Locate the two holes in the front mounting brackets and install the two supplied M8x 1.25 barrel nuts as shown in image#2.

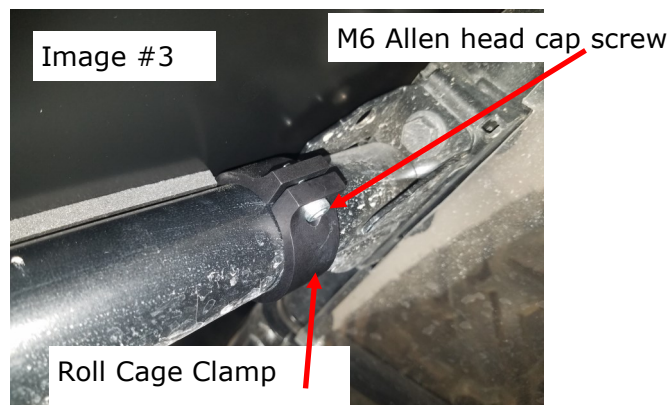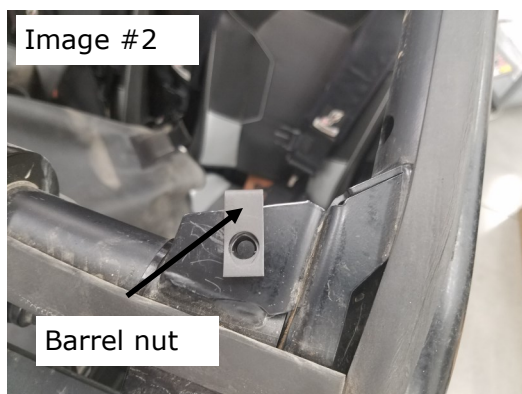

4. Place Tusk aluminum roof onto the roll cage and loosely install the two supplied M8x1.25 x 20mm allen head bolts into the previously installed barrel nuts. (Tighten finger tight)
5. Install the two supplied Tusk Roll Cage Clamps onto the roll cage positioning them under the two rear mounting holes in the roof as shown in **image #3**. Next install the two supplied M8 x 1.25 x 16mm allen head bolts as shown in **images #4 & #5**. (Tighten finger tight)



Tusk Force Aluminum Roof Polaris RZR 1000/900

Part#1811430002



6. Adjust roof for optimal desired fit and tighten all four M8 allen bolts, tighten both roll cage clamps to roll cage. Take great care not to over tighten roof bolts.
7. *Foam gasket installation.* Remove roof from machine leaving the two roll cage clamps installed on roll cage. **Image #6**
8. Install supplied foam gasket tape as shown in **images 7 & 8**. Install it on the top horizontal surface of the roll cage that will come in contact with the Tusk aluminum roof. The foam tape will help reduce vibration and noise in certain conditions.
9. Reinstall roof and four bolts and tighten.
10. Enjoy the protection from the elements that your new Tusk Profile aluminum roof provides.

Image #6

