


## PINCH WELD COVERS

2021+ BRONCO

SRBR-03

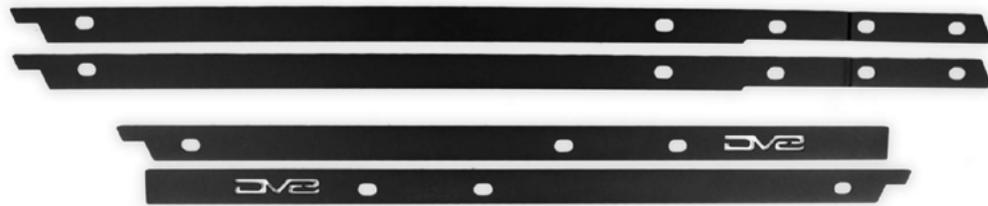

### TOOLS REQUIRED

- 10mm, 13mm Socket
- 4mm Allen Bit

### SKILL LEVEL

- Novice/Intermediate
- 1 person (you)

Some skill level required. You can easily install this by yourself, however, additional help may be useful.

### TIME REQUIRED

- 1.5 Hour

Time to install this should only take about an hour and a half.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




# INSTALLATION MANUAL

## STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

### Hardware Included:

- (5) M6x30
- (4) M6 Flat Washers
- (13) M8x25
- (24) M8 Flat Washers
- (12) M8 Serrated Nuts

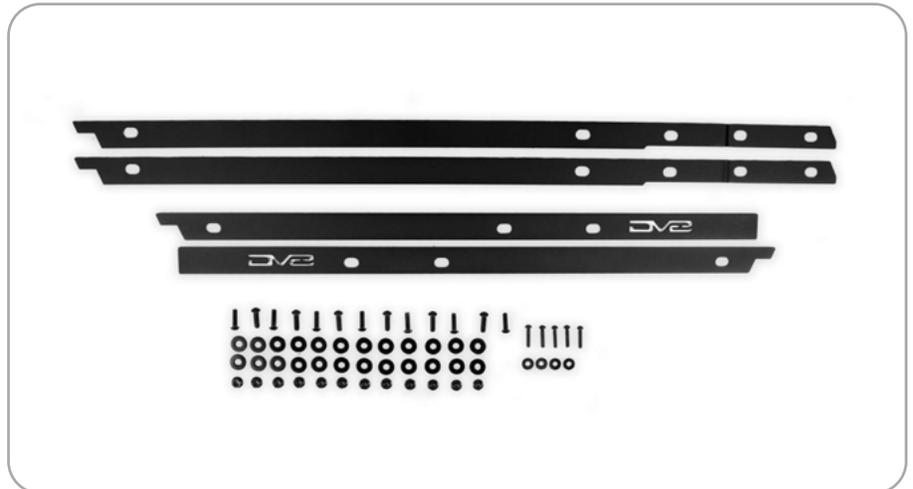

## STEP 2

Remove any factory sliders, steps, or rock rails if equipped.



## STEP 3

Use a 10mm socket to remove the bolts located on the pinch weld covers towards the front of the vehicle, directly behind the front tire.



# INSTALLATION MANUAL

## STEP 4

Place the front section of the covers up to the pinch welds and secure using the provided M6 and M8 hardware with a 10mm and 13mm socket.

Note: The M6 hardware must be used for the (2) front mounting holes.



## STEP 5

Place the rear section of the covers up to the pinch welds and secure using the provided M8 hardware with a 13mm socket.



# INSTALLATION MANUAL

---

## STEP 6

Double check all hardware is secure.

Congrats! You are finished with the install of the 2021+ Ford Bronco 4-Door Pinch Weld Covers.

