



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030  
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

# US2-C8

## Universal Cage Mount SSV Works 8" Speaker Enclosures

### WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

### TOOLS NEEDED FOR INSTALLATION

- 5mm Allen Key
- 8mm Open End Wrench
- 3mm Allen Key
- #2 Phillips Screwdriver

Placement of the pod depends on what type of roll cage you have (factory or aftermarket) and your preference of where you want the pods to be installed. In these instructions, we have installed them on the outside vertical bars at the back of the roll cage.

### PARTS LIST IMAGES



1. US2-C8 Enclosures (1 pair)



2. Dual Mounting Ring Adapter x 2



3. Ring Clamp x 4



4. M6x1.0x20mm (8mm Hex Head) Screws & Washers x4



5. M6x1.0x45mm (5mm Allen Head) Screws & Washers x4



6. M6x1.0x6mm (3mm Allen Head) Screws x4



7. #7 Screws x 8  
(comes with unloaded pods only)

### INSTALLATION NOTES

It is recommended to wrap the bag that the clamps come in around the cage before you slide the clamp onto the cage to prevent scratching.

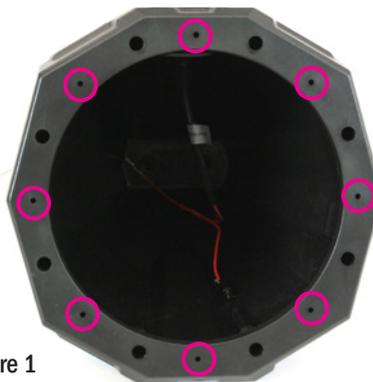



Figure 1

#### FOR UNLOADED ENCLOSURES:

If using an alternative brand speaker, first see if the speaker holes line up with the screw bosses (circled in pink on Figure 1). Use the supplied (8) SSV Works #7 screws when installing your own speaker.



A. Find your desired orientation for the US-C8 on your roll cage and fasten the set screws with a 3mm allen key in the opposite holes of where the clamp will install.

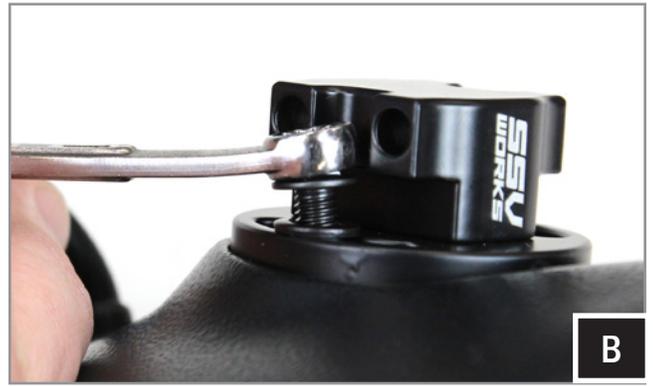

B. Loosely install the clamp base to the US-C68 with (2) M6x1.0x20mm screws and washers using a 8mm open-ended wrench. Position the clamp base to your desired position and tighten the (2) M6x1.0x20mm screws.



C. Wrap a plastic bag around the roll cage to prevent scratching. Press the clamps onto the roll cage over the plastic bag. Place the (2) M6x1.0x45mm screws and washers through the clamp and clamp base. Secure the clamps to the roll cage with a 5mm allen key.



D. Position the speaker to your liking and tighten the M6x1.0x20mm screws.



E. Route the speaker wire away from any moving parts and any sharp metal, then connect to the amplifier.

Connecting the US2-C8 using the pre-installed will require an optional SSV Works plug-&-play harness (B-H2195 - sold separately). If you are not using the B-H2195 harness, simply cut off the two-pin connector and follow the wiring instruction below.

## WIRING INSTRUCTIONS

For proper sound, ensure the speaker polarity is correct connect the "+" to the "+" and the "-" to the "-" from the speaker wire to the amplifier. If using with an SSV Works complete system refer to the amplifier wiring instructions for more detailed wiring information.

