

Spare Tire Rack, Polaris RZR XP® 1000 Instructions

hmfracing.com/equipment/polaris-rzr-xp-1000/spare-tire-rack-polaris-rzr-xp-1000/installation

Installation

1. Remove the (2) Stock Torx™ Bolts by the Left and Right **Stock Flag Mounts**.




2. Install the supplied Left and Right **Latch Mount Brackets** with the **Latch Mounts** facing the outside of the vehicle. **Do not tighten.**

3. Slide the **M8 x 20 Hex Bolts** through **1/4" Washers** then through the lower hole on the **Latch Mount Brackets**. See Figure 2. Reach around the back of the **Cargo Bed** and install the supplied **5/16" Fender Washers** and **(2) M8 Nylocs**. **Tighten all hardware.**



4. Install the supplied **Latches** onto the **Latch Mount Brackets** using the supplied **(4) 1/4-20 x 3/4" Hex Bolts** and **(4) #10 Washers** and tighten.

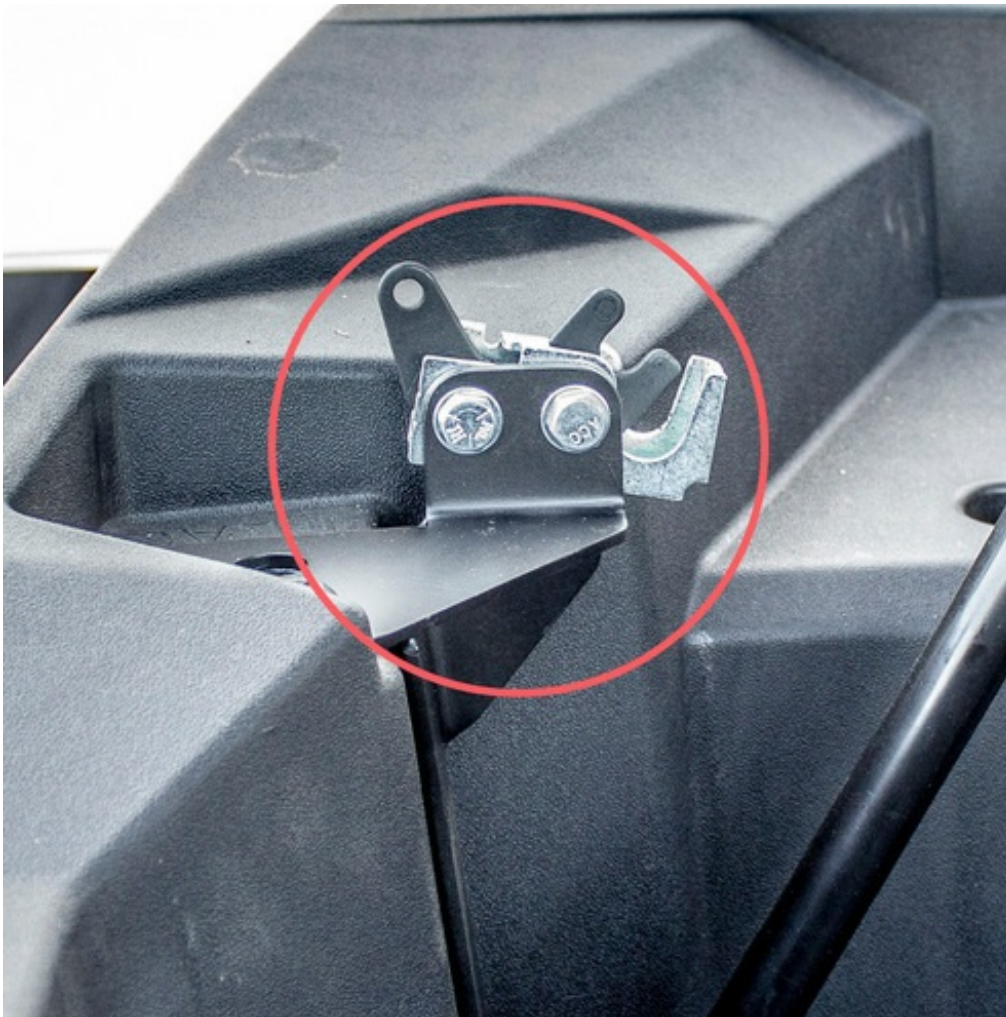

5. Install the supplied **(2) Ball Studs** using the **(2) 1/4" Washers** and **(2) M8 Nylocs**. **Make sure** the **Ball Studs** are facing the **inside** of the **Cargo Bed** and tighten.



6. Loosely install the **Pivot Tube Clamp** on the center of the **Rear Harness Bar** of the **RZR**.



7. Place the **Tire Rack** into the latched position. Then, align and install the **M10 x 100 Hex Flange Bolt** and **(2) 3/8" Washers** through the pivot point of the **Pivot Tube Clamp**.



8. Check the alignment of the **Tire Rack** and tighten all hardware.

9. Install the **Lift Struts** onto the **Ball Studs** of the **Tire Rack** by just pushing them on. Then, lift the **Tire Rack** and slide the **Lift Struts** onto the **Ball Studs** on the **Latch Mount Brackets**.



10. Close the **Tire Rack** and place a Spare Tire onto the **Tire Rack**.



11. Install the supplied **Nylon Strap** and **Ratchet** around the **Spare Tire** as shown in the image.

Discussion
