
EN	SKID PLATE INSTALLATION MANUAL
DE	MONTAGEANLEITUNG FÜR UNTERBODENSCHUTZ SYSTEM
RU	ИНСТРУКЦИЯ ПО УСТАНОВКЕ ЗАЩИТЫ АРОК




For: CFMOTO ZForce 950 Sport (2021-)

2444.8111.1


15 min

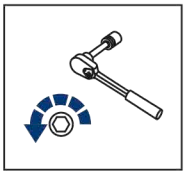


EN Regular fasteners
DE Originale montageteile
RU Штатный крепеж

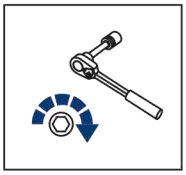


EN Regular fasteners
DE Originale montageteile
RU Штатный крепеж

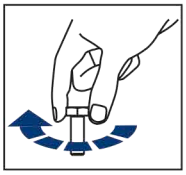


EN Screw a several turns
DE Für wenigen Umdrehungen befestigen
RU Вкрутить на несколько оборотов

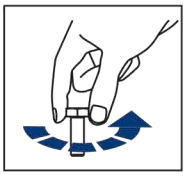

EN Loosen bolts
DE Bolzen lockern
RU Выкрутить на несколько оборотов

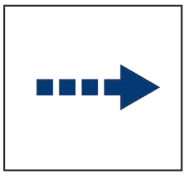


EN Movement Arrow
DE Bewegungsrichtung
RU Движение

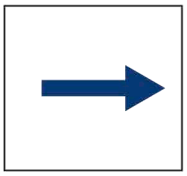



EN Location/Position Arrow
DE Amordrung/Positionsrichtung
RU Расположение




EN Screw Arrow
DE Drehungsrichtung
RU Поворот


 EN Ratchet DE Ratsche RU Трещётка	 S - 10; S - 13	 HEX S - 4; S - 5

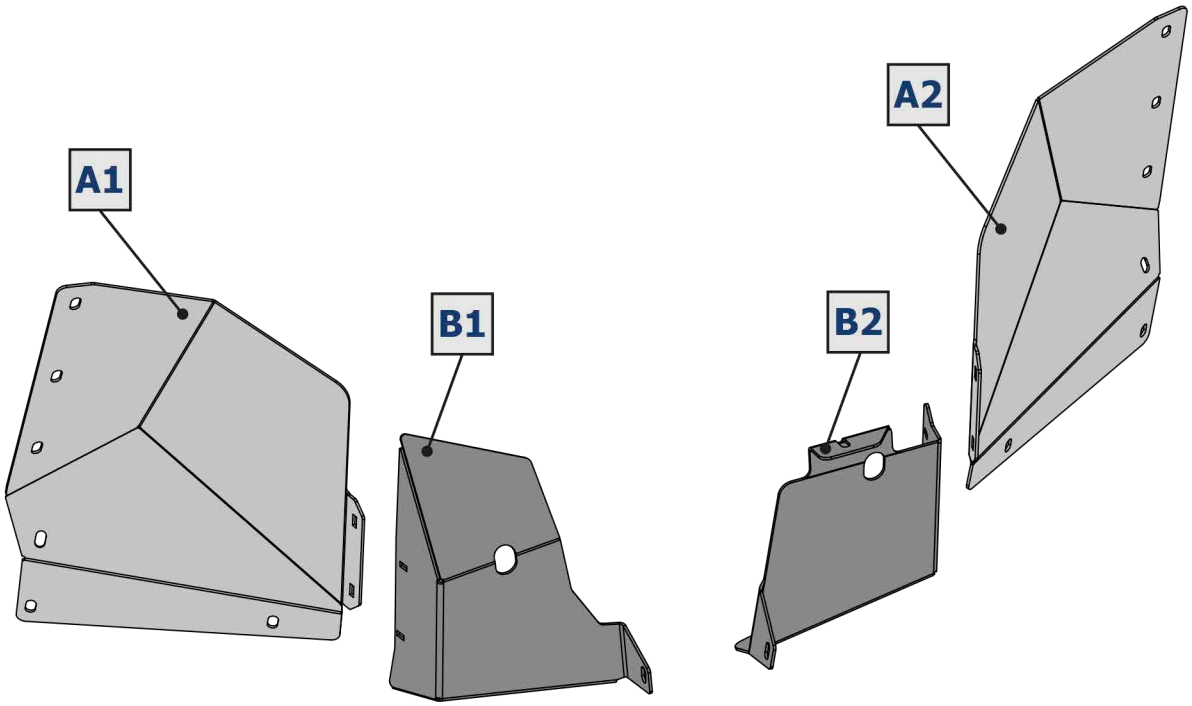



1  M6x16 x4	2  M8x20 x1	3  M8x50 x2	4  M6x25 x2	5  M8x25 x6	6  ø6 x8
7  ø8 x18	8  M6 x6	9  M8 x9			

PRE-INSTALLATION: LAY OUT COMPONENTS AND COMPARE TO LIST AND IMAGES. IMAGES MAY NOT PORTRAY THE FULL DETAIL OR EXACT SHAPE OF THE PARTS; HOWEVER, THEY REPRESENT PARTS THAT HAVE SAME OR SIMILAR FUNCTION.

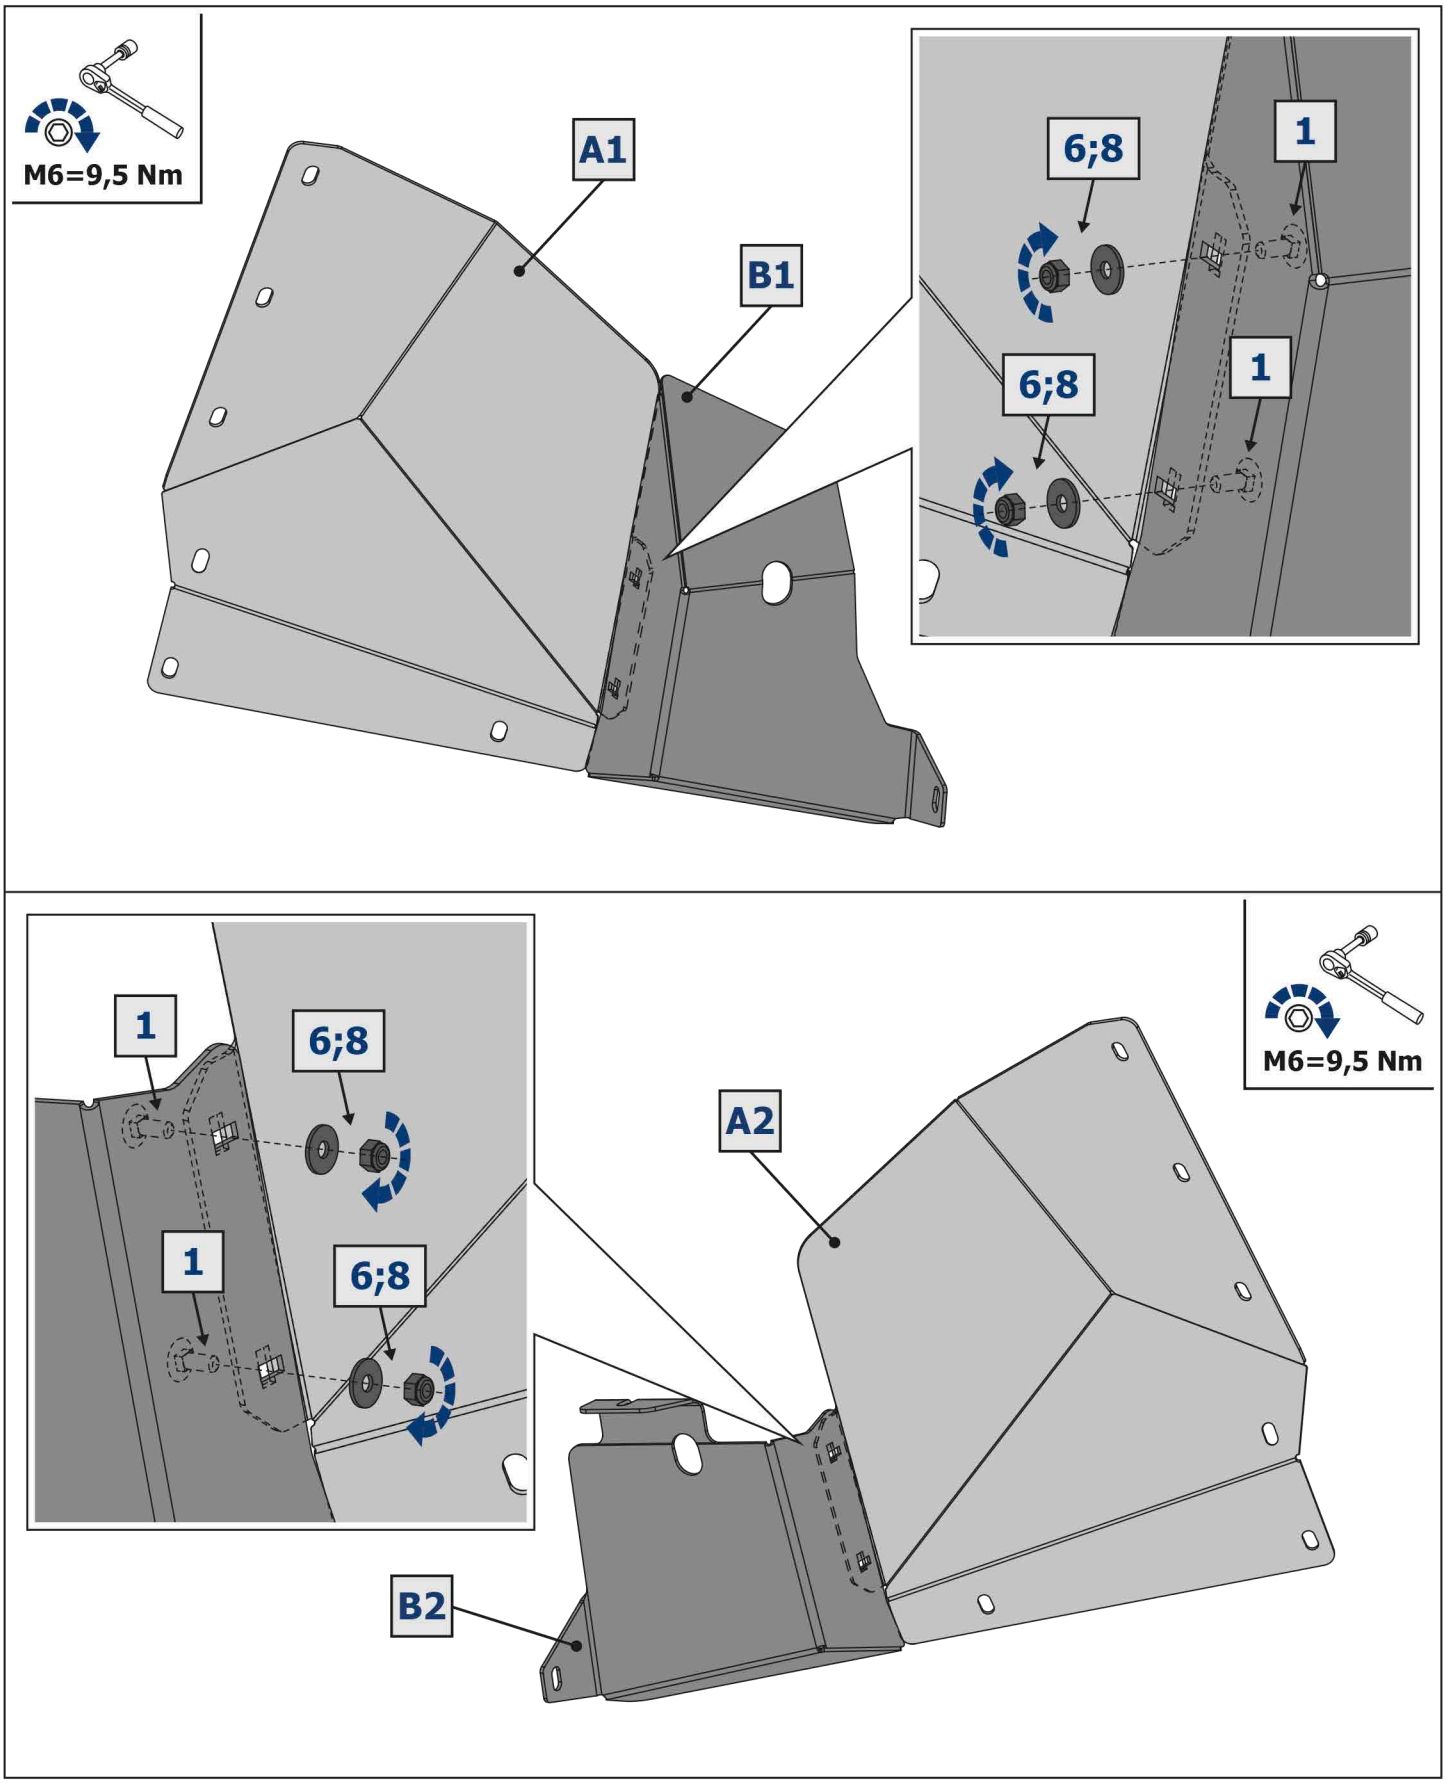

M6=9,5 Nm
A1
B1
6;8
1
6;8
1
1
6;8
1
6;8
A2
B2
M6=9,5 Nm

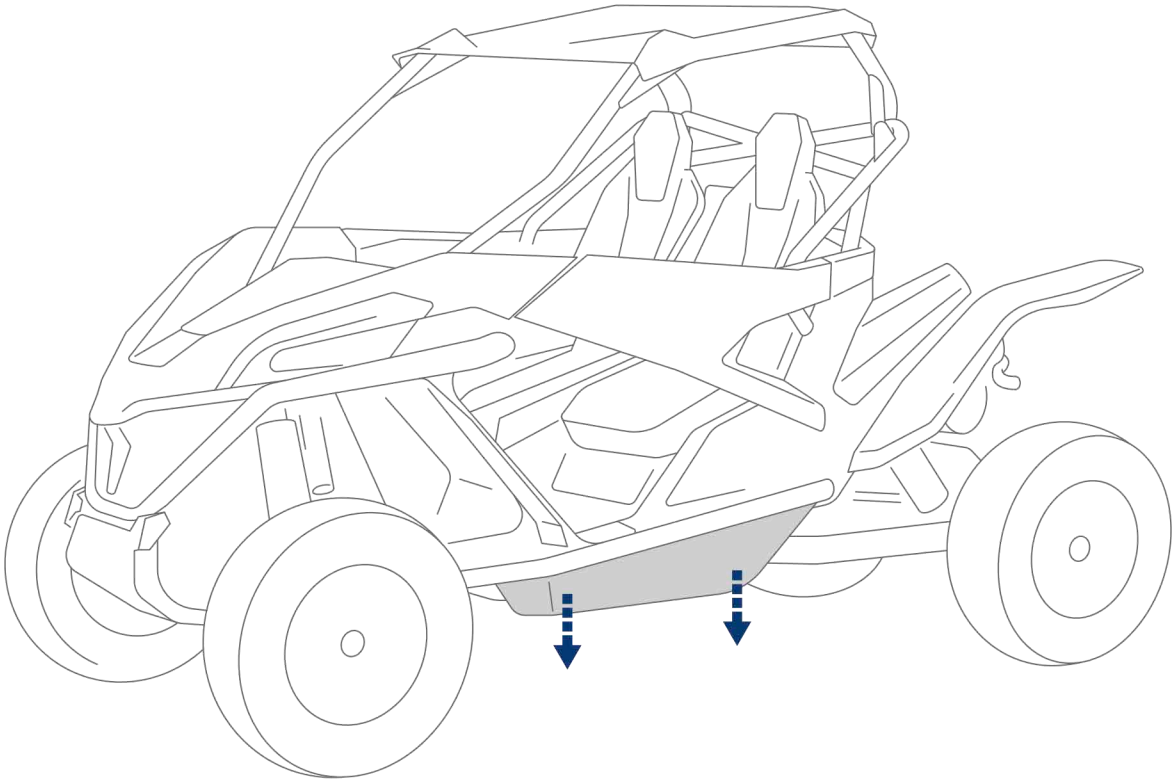

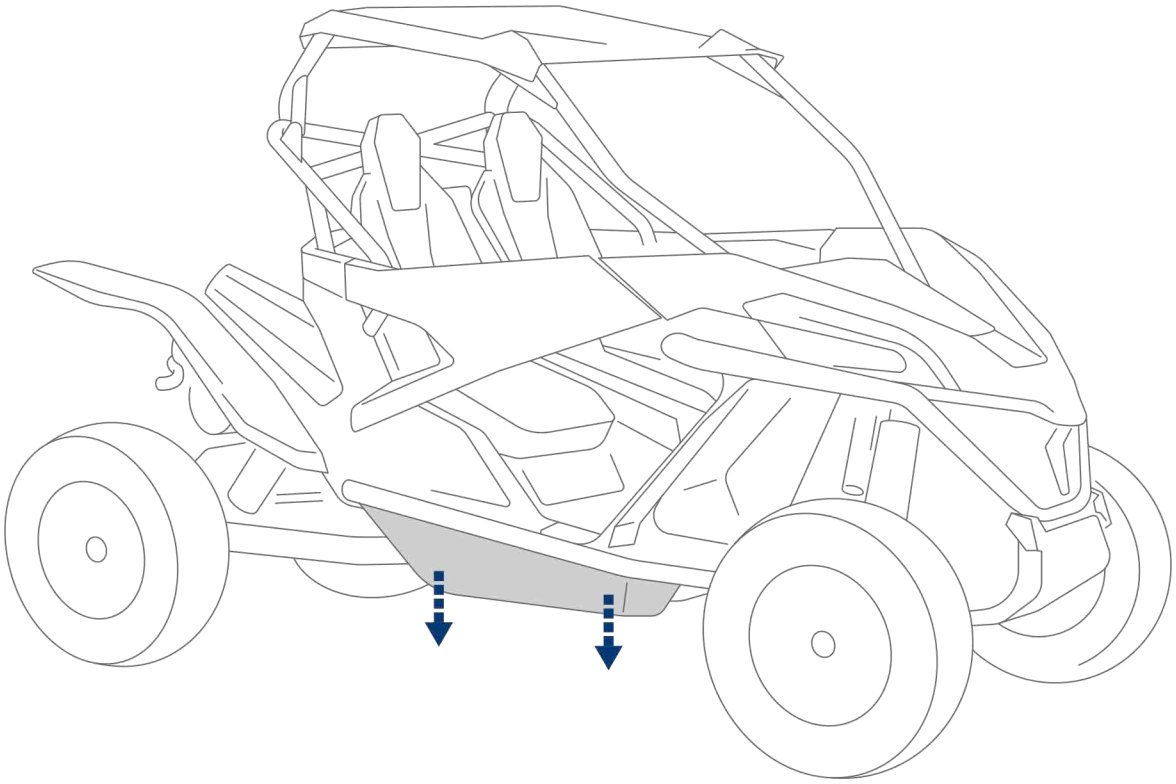


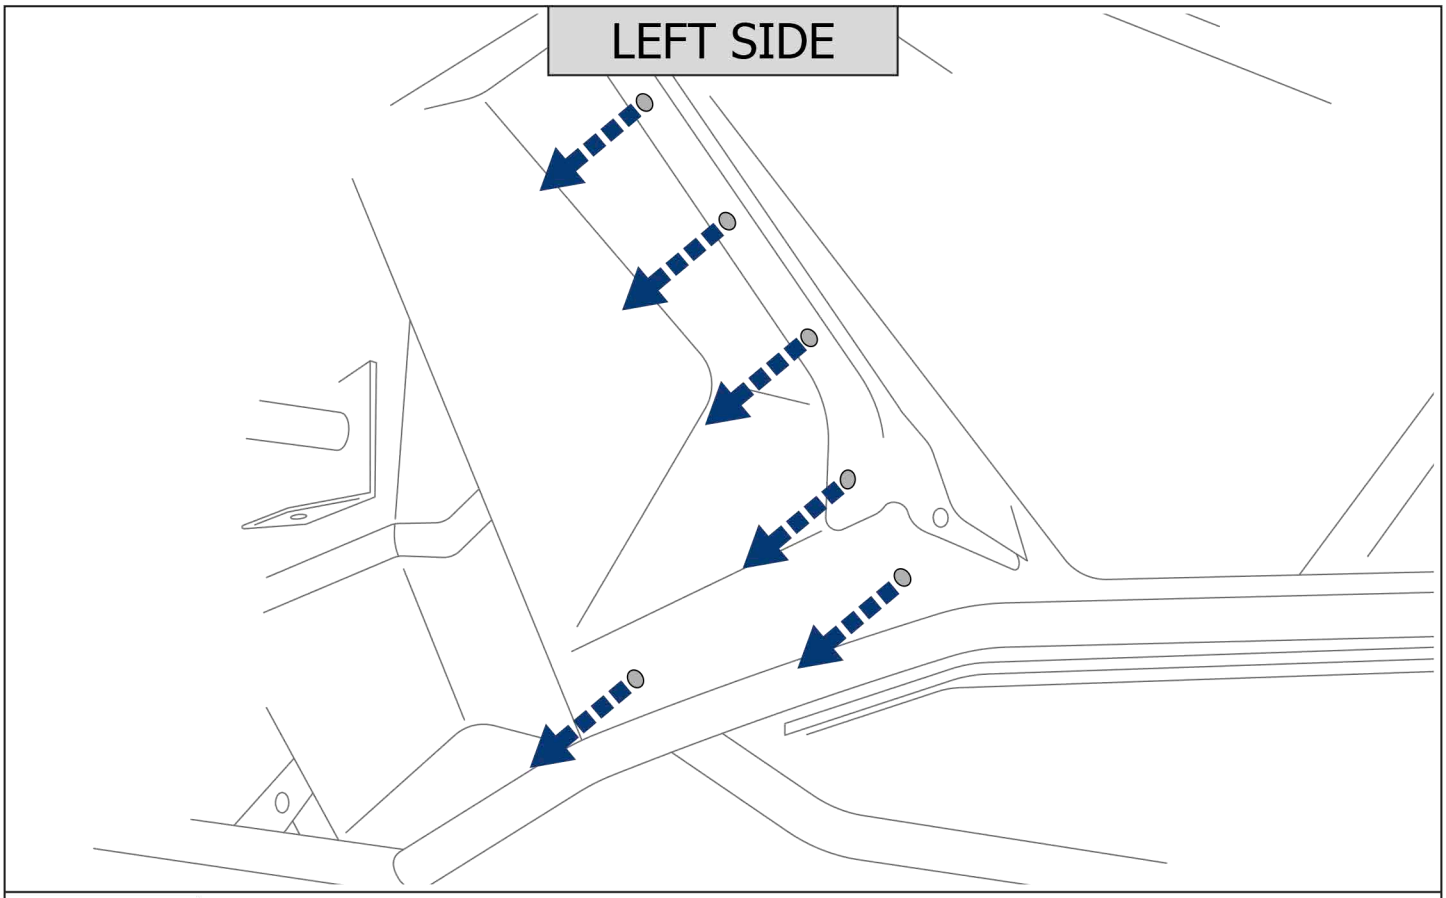

LEFT SIDE


M8=24 Nm
7;9
7;9
7;9
5;7
5;7
5;7

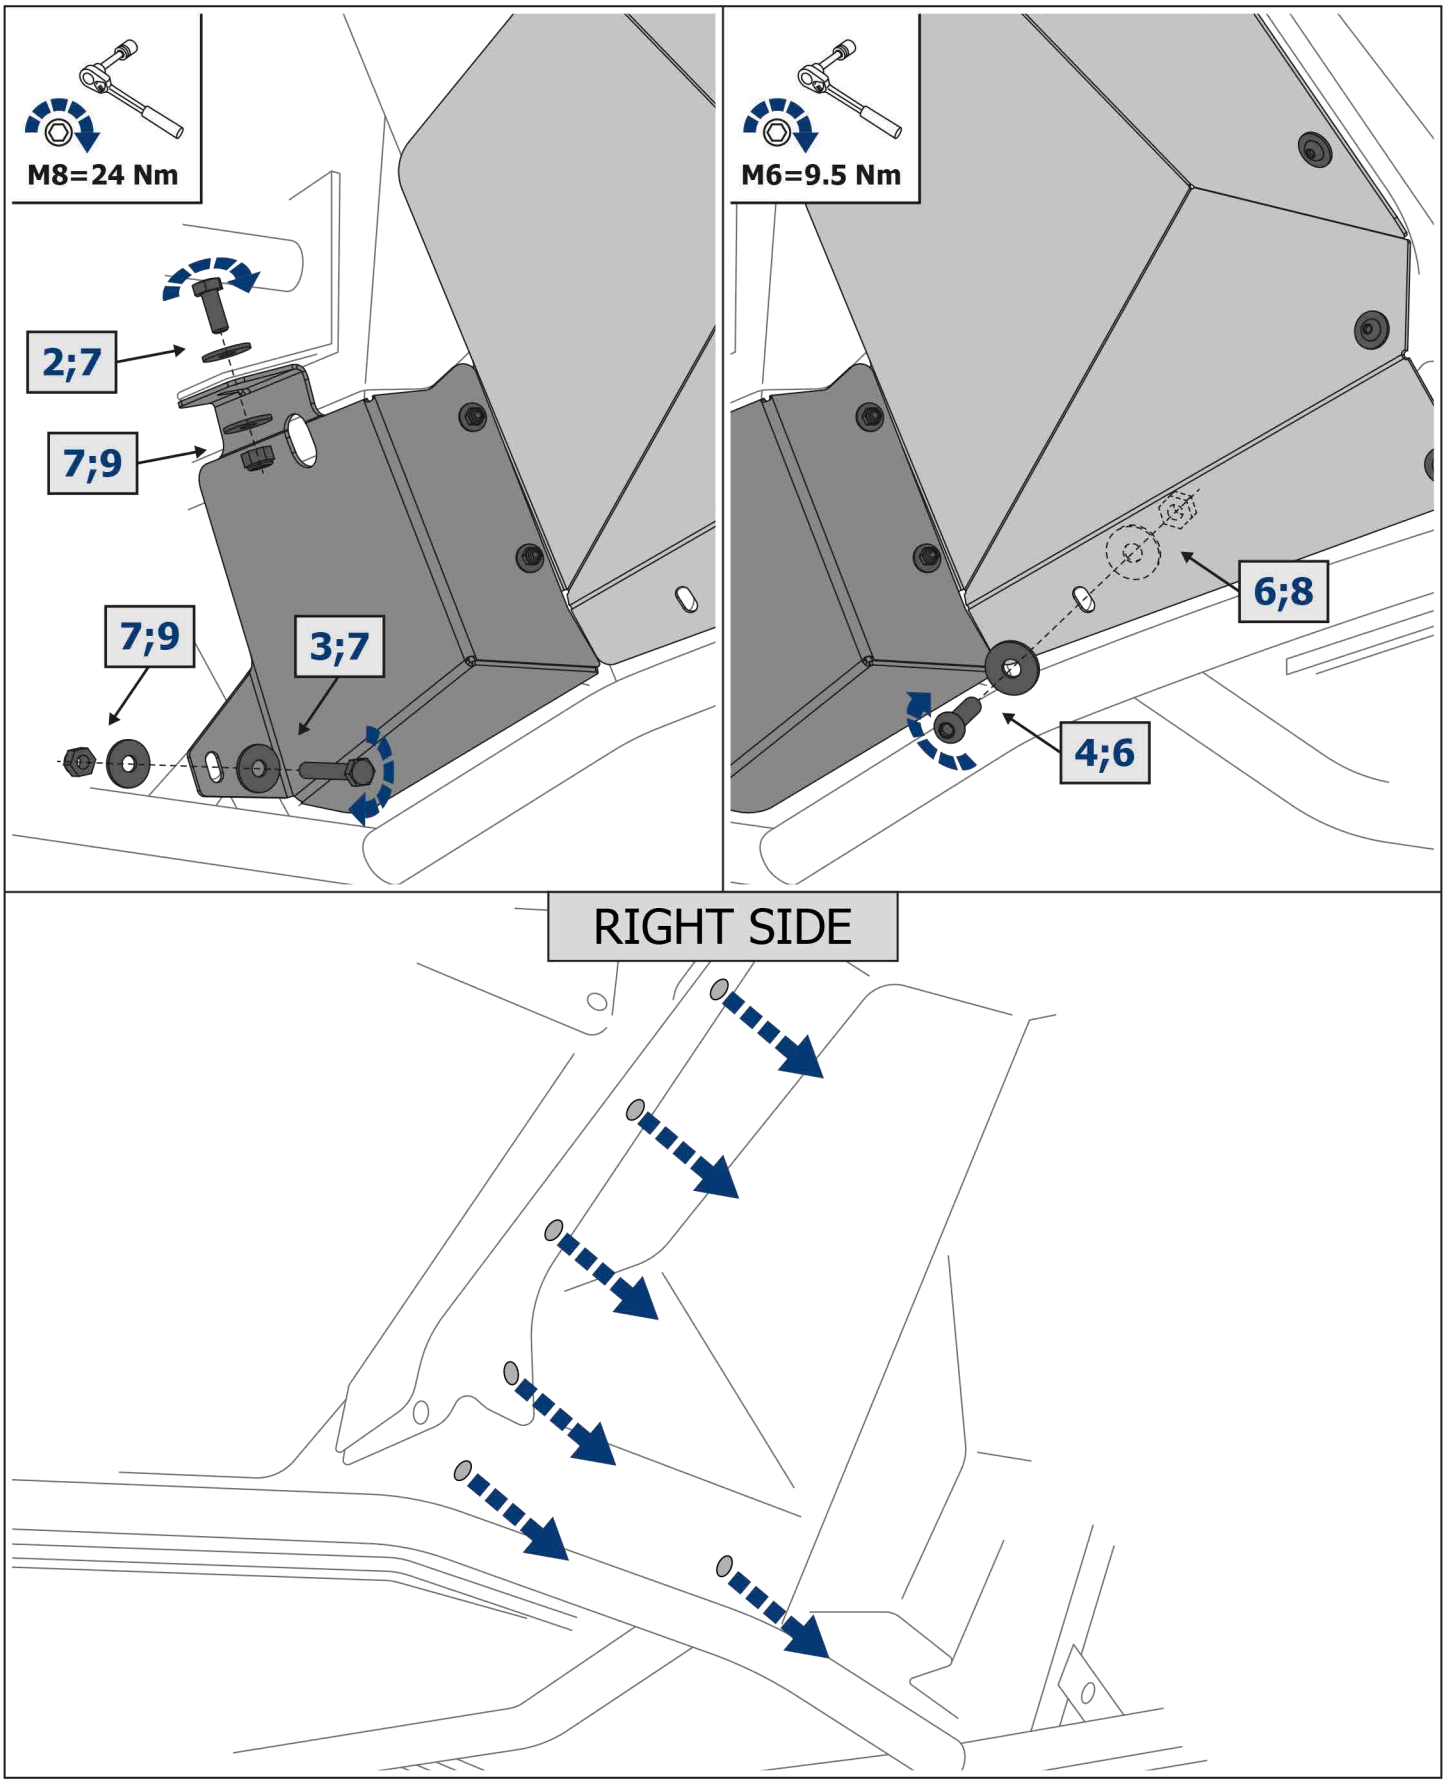
M8=24 Nm
2;7
7;9
7;9
3;7
M6=9.5 Nm
6;8
4;6
RIGHT SIDE


M8=24 Nm
7;9
7;9
7;9
5;7
5;7
5;7
M8=24 Nm
3;7
7;9
M6=9.5 Nm
6;8
4;6

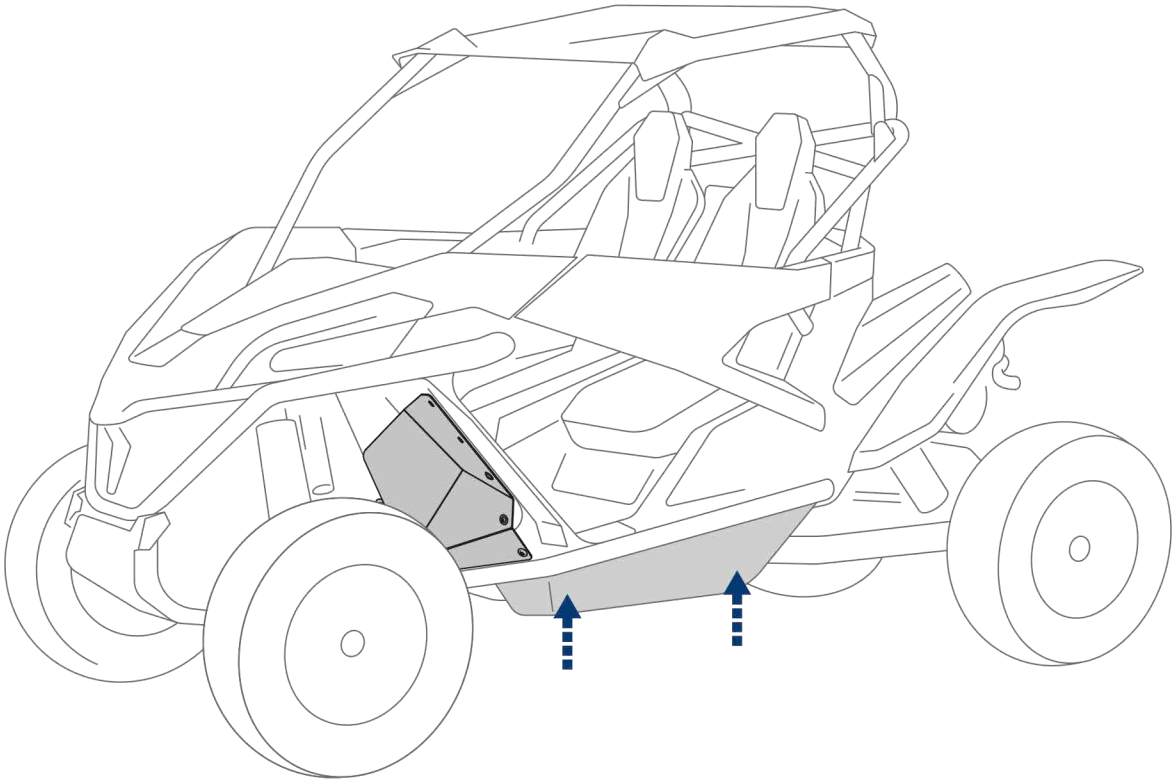

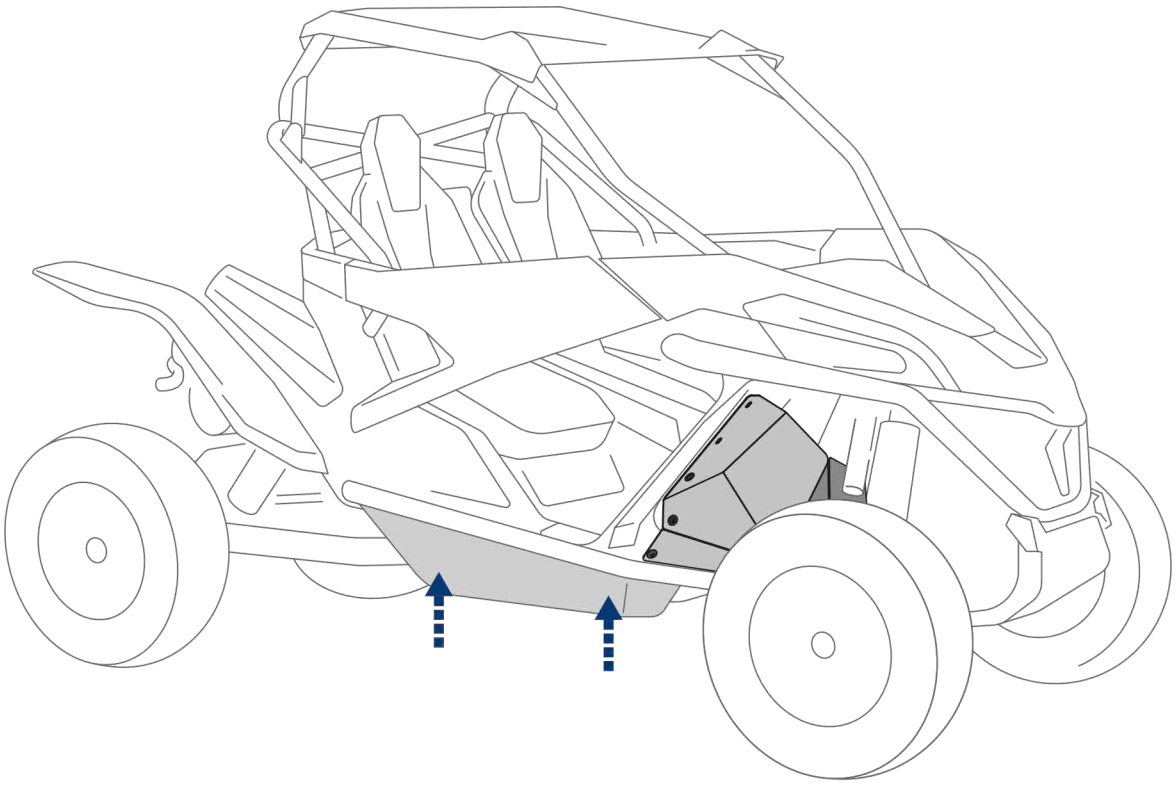

TIP: PERIODICALLY CHECK ALL HARDWARE AND RE-TIGHTEN IF NEEDED.